



LX HD Sit-Stand Desk Mount LCD Arm

 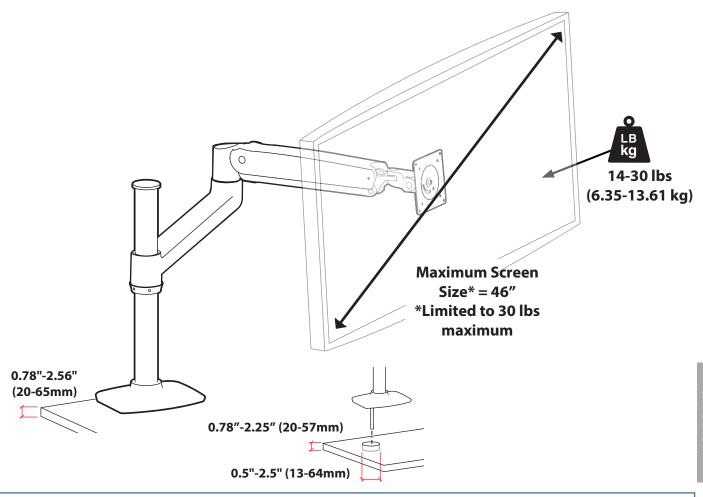


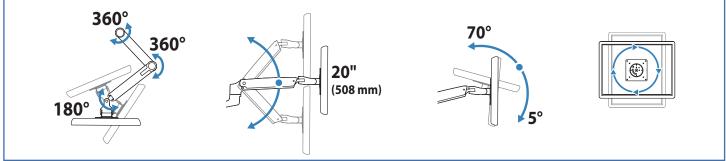

Tools Needed







For the latest User Installation Guide please visit: www.ergotron.com



User's Guide - English Guía del usuario - Español Manuel de l'utilisateur - Français Gebruikersgids - Deutsch Benutzerhandbuch - Nederlands Guida per l'utente - Italiano Användarhandbok - svenska ユーザーガイド: 日本語 用户指南 : 汉语

L E


www.ergotron.com

USA 1-800-888-8458 Europe +31 (0)33-45 45 600 China 400-120-3051

Safety




CAUTION: DO NOT rotate monitor past rear edge of desk. Doing so will create an unstable situation and may cause equipment damage or personal injury.

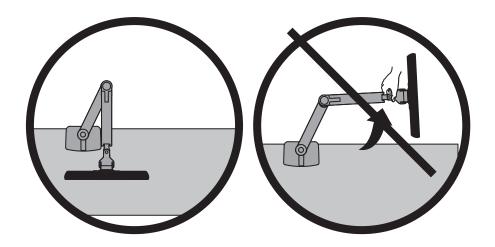



Important! You will need to adjust this product after installation is complete. Make sure all your equipment is properly installed on the product before attempting adjustments. This product should move smoothly and easily through the full range of motion and stay where you set it. If movements are too easy or difficult or if product does not stay in desired positions, follow the adjustment instructions to create smooth and easy movements. Depending on your product and the adjustment, it may take many turns to notice a difference. Any time equipment is added or removed from this product, resulting in a change in the weight of the mounted load, you should repeat these adjustment steps to ensure safe and optimum operation.

Components

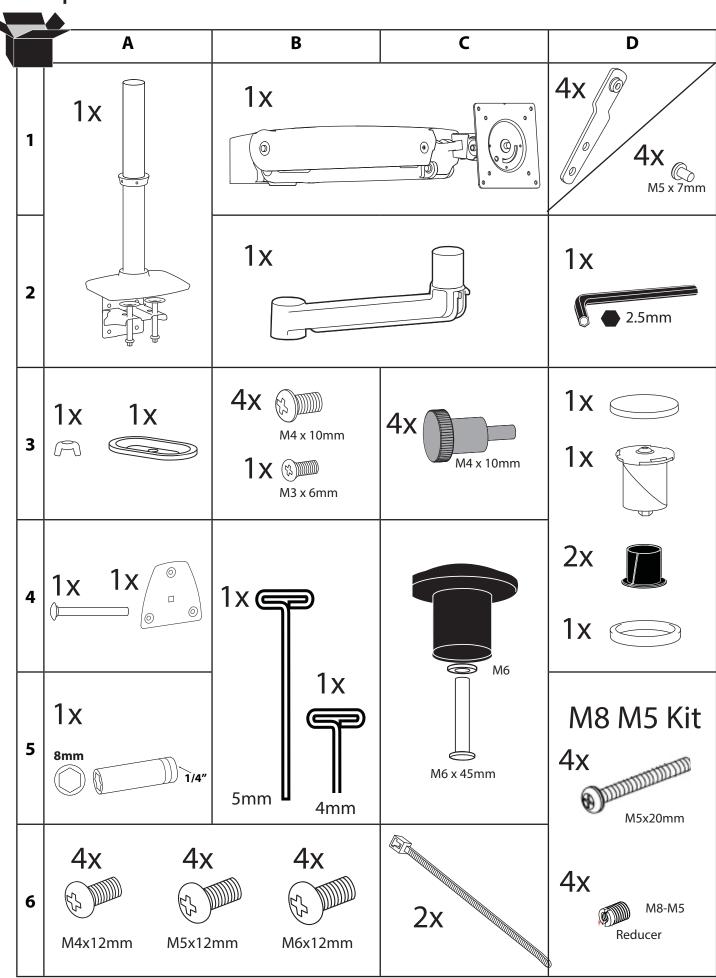

CLAMP GROMMET HOLE DESK THICKNESS a 0.78"-1.38" (20-35mm) 1.18"-2.56" (30-65mm) 4mm b 4mm 4mm 8mm 4mm 0 1x ()= d CAUTION: Bolt must be centered in hole.

2


Portrait / Landscape Options

OPTION i If you want full portrait/landscape rotation, skip to step 8 on the next page.


OPTION ii If you do not want your TV/Monitor to rotate all all, you can stop rotation by inseting


the set screw.



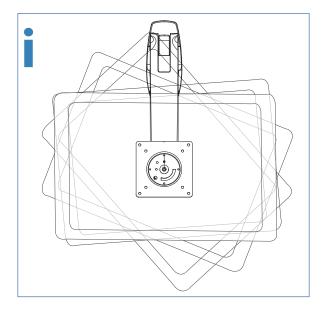



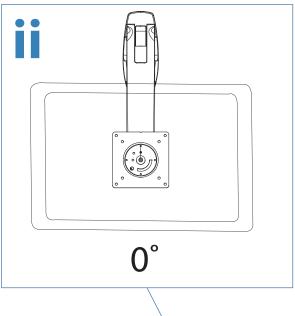


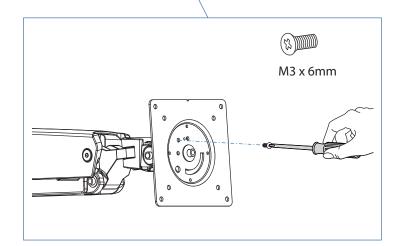

3 Check size of TV/Monitor hole pattern


TV/Monitor Hole Pattern Sizes


VESA Adapter Configurations

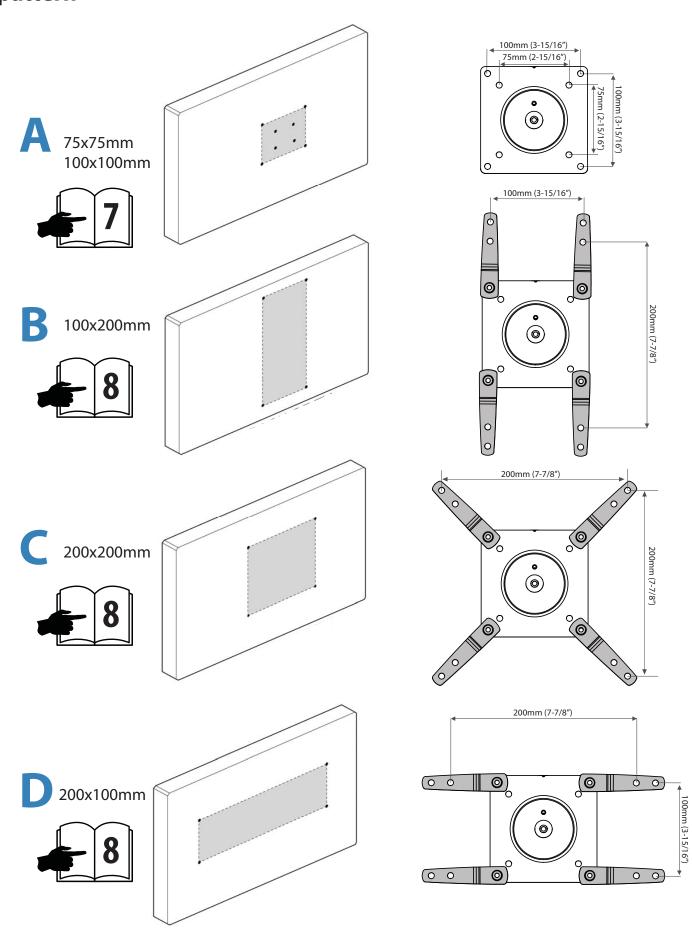


3

Mount Type A TV/Monitor to Arm

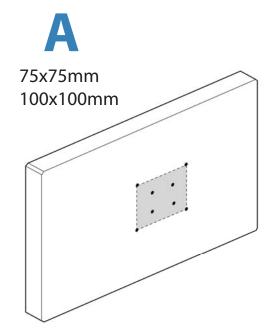


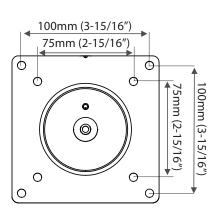




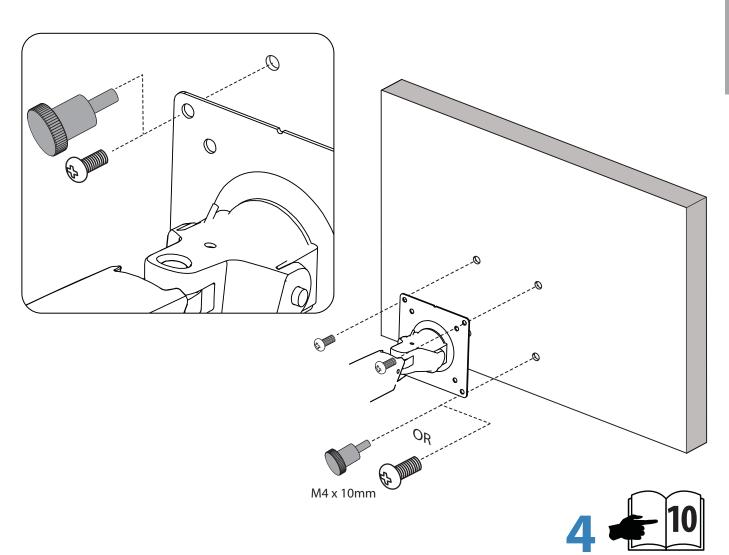


Mount VESA Adapters to Arm based on TV/Monitor hole pattern size (B, C, or D).

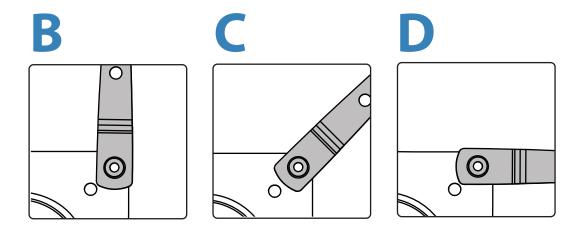

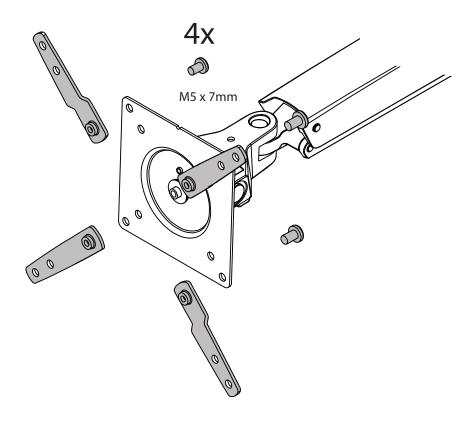


Mount Type B, C, or DTV/Monitor to Arm

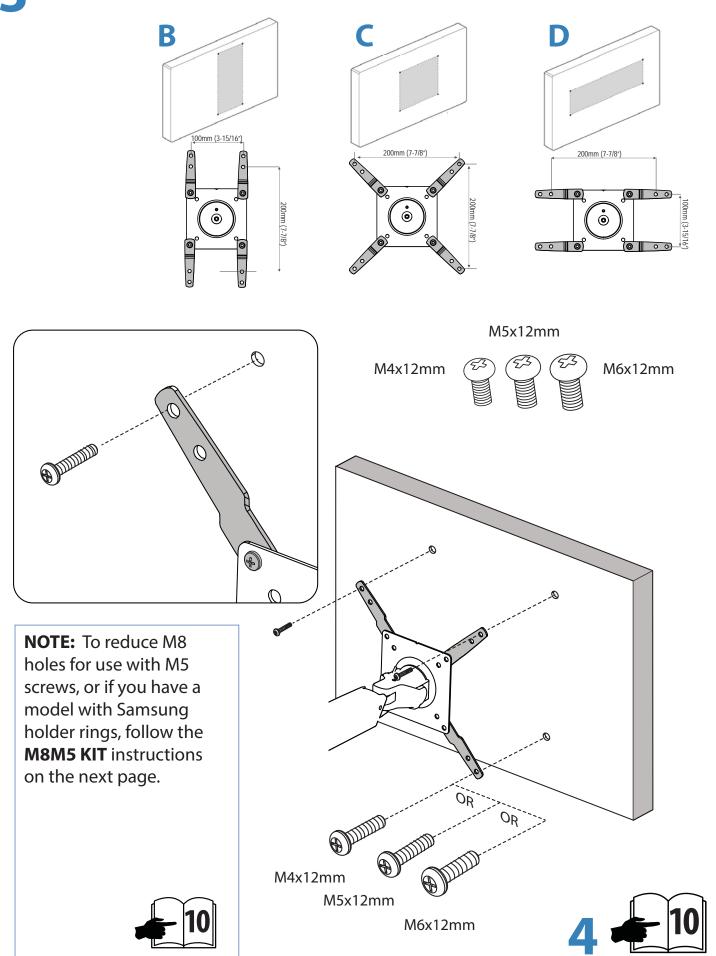


M8M5 KIT Instructions


NOTE: follow this step only if your TV/monitor has M8 holes which need to be reduced to M5 or for Samsung models using the holder ring.

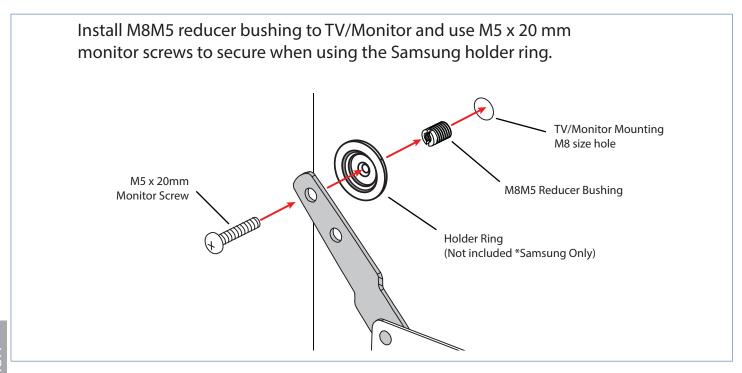

Mount extension and arm to pole.

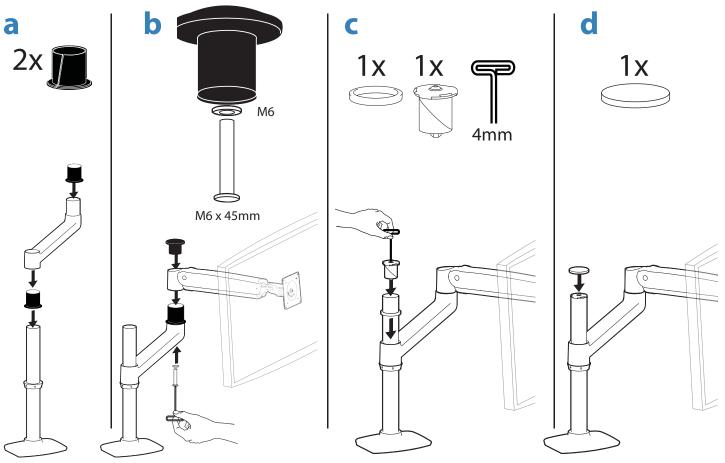

888-45-311-W-01 rev.F • 04/14

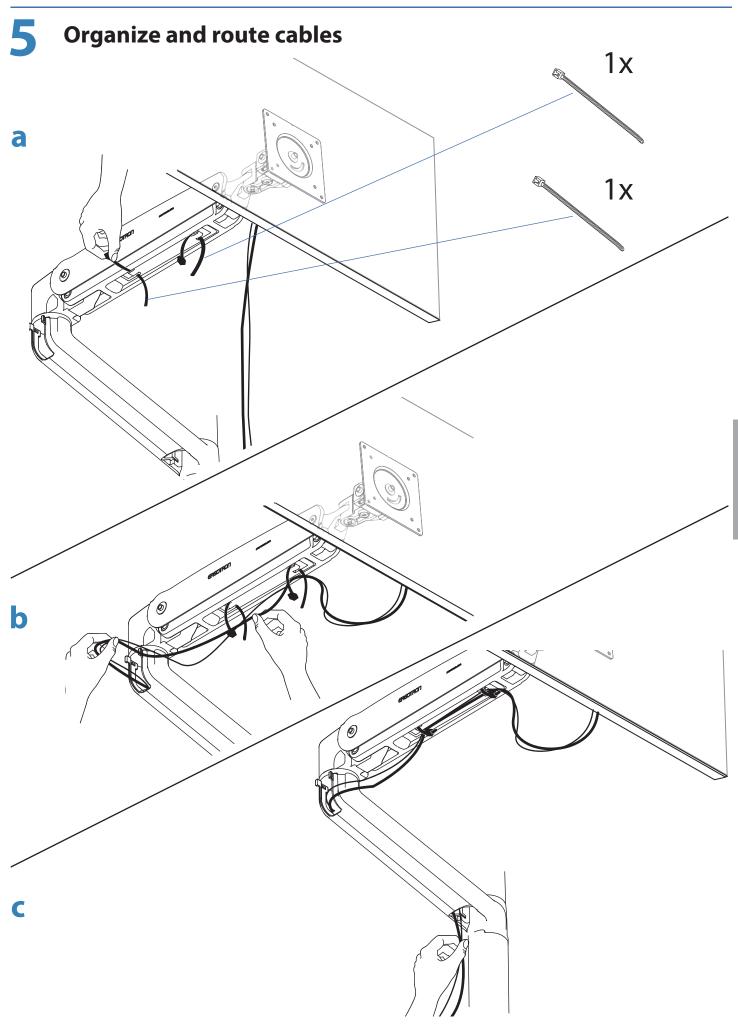




Adjustment Step

moved to the highest position! Failure to follow this instruction may result in serious personal injury and/or

Important! You will need to adjust this product after installation is complete. Make sure all your equipment is properly installed on the product before attempting adjustments. This product should move smoothly and easily through the full range of motion and stay where you set it. If movements are too easy or difficult or if product does not stay in desired positions, follow the adjustment instructions to create smooth and easy movements. Depending on your product and the adjustment, it may take many turns to notice a difference. Any time equipment is added or removed from this product, resulting in a change in the weight of the mounted load, you should repeat these adjustment steps to ensure safe and optimum operation.

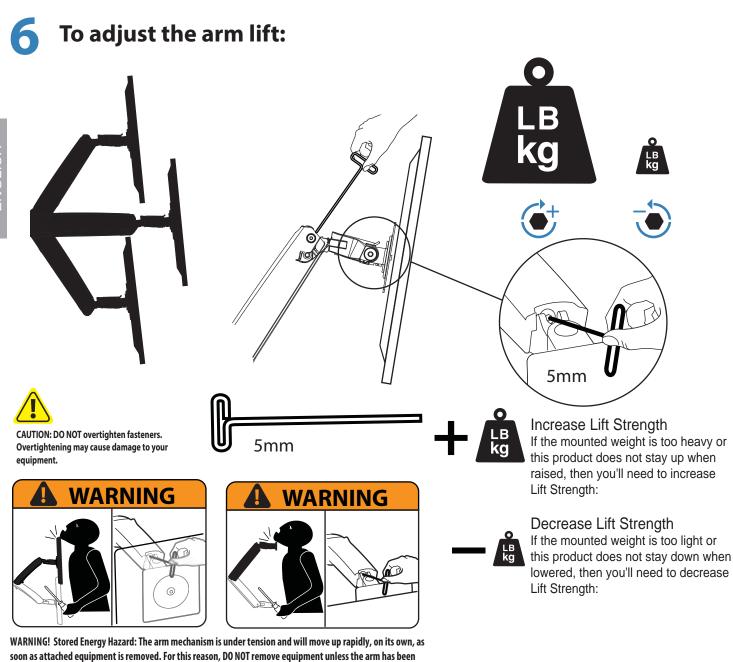


equipment damage!


this product does not stay down when lowered, then you'll need to decrease

Lift Strength:


7 To adjust the TV/monitor tilt:

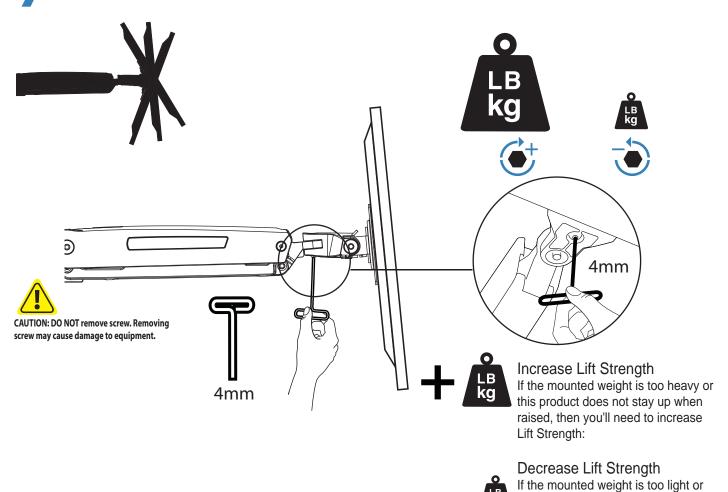

To adjust height on pole:

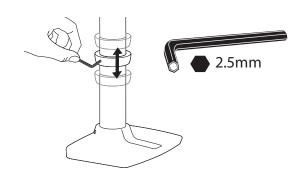

Set Your Workstation to Work For YOU!

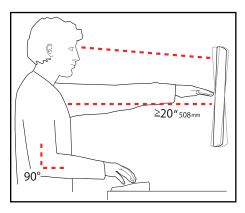

Learn more about ergonomic computer use at: www.computingcomfort.org

Height Position top of screen slightly below eye level.

Position keyboard at about elbow height with wrists flat.

Distance Position screen an arm's length from face—at least 20" (508mm).

Position keyboard close enough to create a 90° angle in elbow.

Angle Tilt screen to eliminate glare.

Tilt the keyboard back 10° so that your wrists remain flat.

To Reduce Fatigue

Breathe - Breathe deeply through your nose. Blink - Blink often to avoid dry eyes Break • 2 to 3 minutes every 20 minutes

• 15 to 20 minutes every 2 hours.

For service and warranty visit www.ergotron.com

For local customer care phone numbers visit: http://contact.ergotron.com

ERGOTRON®

While Ergotron, Inc. makes every effort to provide accurate and complete information on the installation and use of its products, it will not be held liable for any editorial errors or omissions (including those made in the process of translation from English to another language), or for incidental, special or consequential damages of any nature resulting from furnishing this instruction and performance of equipment in connection with this instruction. Ergotron, Inc. reserves the right to make changes in the product design and/or product documentation without notification to its users. For the most current product information, or to know if this document is available in languages other than those herein, please contact Ergotron. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of Ergotron, Inc.,1181 Trapp Road, Eagan, Minnesota, 55121, USA Patents Pending and Patented U.S. & Foreign. Ergotron is a registered trademark of Ergotron, Inc.

Americas Sales and

Corporate Headquarters **EMEA Sales**

St. Paul, MN USA (800) 888-8458 +1-651-681-7600 www.ergotron.com sales@ergotron.com Amersfoort, The Netherlands +31 33 45 45 600 www.ergotron.com info.eu@ergotron.com

APAC Sales Tokyo, Japan

Worldwide OEM Sales

www.ergotron.com apaccustomerservice@ergotron.com

www.ergotron.com