 


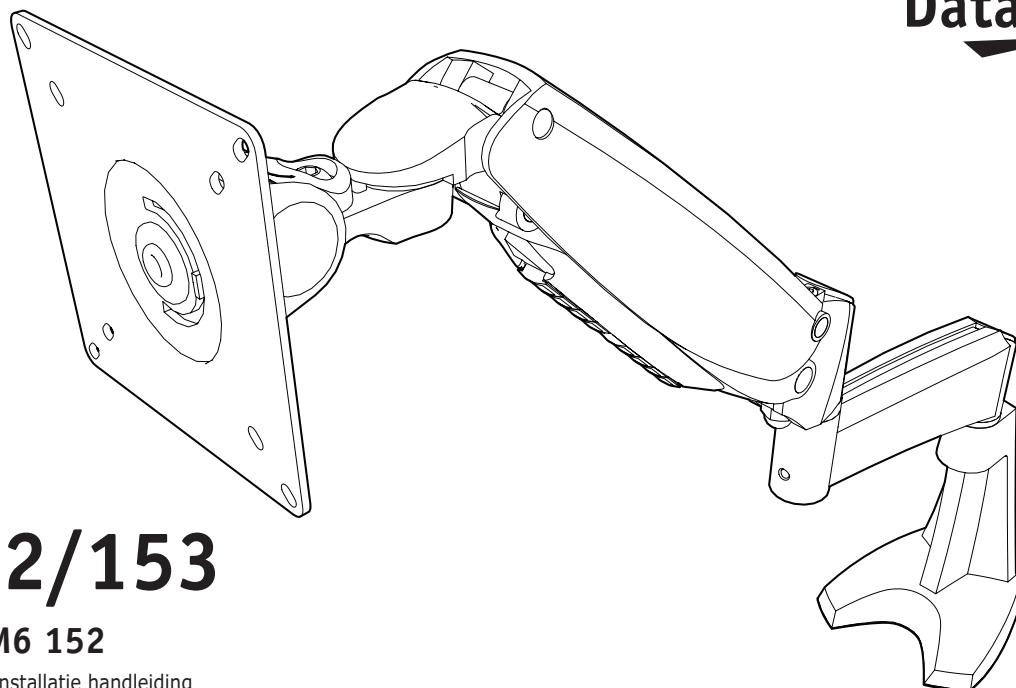

57.152/153

 
ViewMaster M6 152

Installation manual / Installatie handleiding
Manuel d'installation / Installations-handbuch
Manuale d'installazione / Manual de instalación


www.dataflex-int.com














1.0













Parts/Onderdelen/Pièces/Teile/Parti/Partes



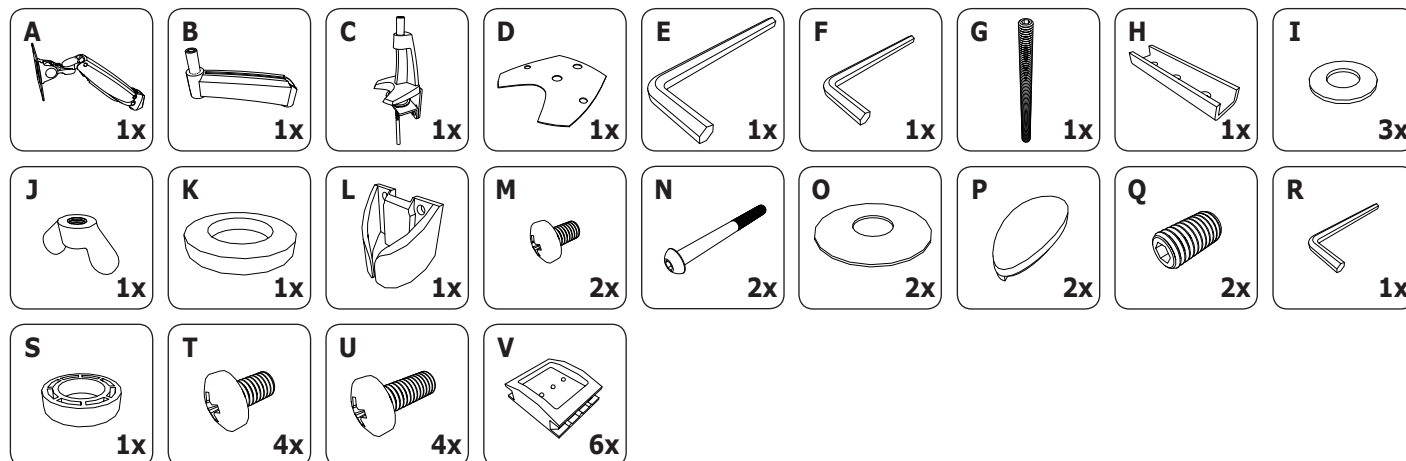


                             Required tools/Benodigd gereedschap/Outils requis/Benötigtes Werkzeug/Strumenti necessari/Herramientas necesarias

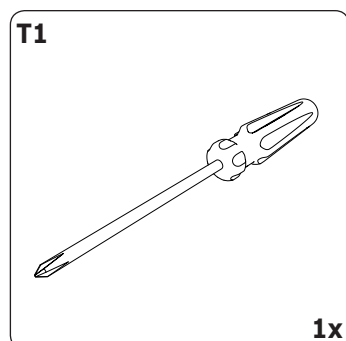

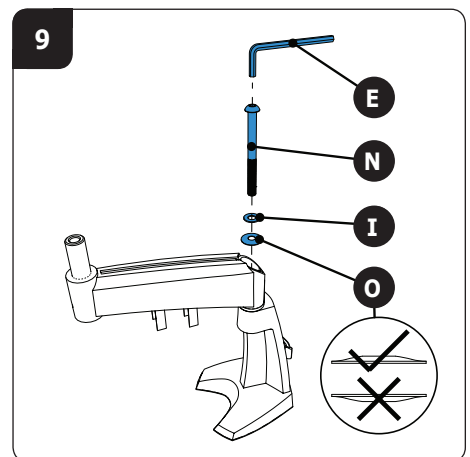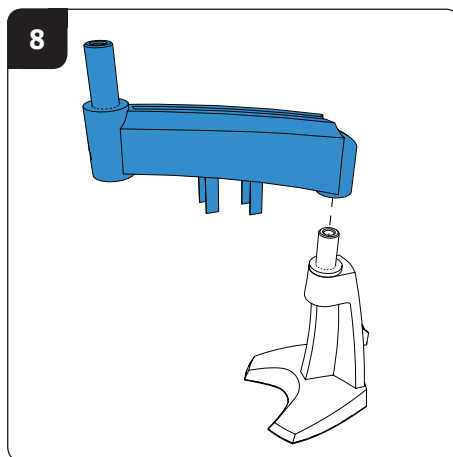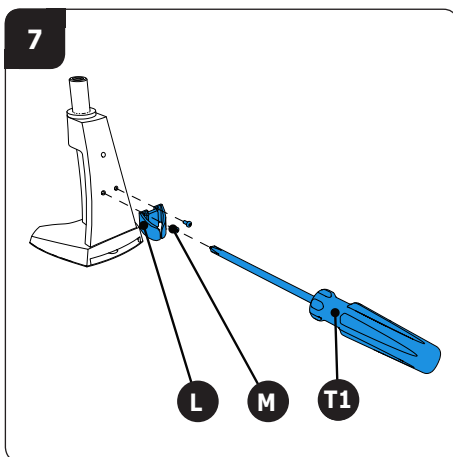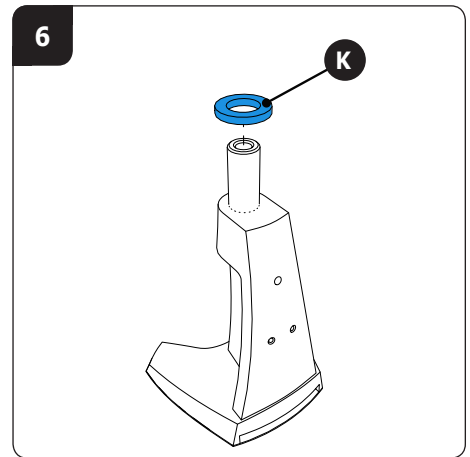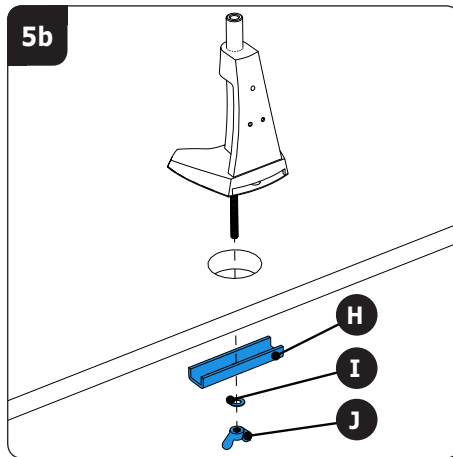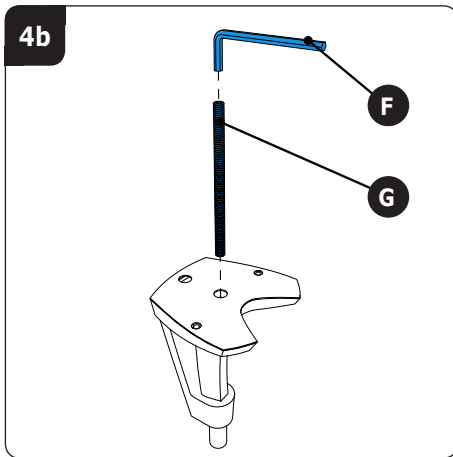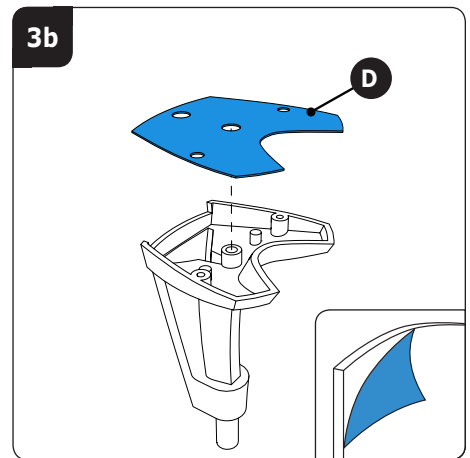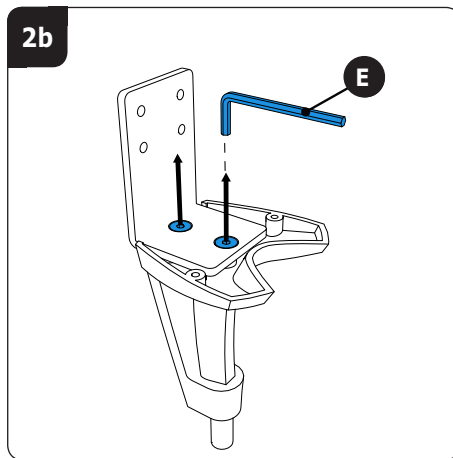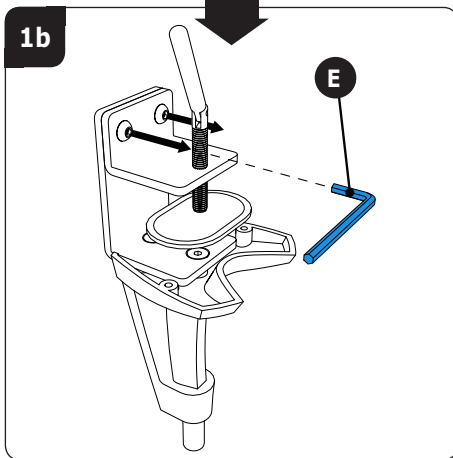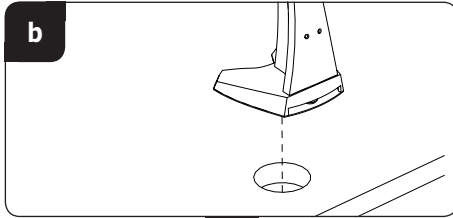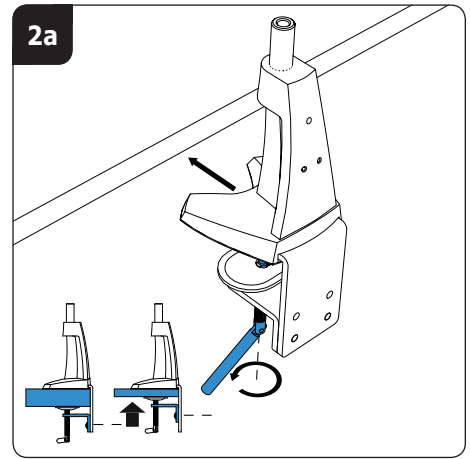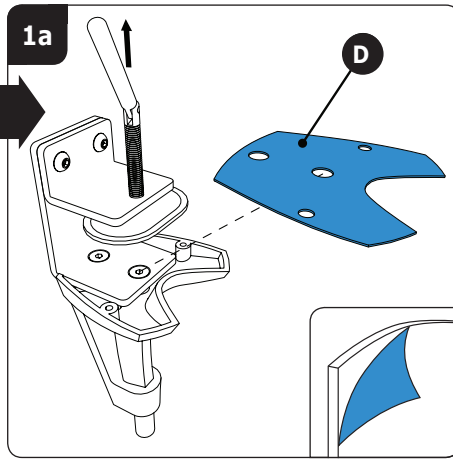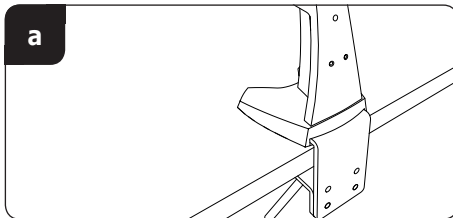

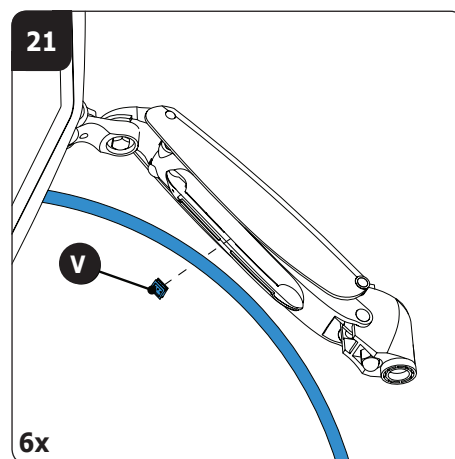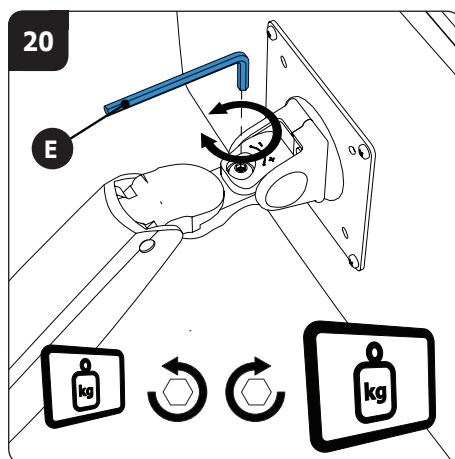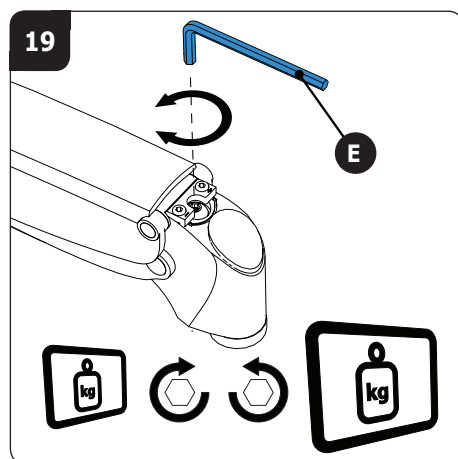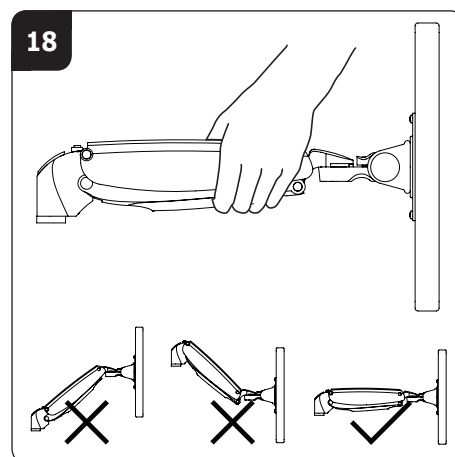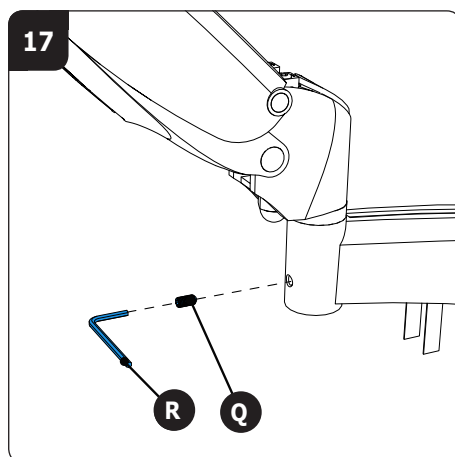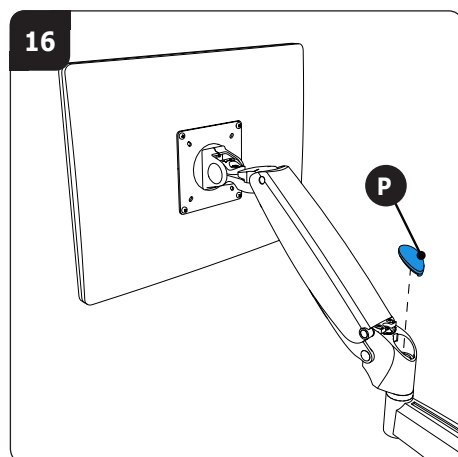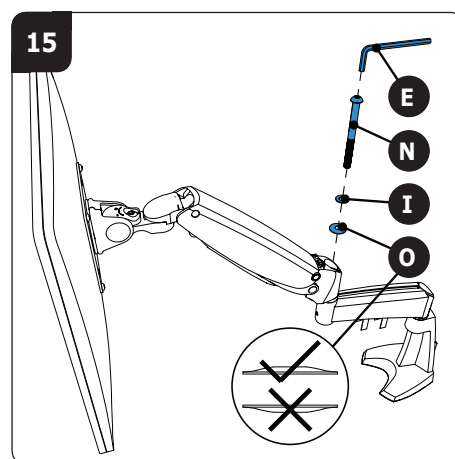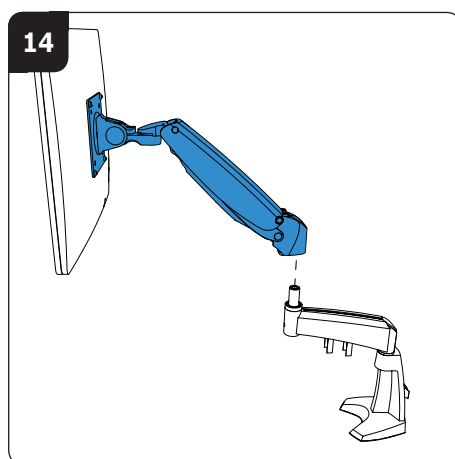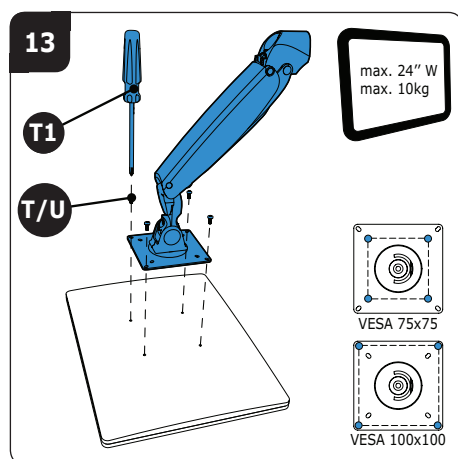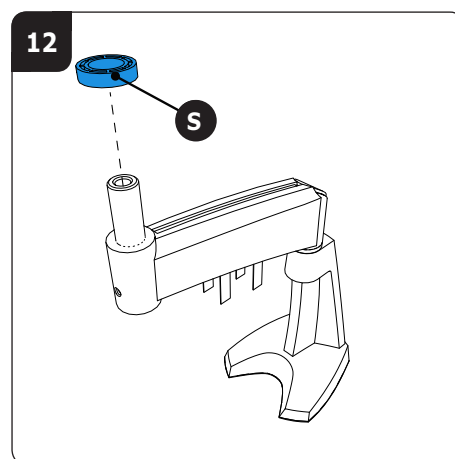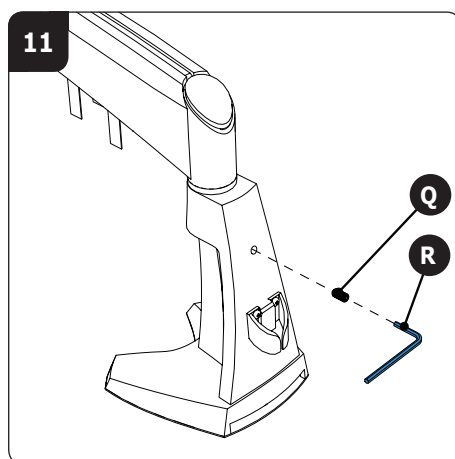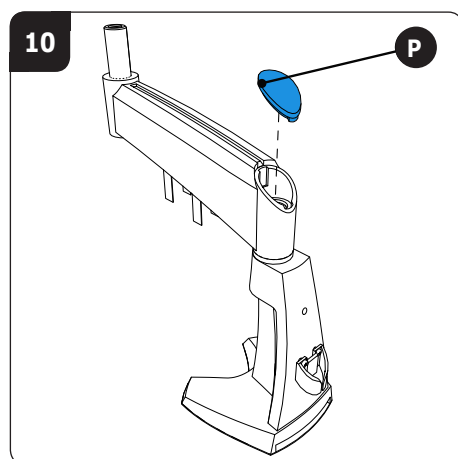

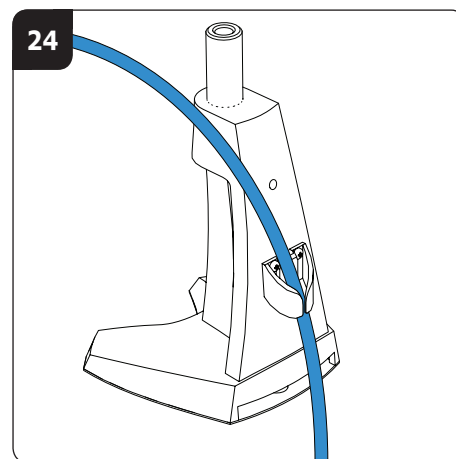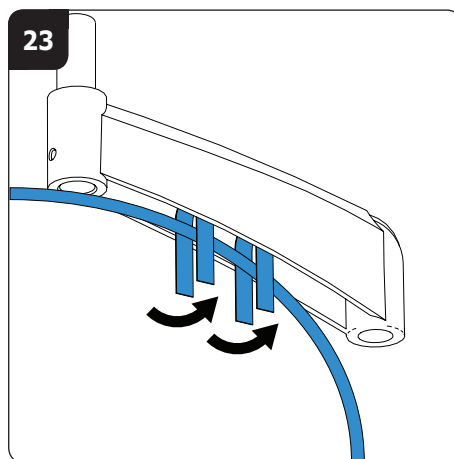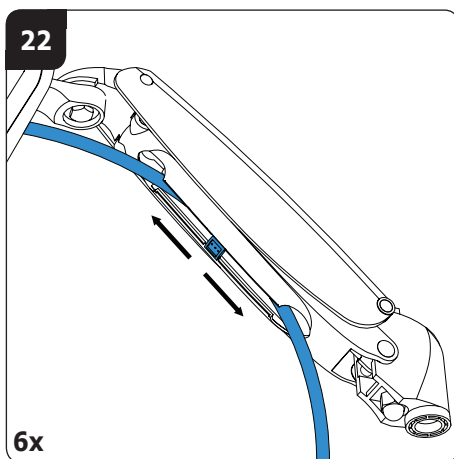

Dataflex International BV
P.O. Box 713
2920 CA Krimpen a/d IJssel
The Netherlands

info@dataflex-int.com

Copyright © 2011 - Dataflex International BV, The Netherlands



Dataflex International BV is certified ISO 9001:2008

www.dataflex-int.com