

# FRITZ!DECT 400

## Technical specifications

### Highlights at a glance

- Button for convenient operation of FRITZ! Smart Home devices
- Switches FRITZ! Smart Home actuators and groups wirelessly (for example, you can turn lights on/off)
- Ideal with the FRITZ!DECT 200 and FRITZ!DECT 210
- Flexible - portable or can be mounted with a wall bracket
- Easy to set up with your FRITZ!Box
- Automatic updates with new features
- Optimized for use with all FRITZ!Box models with FRITZ!OS 7.01 or higher



## Technical specifications

### Features

- A smart addition to your high-tech home
- Manage and switch multiple FRITZ!DECT 200 and/or FRITZ!DECT 210 devices
- Uses the DECT ULE wireless communication standard to connect to other devices
- Acoustic feedback as confirmation of registration
- LED response indicator confirms when button has been pressed

### Package contents

- FRITZ!DECT 400

- Quick guide
- Wall mount
- 2 x adhesive strips
- Battery (CR123A)

## Device properties

- Dimensions (W x H x D): 52 x 52 x 24 mm
- Weight: 51g (antennae included)
- Batteries: 1 x CR123A / 3V
- Wireless standard: DECT
- Wireless range: up to 40 meters indoors
- Ready for use at an ambient temperature of 0°C to 40°C

## Installation

- You can mount the FRITZ!DECT 400 with the adhesive strips supplied
- You can also place the button wherever you want, without fixing it

## System Requirements

- A FRITZ!Box with an integrated DECT base station
- FRITZ!OS 7.01 and higher

## Article number

- 20002864