



# Poly Documentation

Copyright © 2022, Plantronics, Inc. All rights reserved. No part of this document may be reproduced, translated into another language or format, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Polycom, Inc  
6001 America Center Drive

San Jose, CA 95002

USA

# Initialize the Poly Studio USB Device Using the Setup Wizard

When you start up the Poly Studio USB device for the first time, or after you factory reset the system, the setup wizard leads you through the minimum configuration steps.

## Prerequisite

Ask your network administrator for the provisioning server used in your deployment before you choose the **Server Type**.

---

**Note** If you select **Auto** provisioning mode, make sure that you already have the provisioning server address, user name, and password in your DHCP option 66 or 150. For example, `https://username:password@company.com`.

---

## Procedure

- 1 Connect the Poly Studio USB device to your computer, then select the Poly Studio USB video bar tile from your Polycom Companion.
- 2 Enter the admin password in the **Password** field (the default password is Polycom12#\$).
- 3 Accept the *End User License Agreement*, and click **Sign In**.
- 4 Change the default password:
  - Select the **Simple Password** check box to enter a simple password.
  - Enter a password that adheres to the on-screen requirements.
- 5 Select **Confirm**.
- 6 Select your country, and select **Next**.
- 7 **Optional:** Change the device name, or select **Skip**.
- 8 **Optional:** Configure Wi-Fi network settings, or select **Skip** to ignore the settings.

Option	Description
Wi-Fi Status	Selects <b>On</b> to enable the Wi-Fi function.
Wi-Fi List	Shows a list of available Wi-Fi networks.
Autoconnect	Selects <b>On</b> to connect to the specified Wi-Fi automatically when it's available

Option	Description
Join Other Network	Specifies the network name manually in the SSID field.

**9 Optional:** Select **Skip** to ignore provisioning server settings, or select **Provisioning Mode** and choose one of the following options:

- **Disable:** Disables the provisioning mode.
- **Auto:** Gets the provisioning server URL from your DHCP option 66 or 150.
- **Manual:** Configure the following parameters:

Parameter	Description
Server Type	Select a server type from the drop-down list: Choose <b>Polycom Provisioning Services</b> for PDMS-E or Polycom RealPresence Resource Manager. Choose <b>HTTPS Server</b> and <b>FTPS Server</b> for your own provisioning server.
Server Address	Specifies the server address
User name and Password	Specifies the user name and password to log in to the provisioning server

**10** Select **Finish**.

#### Related Topics

[Configuring Poly Studio Using Polycom Companion](#)