



Cisco Wireless IP Phone 882x Series Accessory Guide

First Published: August 25, 2016

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The following information is for FCC compliance of Class A devices: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

The following information is for FCC compliance of Class B devices: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment causes interference to radio or television reception, which can be determined by turning the equipment off and on, users are encouraged to try to correct the interference by using one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications to this product not authorized by Cisco could void the FCC approval and negate your authority to operate the product

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <http://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2016 Cisco Systems, Inc. All rights reserved.



CONTENTS

CHAPTER 1

Accessories for Your Cisco Wireless IP Phone 1

- Supported Accessories 1
- Accessory Guidelines 1
- Documentation, Support, and Security Guidelines 2
 - Cisco Wireless IP Phone 882x Series Documentation 2
 - Cisco Product Security Overview 2

CHAPTER 2

Cisco Accessories 3

- Batteries 3
- Cisco Wireless IP Phone 8821 AC Power Adapter 4
 - Prepare the Power Adapter 4
 - Charge the Battery with the AC Power Supply 5
- USB Cable 6
 - Charge the Battery with the USB Cable and a USB Port on Your Computer 6
- Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger 7
 - Set Up the Desktop Charger 8
 - Charge Your Phone with the Desktop Charger 8
 - Charge Your Spare Battery with the Desktop Charger 10
- Cisco Wireless IP Phone 8821 and 8821-EX Multi Charger 10
 - Set Up the Multicharger 11
 - Install the Multicharger Wall Mount Kit 11
 - Charge Your Phone with the Multicharger 13
 - Charge Your Spare Battery with the Multicharger 14
- Carry Cases 14
- Other Accessories 16
- Cisco Accessory Part Numbers 17
- Desktop Charger Specifications 20
- Multicharger Specifications 22

CHAPTER 3

Third-Party Accessories 25

Third-Party Accessories Overview 25

Headsets 25

Bluetooth Wireless Headsets 25

Headset Choices 25



CHAPTER 1

Accessories for Your Cisco Wireless IP Phone

- [Supported Accessories, page 1](#)
- [Accessory Guidelines, page 1](#)
- [Documentation, Support, and Security Guidelines, page 2](#)

Supported Accessories

You can use a number of accessories with your Cisco Wireless IP Phone 882x Series phone. Some accessories are Cisco products and other accessories are third-party products.

For a list of supported Cisco accessories and Cisco part numbers, see [Cisco Accessory Part Numbers, on page 17](#).

Accessory Guidelines

Follow these guidelines when using accessories with your Cisco Wireless IP Phone 882x Series:

- Use only chargers, batteries, and accessories that are approved by the phone manufacturer. Use of unapproved chargers, batteries, and accessories might be dangerous, and invalidates the warranty on your phone.
- Do not adhere a clip to the back of the phone or insert a clip between the phone and battery cover because it can damage the battery.
- When disconnecting the power cord of any accessory, grasp and pull the plug. Do not pull the cord.
- Keep accessories out of the reach of young children.
- Clean the phone with a soft, dry cloth or a moist wipe.
- The phone is resistant to dust and spills, but you can further protect your phone with a cover case.

Documentation, Support, and Security Guidelines

For information on obtaining documentation, obtaining support, providing documentation feedback, reviewing security guidelines, and also recommended aliases and general Cisco documents, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/c/en/us/td/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.

Cisco Wireless IP Phone 882x Series Documentation

Refer to publications that are specific to your language, phone model, and call control system. Navigate from the following documentation URL:

<http://www.cisco.com/c/en/us/support/collaboration-endpoints/unified-ip-phone-8800-series/tsd-products-support-series-home.html>

Cisco Product Security Overview

This product contains cryptographic features and is subject to United States and local country laws governing import, export, transfer, and use. Delivery of Cisco cryptographic products does not imply third-party authority to import, export, distribute, or use encryption. Importers, exporters, distributors, and users are responsible for compliance with U.S. and local country laws. By using this product you agree to comply with applicable laws and regulations. If you are unable to comply with U.S. and local laws, return this product immediately.

Further information regarding U.S. export regulations may be found at <http://www.bis.doc.gov/index.php/regulations/export-administration-regulations-ear>.



Cisco Accessories

- [Batteries, page 3](#)
- [Cisco Wireless IP Phone 8821 AC Power Adapter, page 4](#)
- [USB Cable, page 6](#)
- [Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger, page 7](#)
- [Cisco Wireless IP Phone 8821 and 8821-EX Multi Charger, page 10](#)
- [Carry Cases, page 14](#)
- [Other Accessories, page 16](#)
- [Cisco Accessory Part Numbers, page 17](#)
- [Desktop Charger Specifications, page 20](#)
- [Multicharger Specifications, page 22](#)

Batteries

Your phone comes with a Lithium ion battery, and you can order spare batteries.

You can find the battery installation instructions in the *Cisco Wireless IP Phone 8821 and 8821-EX User Guide*.



Caution

Use only approved batteries. Use of unapproved batteries might be dangerous, and invalidates the warranty on your phone.

A fully charged battery gives you:

- Up to 200 hours of stand by power
- Up to 13 hours of talk time

If you require longer talk times, you will find it useful to have a spare, charged battery.

**Note**

If you use a Bluetooth wireless headset, the headset reduces the talk time and standby time for the battery. In addition, how your administrator configures the phone also affects battery life.

Cisco Wireless IP Phone 8821 AC Power Adapter

The Cisco Wireless IP Phone 8821 AC Power Adapter enables you to quickly charge your phone battery. You can use the phone while you are charging the battery. When you order your phone, make sure that you order the power adapter for your region.

The battery takes approximately 3 hours to recharge using the AC Power Adapter.

**Caution**

Use only Cisco-specified AC power supplies for the Cisco Wireless IP Phone 882x Series.

Prepare the Power Adapter

The power adapter for your phone is compact. Before you use the power adapter, you have to unfold the prongs. After you use the adapter, you can fold in the prongs.

 
The power adapter for your region may also require an additional clip to allow the adapter to be plugged into the electrical outlet.

Procedure

- Step 1** Catch the edge of a prong with your finger and pull the prong up until it clicks into position.



- Step 2** (Optional) Install the international power clip.
- Step 3** (Optional) Before you close the adapter, remove the international power clip.
- Step 4** (Optional) Hold the lever on the top of the adapter down and press the prongs down to close the adapter.

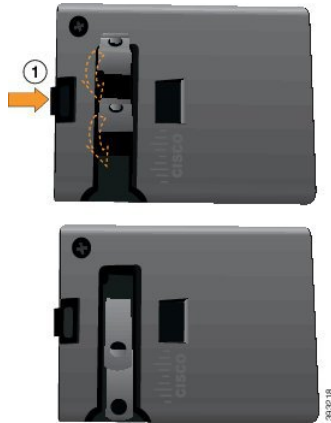

Charge the Battery with the AC Power Supply

You can charge your phone using an AC power supply. When you use the power supply to charge your phone, the battery can take up to 3 hours to fully charge.

The wide connector on the USB cable connects to the phone using magnets to hold it secure. It has pins that you need to align correctly. If you hold the phone so that the screen is towards you, the battery icon on the connector is visible.



Before You Begin

You need the USB power cable supplied with your phone.

You need to prepare the power adapter for use as described in [Prepare the Power Adapter](#), on page 4.

Procedure

-
- Step 1** Plug the USB cable into the bottom of the phone with the pins aligned.
 - Step 2** Plug the USB cable into the power adapter.
 - Step 3** Plug the power adapter into the electrical outlet.
-

USB Cable

You can connect your phone to your computer using a special USB cable.

The wide connector on the USB cable connects to the phone with magnets to hold it secure. It has pins that you must align correctly. If you hold the phone so that the screen is toward you, the battery icon on the connector is visible.

Charge the Battery with the USB Cable and a USB Port on Your Computer

You can charge your phone using your computer. When you use the computer to charge your phone, the battery can take up to 6 hours to fully charge.

The wide connector on the USB cable connects to the phone using magnets to hold it secure. It has pins that you need to align correctly. If you hold the phone so that the screen is towards you, the battery icon on the connector is visible.



38224

Procedure

-
- Step 1** Connect the long connector of the USB cable to the bottom of the phone with the pins aligned.
- Step 2** Plug the other end into the USB port in the computer.
-

Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger

You can use the Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger to charge your phone and spare phone battery. The charger works on AC power or from a charged spare phone battery. It can be secured with a standard laptop cable lock.

Figure 1: Cisco Wireless IP Phone 8821 and Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger



You can use a USB to Ethernet adapter (dongle) to connect the desktop charger to the Ethernet for only automatic Wi-Fi profile provisioning and certificate enrollment purposes. You cannot use the dongle to make voice calls over the Ethernet. For more information on the USB port, see the *Cisco Wireless IP Phone 8821 and 8821-EX Administration Guide*.



Caution

Do not use chargers or handsfree mode in a Potentially Explosive Atmosphere.

You do not need to remove the phone from its case when you put the phone into the desktop charger.

Built-in Speakerphone

The charger includes a speakerphone that you can use while the phone is docked. Use the phone volume buttons to control the speakerphone volume, and the **Mute** button on the charger itself. When the speakerphone is muted, the **Mute** button lights red.

Phone Charging Indications

When you put the phone into the charger, the phone indicates that the battery is charging with the red LED on the top of the phone. If the phone is turned on when you put it into the charger, you see a message on the screen. If the phone is turned off or the battery is too weak, you see an icon displayed on the screen.

Spare Battery Charging Indications

You can charge a spare battery with the additional charging port behind the main phone charging port. When you put a spare battery into the charger, the Battery LED (to the right of the phone) lights to show the charging status:

- Red—The spare battery is charging.
- Green—The spare battery is fully charged.

Set Up the Desktop Charger

You should place the desktop charger on a stable work surface.

Before You Begin

You need the cable that is provided with the charger. This cable has a plug on one end and a USB connector on the other end.

You need the power adapter that comes with the phone.

Procedure

-
- Step 1** Plug the plug end of the cable into the desktop charger.
 - Step 2** Plug the USB end of the cable into the power adapter and plug the power adapter into the electrical outlet.
-

Charge Your Phone with the Desktop Charger

You can tell when your phone is charging in the charger when the phone LED lights red and a message or icon displays on the phone screen. When the battery is fully charged, the LED turns off. Your phone can take up to 3 hours to recharge.

If your phone has a protective case, you don't need to remove the case before you charge the phone in the desktop charger. You adapt the charger to fit the phone.



Caution Do not charge the phone in a hazardous environment.

When you put the phone into the charger, make sure that you align the charging pins on the bottom of the phone with the connector in the charger. When the phone is correctly placed in the charger, it is held in place with magnets. If the LED does not light, then the alignment is not correct.

Procedure

- Step 1** (Optional) Turn the charger so that the back is facing you, put three fingers about 3/4 of the way into the cup, press in, and lift. The cup should slide out.



- Step 2** Place your phone in the charging slot with the screen facing towards you. Make sure that the LED on the phone lights red. If the LED does not light up, remove the phone and reinsert it into the charger.

- Step 3** When you remove the phone from the charger, tilt the phone forward and lift it up to disconnect the connector from the magnets.



- Step 4** (Optional) Slide the charging cup into the charger. Make sure that the cup is flush with the front and top of the charger.



Charge Your Spare Battery with the Desktop Charger

You can charge a spare battery in the desktop charger. The battery can take up to 3 hours to charge.


Caution

Do not charge the battery in a hazardous environment.

When the battery is charging, the spare battery LED on the charger lights red. When the battery is charged, the spare battery LED on the charger lights green.

Procedure

-
- Step 1** Hold the battery so that the Cisco label faces you, and the arrows on the battery point down.
- Step 2** Place the spare battery in the slot behind the phone cradle and press down firmly.
-

Cisco Wireless IP Phone 8821 and 8821-EX Multi Charger

You can charge up to six phones and six spare batteries at the same time with the Cisco Wireless IP Phone 8821 and 8821-EX Multi Charger. If your phone is in a protective case, you can charge it without removing the case.



You can place the multicharger on a work surface or mount it on a wall with the wall mount kit. You can also secure the multicharger with a standard laptop cable lock.


Caution

Do not use chargers in a Potentially Explosive Atmosphere.

The LED beside the battery slot shows the charging status. When the battery is charging, the LED lights red. When the battery is charged, the LED lights green.

Battery slot LEDs can take several minutes to indicate that the battery is fully charged. If you move a fully-charged battery to another slot, the LED might initially light red before it turns green.

Set Up the Multicharger

The power jack is on the right side of the multicharger.

Procedure

- Step 1** Plug the jack end of the power cord into the multicharger.
 - Step 2** Plug the other end of the power cord into the power adapter.
 - Step 3** Plug the power adapter into the electrical outlet.
 - Step 4** Place the multicharger on a stable work surface.
-

Install the Multicharger Wall Mount Kit

The wall mount kit comes with the following components:

- bracket
- package with 5 screws and 5 self-tapping wall anchors

Before You Begin

 
You need the following tools:

- Drill and a 0.25 inch drill bit
- Pencil
- Level
- Philips #1 and #2 screwdrivers

You need the power cable and power adapter.

Procedure


- Step 1** Determine the location for the bracket. The bottom right corner of the bracket must be less than 50 inches (127 cm) from an electrical outlet.
- Step 2** Mount the wall bracket.

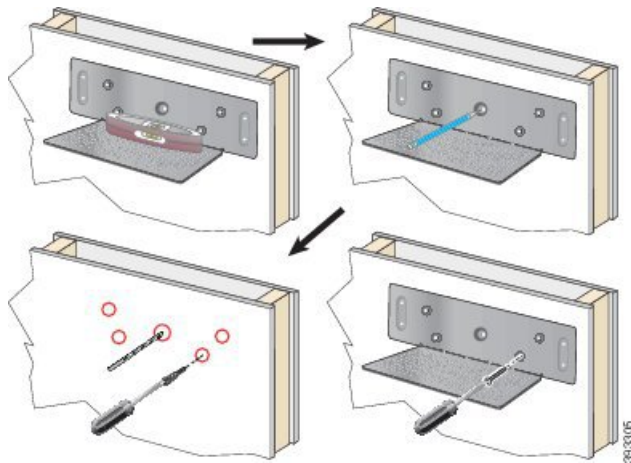


- a) Hold the bracket on the wall, as shown in the diagram.
- b) Use the level to ensure that the bracket is level and use a pencil to mark the screw holes.
- c) Install the anchors, using the drill and drill bit.
- d) Screw the bracket to the wall.

Step 3 Locate the post holders in the multicharger.

 Step 4 Hold the multicharger so that the post holders are in front of the posts on the bracket, press the multicharger towards the wall, and then push the multicharger down so that the posts seat into the holder.

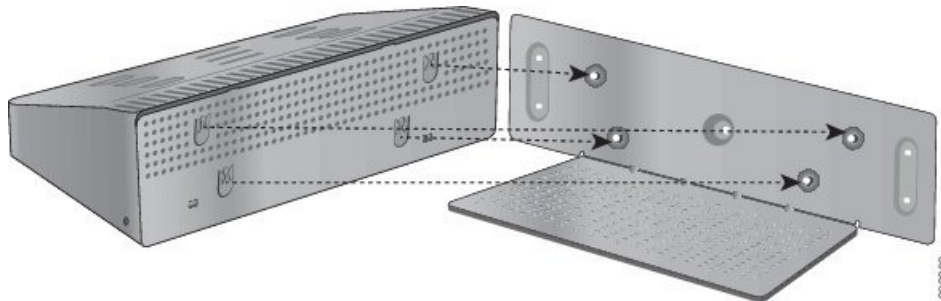

Here is a close-up of the post holder.

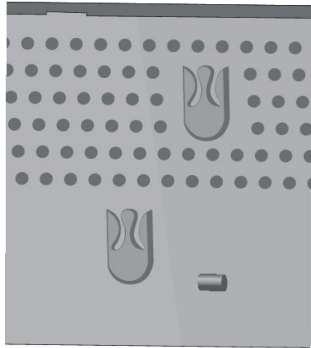 

- Step 5** Plug the jack end of the power cord into the multicharger.
 - Step 6** Plug the other end of the power cord into the power adapter.
 - Step 7** Plug the power adapter into the electrical outlet.
-

Charge Your Phone with the Multicharger

You can tell when your phone is charging in the multicharger when the LED beside the phone lights red. When the battery is fully charged, the LED turns off. Your phone can take up to 3 hours to recharge.



Caution Do not charge the phone in a hazardous environment.

If your phone has a protective case, you don't need to remove the case before you charge the phone in the multicharger. You adapt the multicharger to fit the phone.

When you put the phone into the multicharger, make sure that you align the charging pins on the bottom of the phone with the connector in the multicharger. If the LED does not light, then the alignment is not correct.

Procedure

- Step 1** (Optional) Reach into the cup with three fingers, locate the slots on the inside of the cup, and use the slots to pull the cup out.



- Step 2** Place your phone in the empty charging slot. Make sure that the LED on the phone lights red. If the LED does not light up, remove the phone and reinsert it into the multicharger.
- Step 3** (Optional) Slide the charging cup into the multicharger and press the cup into place so that the cup is flush with the top of the multicharger.

Charge Your Spare Battery with the Multicharger

You can charge a spare battery in the multicharger. The battery can take up to 3 hours to charge.



Caution Do not charge the battery in a hazardous environment.

When the battery is charging, the Battery LED beside the battery lights red. When the battery is charged, the Battery LED lights green.

Procedure

Place the battery in an empty spare battery slot, aligning the battery contacts with the charger connector. If the Battery LED does not light red, remove the battery and reinsert it into the battery slot.

Carry Cases

You can put your phone into a carry case to make it easy to carry your wireless phone and to provide some protection for the phone. When your phone is in the case, you don't have to remove the case to charge the phone.

We have the following cases available:

- Cisco Wireless IP Phone 8821 and 8821-EX Leather Case
- Cisco Wireless IP Phone 8821 and 8821-EX Holster Case

You can attach a Cisco Wireless IP Phone 8821 and 8821-EX Belt Clip or a Cisco Wireless IP Phone 8821 and 8821-EX Pocket Clip to either case. The following picture shows the belt clip on the left and the pocket clip on the right.



When you buy a case, we supply both clips and you can also order replacement clips.

Cisco Wireless IP Phone 8821 and 8821-EX Leather Case

You can slide the phone into the leather case to protect the phone and then attach the case to the belt clip or pocket clip. The button on the back of the case attaches to the clip. The following pictures show the front and back of the leather case.



You can also clip a lanyard to the metal ring on the top of the leather case

Cisco Wireless IP Phone 8821 and 8821-EX Holster Case

You can press the phone into the holster case to protect the phone and then attach the case to the belt clip or pocket clip. The button on the back of the case attaches to the case to the clip. The following pictures show the front and back of the holster case.



 
Other Accessories

Cisco Wireless IP Phone 8821 and 8821-EX Lanyard

You can attach the lanyard to the top of the wireless phone.



Slip the loop of cord around the bar on the back of the phone and pass the lanyard through the loop.

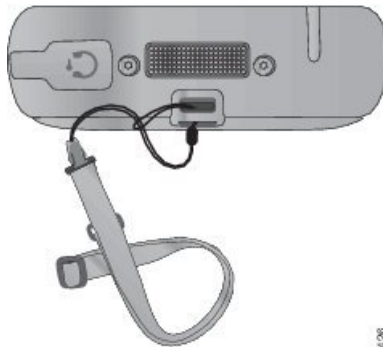

30134-20

Cisco Wireless 8821 Battery Door

You can replace the battery door if the gasket on the door gets damaged. If the gasket is damaged, dirt and liquids can get into the battery compartment and cause damage to the phone. Failure to replace a broken gasket voids the phone warranty.

**Caution**

If the battery door is frequently opened (2 to 4 times a day), we recommend that you replace the battery door every year to maintain IP67 compliance.

Do not remove the battery door from one phone and use it on another phone.

Cisco Accessory Part Numbers

You can buy accessories for your Cisco Wireless IP Phone 882x Series from your local dealer or corporate representative.

The following table gives the part number for the Cisco accessories. For more information, see the product datasheets at <http://www.cisco.com/c/en/us/products/collaboration-endpoints/unified-ip-phone-8800-series/datasheet-listing.html>

Table 1: Phone Spares and Accessories

Product Name	Part Number
Cisco Wireless 8821 Battery	CP-BATT-8821=
Cisco Wireless 8821 Battery Door	CP-BDOOR-8821=
Cisco Wireless IP Phone 8821 Power Supply for North America, includes power cord and power adapter	CP-PWR-8821-NA=
Cisco Wireless IP Phone 8821 Power Supply for Argentina, includes power cord, power adapter, and country clip	CP-PWR-8821-AR=
Cisco Wireless IP Phone 8821 Power Supply for Australia, includes power cord, power adapter, and country clip	CP-PWR-8821-AU=
Cisco Wireless IP Phone 8821 Power Supply for Brazil, includes power cord, power adapter, and country clip	CP-PWR-8821-BZ=
Cisco Wireless IP Phone 8821 Power Supply for Central Europe, includes power cord, power adapter, and country clip	CP-PWR-8821-CE=
Cisco Wireless IP Phone 8821 Power Supply for India, includes power cord, power adapter, and country clip	CP-PWR-8821-IND=
Cisco Wireless IP Phone 8821 Power Supply for Korea, includes power cord, power adapter, and country clip	CP-PWR-8821-KR=
Cisco Wireless IP Phone 8821 Power Supply for Japan, includes power cord, power adapter, and country clip	CP-PWR-8821-JP=
Cisco Wireless IP Phone 8821 Power Supply for Switzerland, includes power cord, power adapter, and country clip	CP-PWR-8821-SW=

Product Name	Part Number
Cisco Wireless IP Phone 8821 Power Supply for UK, includes power cord, power adapter, and country clip	CP-PWR-8821-UK=
Cisco Wireless IP Phone 8821 and 8821-EX Holster Case with both belt and pocket clip	CP-HOLSTER-8821=
Cisco Wireless IP Phone 8821 and 8821-EX Leather Case with both belt and pocket clip	CP-LCASE-8821=
Cisco Wireless IP Phone 8821 and 8821-EX spare Pocket Clips set	CP-PCLIP-8821=
Cisco Wireless IP Phone 8821 and 8821-EX spare Belt Clips set	CP-BCLIP-8821=
Cisco Wireless IP Phone 8821 and 8821-EX Lanyard Set	CP-LANYARD=

Table 2: Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger and Spares

Name	Part Number
Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger Only	CP-DSKCH-8821=
Cisco Wireless IP Phone 8821 & 8821-EX Desktop Charger, with power cord, power adapter and country clip	CP-DSKCH-8821-BUN
Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger Power Supply for NA, includes power cord and power adapter	CP-PWR-DC8821-NA=
Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger Power Supply for Argentina, includes power cord, power adapter and country clip	CP-PWR-DC8821-AR=
Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger Power Supply Power Supply for Australia, includes power cord, power adapter and country clip	CP-PWR-DC8821-AU=
Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger Power Supply Power Supply for Brazil, includes power cord, power adapter and country clip	CP-PWR-DC8821-BZ=
Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger Power Supply Power Supply for Central Europe, includes power cord, power adapter and country clip	CP-PWR-DC8821-CE=
Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger Power Supply Power Supply for India, includes power cord, power adapter and country clip	CP-PWR-DC8821-IND=
Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger Power Supply Power Supply for Korea, includes power cord, power adapter and country clip	CP-PWR-DC8821-KR=

Name	Part Number
Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger Power Supply Power Supply for Japan, includes power cord, power adapter and country clip	CP-PWR-DC8821-JP=
Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger Power Supply Power Supply for Switzerland, includes power cord, power adapter and country clip	CP-PWR-DC8821-SW=
Cisco Wireless IP Phone 8821 and 8821-EX Desktop Charger Power Supply Power Supply for United Kingdom, includes power cord, power adapter and country clip	CP-PWR-DC8821-UK=

Table 3: Cisco Wireless IP Phone 8821 and 8821-EX Multi Charger and Spares

Name	Part Number
Cisco Wireless IP Phone 8821 and 8821-EX Multi Charger, with power cube, power adapter and country clip	CP-MCHGR-8821-BUN
Cisco Wireless IP Phone 8821 and 8821-EX Multi Charger Only	CP-MCHGR-8821=
Cisco Wireless IP Phone 8821 and 8821-EX Multi Charger Wall Mount and Kit	CP-MCHGR-8821-WMK=
All countries power cube	CP-PWR-CUBE-6=
Power Cord, NA	CP-PWR-CORD-NA=
Power Cord, Argentina	CP-PWR-CORD-AR=
Power Cord, Australia	CP-PWR-CORD-AU=
Power Cord, Brazil	CP-PWR-CORD-BZ=
Power Cord, Central Europe	CP-PWR-CORD-CE=
Power Cord, India	CP-PWR-CORD-IN=
Power Cord, Korea	CP-PWR-CORD-KR=
Power Cord, Japan	CP-PWR-CORD-JP=
Power Cord, Asia Pacific	CP-PWR-CORD-AP=
Power Cord, South Africa	CP-PWR-CORD-SA=
Power Cord, Switzerland	CP-PWR-CORD-SW=
Power Cord, UK	CP-PWR-CORD-UK=

Desktop Charger Specifications

Table 4: Physical Specifications

Item	Description
Dimensions (H x W x D)	3.0 x 7.3 x 4.0 in. (76 x 185 x 102 mm)
Weight	<ul style="list-style-type: none"> • Desktop charger: 1.41 pounds (641 g) • Power adapter: 0.08 pounds (38 g) • Total weight: 1.49 pounds (679 g)
Power supply	<ul style="list-style-type: none"> • Input: 100-240V, 0.2A, 50-60 Hz • Output: 5V, 2.0A • AC adapters (by geographical region)
Power consumption	10 watts
Operating temperature	32 to 104°F (0 to 40°C)
Storage temperature	-22 to 140°F (-30 to 60°C)
Relative humidity	10 to 95% (noncondensing)
Drop specification	Drop height: 750 mm (29.5 inch)
Vibration	0.41 Grms from 3 to 500 Hz with spectral break points of 0.0005 G ₂ / Hz at 10 Hz and 200 Hz and 5 dB/octave roll off at each end
Thermal shock	-22°F (-30°C) 24 hours; 158°F (70°C) 24 hours
Charging time	<ul style="list-style-type: none"> • Battery only: 2–4 hours • Phone: set by the phone

Table 5: Safety and Compliance

Item	Description
Safety	<ul style="list-style-type: none"> • UL 60950-1 • CSA C22.2 No. 60950-1 • EN 60950-1 • IEC 60950-1 • AS/NZS 60950.1
Electromagnetic compatibility (EMC) and electromagnetic interference (EMI)	<ul style="list-style-type: none"> • CFR 47 Part 15 Class A • ICES-003 Class A • EN 55022 Class A • CISPR 22 Class A • VCCI Class A • AS/NZS CISPR22 • CSPR 24 • EN 55024 • EN 50082-1 • EN 61000-6-1 • EN 61000-3-2 • EN 61000-3-3 • EN 61000-4-2 • EN 61000-4-3 • EN 61000-4-4 • EN 61000-4-5 • EN 61000-4-6 • EN 61000-4-11

Multicharger Specifications

Table 6: Physical Specifications

Item	Description
Dimensions (H x W x D)	14.17 x 9.06 x 4.14 in (360 x 230 x 105 mm)
Weight	<ul style="list-style-type: none"> • Multi-charger: 5.65 lb (2.57 kg) • Power supply: 0.77 lb (0.35 kg) • Mounting bracket: 1.47 lb (0.67 kg)
Power supply	<ul style="list-style-type: none"> • Input: 100-240VAC, 1.2A, 50–60 Hz • Output: 19V, 4.74A • AC adapters (by geographical region)
Power consumption	90 watts
Operating temperature	32 to 104°F (0 to 40°C)
Storage temperature	-22 to 140°F (-30 to 60°C)
Relative humidity	10 to 95% (noncondensing)
Drop specification	Drop height: 750 mm (29.5 inch)
Vibration	0.41 Grms from 3 to 500 Hz with spectral break points of 0.0005 G ₂ / Hz at 10 Hz and 200 Hz and 5 dB/octave roll off at each end
Thermal shock	-22°F (-30°C) 24 hours; 158°F (70°C) 24 hours
Charging time	<ul style="list-style-type: none"> • Battery only: 2–4 hours • Phone: set by the phone

Table 7: Safety and Compliance

Item	Description
Safety	<ul style="list-style-type: none"> • IEC 60950-1 • EN 60950-1 • UL 60950-1 • CSA C22.2 No. 60950-1 • AS/NZS 60950.1
Electromagnetic compatibility (EMC) and electromagnetic interference (EMI)	<ul style="list-style-type: none"> • FCC Part 15 (CFR 47) Class A • ICES-003 Class A • EN 55022 Class A • CISPR 22 Class A • AS/NZS CISPR22 • VCCI Class A • CSPR 24 • EN 55024 • EN 61000-3-2 • EN 61000-3-3 • EN 61000-4-2 • EN 61000-4-3 • EN 61000-4-4 • EN 61000-4-5 • EN 61000-4-6 • EN 61000-4-8 • EN 61000-4-11 • EN 61000-6-1 • EN 61000-63 • EN 60601-1-2



Third-Party Accessories

- [Third-Party Accessories Overview, page 25](#)
- [Headsets, page 25](#)

Third-Party Accessories Overview

Accessories for the wireless phones are available from third parties.



Note

Cisco does not test third-party accessories. Cisco recommends that you test them in your environment before providing them to users.

Headsets

The wireless phone supports the use of third-party wired and Bluetooth wireless headsets.

For wired headsets, the phone requires a headset or ear bud with a 3.5 mm, 3-band, 4-conductor plug.

Bluetooth Wireless Headsets

Using Bluetooth wireless headsets increases battery power consumption on your phone and results in reduced talk time.

For a Bluetooth wireless headset to work, it does not need to be within direct line-of-sight of the phone, but some barriers, such as walls or doors, and interference from other electronic devices, can affect the connection.

Headset Choices

The audio portion of a headset must sound good to you and the person you are speaking to. Sound is subjective and we cannot guarantee the performance of any headsets. Some of the headsets on the sites listed below have been reported to perform well on wireless IP Phones.

For information about headsets, go to the following URLs:

<http://www.plantronics.com>

<http://www.jabra.com>

<http://en-us.sennheiser.com>



Note

We recommend that you test your headsets in your own environment to determine suitable performance.
