

Compatibility List for Canon USB Devices

Last Updated July, 14th 2015

Please always make sure to use the latest Silex firmware and software and the latest Canon printer driver. If your Canon device is a multifunction printer please use the latest SX-Virtual Link software.
Free download: <http://www.silexeurope.com/en/home/support/overview.html>

Quick Overview

Silex Device	Device Type	Canon Device	Device Interface Speed Full Speed = 12 Mbit/s Hi-Speed = 480 Mbit/s Wired = 10BaseT, 100/1000Base-TX	Network Interface Type Wired = 10BaseT, 100Base-TX Wireless = 802.11a/b/g/n	MSRP (Manufacturer Suggested Retail Price)
C-6600GB	Scan- & Print Server	1 x USB	Hi-Speed	Wired only (Gigabit)	109,00 €
SX-3000GB	USB Device Server	2 x USB	Hi-Speed	Wired only (Gigabit)	109,00 €
SX-DS-4000U2	USB Device Server	2 x USB	Hi-Speed	Wired only (Gigabit)	149,00€
SX-DS-3000WAN	USB Device Server	2 x USB	Hi-Speed	Wired + Wireless	165,00 €
DS-510	USB Device Server	2 x USB	HiSpeed	Wired only (Gigabit)	99,00 €
SX-BR-4600WAN	Wireless Ethernet Adapter Industrial	Wired	Wired	Wireless only	220,00 €

Scanners

Canon USB Scanner	C-6600GB	SX-DS-4000U2 / DS-510	SX-BR-4600WAN
CR-50	✓	✓	X
DR-2010C	✓	✓	X
DR-2010M	✓	✓	X
DR-2020U	X	✓*8	X
DR-2510C	✓	✓	X
DR-2510C and flatbed unit 101	X	✓	X
DR-2510M	✓	✓	X
DR-2580C	✓	✓	X
DR-3010C	✓	✓	X
DR-4010C	✓	✓	X
DR-6010C	✓	✓	X
DR-6030C	✓	✓	X
DR-6030C and flatbed unit 101	X	✓	X
DR-6030C and flatbed unit 201	X	✓	X
DR-6050C	✓	✓	X
DR-7550C	✓	✓	X
DR-9050C	✓	✓	X
DR-C120	X	✓	X
DR-C125	✓	✓	X
DR-C130 and flatbed unit 101	X	✓	X
DR-C130	✓	✓	X
DR-C225	X	✓	X
DR-C240	X	✓	X

✓ = Compatible
X = Not Compatible
- = Not Tested

DR-M140	✓	✓	X
DR-M140 and flatbed unit 101	X	✓	X
DR-M1060	✓	✓	X
DR-M160	✓	✓	X
DR-M160 and flatbed unit 201	X	✓	X
DR-M160II	X	✓	X
DR-F120	X	✓	X
DR-X10C	✓	✓	X
P150	✓	✓	X
P150M	✓	✓	X
P215	✓	✓	X
P208	✓	✓	X
ScanFront 300	-	-	✓
ScanFront 300P	-	-	✓

Laser Printers

Canon USB Device	C-6700WG C-6600GB	SX-2000WG SX-3000GB SX-DS-4000U2	SX-2500CG SX-600
i-SENSYS MF5980dw	✓	✓	✓
i-SENSYS MF5940dn	✓	✓	✓
i-SENSYS MF3010	✓	✓	X
i-SENSYS MF4890dw	✓*9	✓	✓
i-SENSYS MF4870dn	✓*9	✓	✓
LBP2410	✓	✓	X
LBP2900	✓	✓	X
LBP2900B	✓	✓	X
LBP3000	✓	✓	X
LBP3010	✓	✓	X
LBP3010B	✓	✓	X
LBP3100	✓	✓	-
LBP3250	✓	✓	X
LBP3300	✓	✓	✓*0
LBP3310	✓	✓	✓*0
LBP3360	✓	✓	✓
LBP3370	-	-	✓
LBP3460	-	-	✓
LBP3560	-	-	✓*10
LBP5000	✓	✓	✓*0
LBP5050	✓	✓	-
LBP5050N	✓	✓	✓
LBP5100	✓	✓	✓*0
LBP5300	✓	✓	✓
LBP5200	✓	✓	X
LBP5360	-	-	✓
LBP6750	-	-	✓*10
MF4010	✓	✓	X
MF4012	✓	✓	X
MF4018	✓	✓	X
MF4120	✓	✓	X

✓ = Compatible
X = Not Compatible
- = Not Tested

Canon USB Device	C-6700WG C-6600GB	SX-2000WG SX-3000GB SX-DS-4000U2	SX-2500CG SX-600
MF4140	✓	✓	X
MF4150	✓	✓	X
MF4270	-	-	✓
MF4320d	✓	✓	X
MF4330d	✓	✓	X
MF4340d	✓	✓	X
MF4350d	✓	✓	X
MF4370dn	✓	✓	✓
MF4380dn	✓	✓	✓
MF4410	✓	✓	X
MF4430	✓	✓	X
MF4450	✓	✓	X
MF4450d	✓	✓	X
MF4550d	✓	✓	X
MF4660	-	-	✓
MF4690PL	-	-	✓
MF6530	✓	✓	X
MF6540PL	✓	✓	X
MF6550	✓	✓	X
MF6560PL	✓	✓	X
MF6580PL	✓	✓	✓
MF8180C	-	✓	✓
MF8450	-	-	✓
MF9130	-	-	✓
MF9170	-	-	✓
PC-D320	-	-	-
PC-D340	-	-	-
PC-D450	✓	✓	X
FAX-L160	-	-	-
FAX-L380S	-	-	-
FAX L390	-	-	-
FAX-L3000	-	-	-
FAX-L3000IP	-	-	✓

imageRUNNER laser printers

Canon Device	C-6700WG C-6600GB	SX-2000WG SX-3000GB SX-DS-4000U2	SX-2500CG SX-600
imageRUNNER 1133	X	X	✓
imageRUNNER 1133A	X	X	✓
imageRUNNER 1133iF	X	X	✓
imageRUNNER 1730i	X	X	✓
imageRUNNER 1740i	X	X	✓
imageRUNNER 1750i	X	X	✓
imageRUNNER 2420	X	X	✓
imageRUNNER 2422	X	X	✓
imageRUNNER 2520	X	X	✓
imageRUNNER 2520i	X	X	✓
imageRUNNER 2525	X	X	✓
imageRUNNER 2525i	X	X	✓

✓ = Compatible
X = Not Compatible
- = Not Tested

Canon Device	C-6700WG C-6600GB	SX-2000WG SX-3000GB SX-DS-4000U2	SX-2500CG SX-600
imageRUNNER 2530	X	X	✓
imageRUNNER 2530i	X	X	✓
imageRUNNER 2535	X	X	✓
imageRUNNER 2535i	X	X	✓
imageRUNNER 2545	X	X	✓
imageRUNNER 2545i	X	X	✓
imageRUNNER ADVANCE 400i/500i	X	X	✓
imageRUNNER ADVANCE 4025i	X	X	✓
imageRUNNER ADVANCE 4035i	X	X	✓
imageRUNNER ADVANCE 4045i	X	X	✓
imageRUNNER ADVANCE 4051i	X	X	✓
imageRUNNER ADVANCE 6055	X	X	✓
imageRUNNER ADVANCE 6055i	X	X	✓
imageRUNNER ADVANCE 6065	X	X	✓
imageRUNNER ADVANCE 6065i	X	X	✓
imageRUNNER ADVANCE 6075	X	X	✓
imageRUNNER ADVANCE 6075i	X	X	✓
imageRUNNER ADVANCE 6255i	X	X	✓
imageRUNNER ADVANCE 6265i	X	X	✓
imageRUNNER ADVANCE 6275i	X	X	✓
imageRUNNER C1028i/C1028iF	X	X	✓
imageRUNNER ADVANCE C2020L	X	X	✓
imageRUNNER ADVANCE C2020i	X	X	✓
imageRUNNER ADVANCE C2025i	X	X	✓
imageRUNNER ADVANCE C2030L	X	X	✓
imageRUNNER ADVANCE C2030i	X	X	✓
imageRUNNER ADVANCE C2220L	X	X	✓
imageRUNNER ADVANCE C2230i	X	X	✓
imageRUNNER ADVANCE C2225i	X	X	✓
imageRUNNER ADVANCE C5030	X	X	✓
imageRUNNER ADVANCE C5030i	X	X	✓
imageRUNNER ADVANCE C5035	X	X	✓
imageRUNNER ADVANCE C5035i	X	X	✓
imageRUNNER ADVANCE C5045	X	X	✓
imageRUNNER ADVANCE C5045i	X	X	✓
imageRUNNER ADVANCE C5051	X	X	✓
imageRUNNER ADVANCE C5051i	X	X	✓
imageRUNNER ADVANCE C5235i	X	X	✓
imageRUNNER ADVANCE C5240i	X	X	✓
imageRUNNER ADVANCE C5250	X	X	✓
imageRUNNER ADVANCE C5250i	X	X	✓
imageRUNNER ADVANCE C5255	X	X	✓
imageRUNNER ADVANCE C5255i	X	X	✓
imageRUNNER ADVANCE C7055i	X	X	✓
imageRUNNER ADVANCE C7065i	X	X	✓
imageRUNNER ADVANCE C7260i	X	X	✓
imageRUNNER ADVANCE C7270i	X	X	✓
imageRUNNER ADVANCE C7280i	X	X	✓

✓ = Compatible
X = Not Compatible
- = Not Tested

Ink Jet Printers

Canon USB Device	C-6700WG C-6600GB	SX-2000WG SX-3000GB SX-DS-4000U2	SX-2500CG SX-600
BJ S200	✓	✓	X
BJ S300	✓	✓	X
BJ S330	✓	✓	X
BJ S500	✓	✓	X
BJ S530	✓	✓	X
BJ S600	✓	✓	X
BJ S700	✓	✓	X
BJ S630	✓	✓	X
BJ F890PD	✓	✓	X
BJ F860	✓	✓	X
BJ F930	✓	✓	X
BJC-2100	✓	✓	X
BJC-2100SP	✓	✓	X
BJC-3000	✓	✓	X
BJC-55	✓	✓	X
BJC-6100	✓	✓	X
BJC-6200	✓	✓	X
BJC-6500	✓	✓	X
BJC-8200	✓	✓	X
BJC-85	✓	✓	X
CX350	✓ *3	✓ *3	X
i320	✓	✓	X
i450	✓	✓	X
i455	✓	✓	X
i470D	✓	✓	X
i475D	✓	✓	X
i550	✓	✓	X
i560	✓	✓	X
i6100	✓	✓	X
i6500	✓	✓	X
i50	✓	✓	X
i70	✓	✓	X
i80	✓	✓	X
i850	✓	✓	X
i860	✓	✓	X
i865R	✓	✓	X
i900D/i905D	✓	✓	X
i9100	✓	✓	X
i950	✓	✓	X
i960	✓	✓	X
i965	✓	✓	X
i990	✓	✓	X
i9900	✓	✓	X
i9950	✓	✓	X
iP90	✓	✓	X
iP100	✓	✓	X
iP1180	✓	✓	X
iP1300	✓	✓	X

✓ = Compatible
X = Not Compatible
- = Not Tested

Canon USB Device	C-6700WG C-6600GB	SX-2000WG SX-3000GB SX-DS-4000U2	SX-2500CG SX-600
iP1200	✓	✓	X
iP1500	✓	✓	X
iP1600	✓	✓	X
iP1700	✓	✓	X
iP1800	✓	✓	X
iP1900	✓	✓	X
iP2000	✓	✓	X
iP2500	✓	✓	X
iP2600	✓	✓	X
iP2700/iP2702	✓	✓	X
iP3000	✓	✓	X
iP3100	✓	✓	X
iP3300	✓	✓	X
iP3500	✓	✓	X
iP3600	✓	✓	X
iP4000	✓	✓	X
iP4100	✓	✓	X
iP4200	✓	✓	X
iP4300	✓	✓	X
iP4500	✓	✓	X
iP4600	✓	✓	X
iP4700/iP4760	✓	✓	X
iP4840	✓	✓	X
iP4850	✓	✓	X
iP4950	✓	✓	X
iP5000	✓	✓	X
iP5200	✓	✓	X
iP5300	✓	✓	X
iP6000D	✓	✓	X
iP6100D	✓	✓	X
iP6210D	✓	✓	X
iP6220D	✓	✓	X
iP6310D	✓	✓	X
iP6320D	✓	✓	X
iP6600D	✓	✓	X
iP6550	✓	✓	X
iP6700D	✓	✓	X
iP7100	✓	✓	X
iP8100	✓	✓	X
iP8500	✓	✓	X
iP8600	✓	✓	X
iP9910	✓	✓	X
iX4000	✓	✓	X
iX5000	✓	✓	X
iX6550/6540	✓	✓	X
MG2150	✓	✓	X
MG3150	✓	✓	X
MG5140/50	✓	✓	X
MG5350	✓	✓	X
MG6250	✓	✓	X

✓ = Compatible
X = Not Compatible
- = Not Tested

Canon USB Device	C-6700WG C-6600GB	SX-2000WG SX-3000GB SX-DS-4000U2	SX-2500CG SX-600
MG8250	✓	✓	X
MP140	✓	✓	X
MP160	✓	✓	X
MP150	✓	✓	X
MP170	✓	✓	X
MP180	✓	✓	X
MP190	✓	✓	X
MP210	✓	✓	X
MP220	✓ *5	✓ *5	X
MP240	✓ *5	✓ *5	X
MP252	✓	✓	X
MP250/258	✓	✓	X
MP260	✓ *4,5	✓ *4,5	X
MP270/276	✓	✓	X
MP280/282	✓	✓	X
MP360	✓ *5	✓ *5	X
MP370	✓ *5	✓ *5	X
MP390	✓	✓	X
MP460	✓	✓	X
MP470	✓	✓	X
MP492	✓	✓	X
MP480	✓ *4,5	✓ *4,5	X
MP490/496	✓	✓	X
MP500	✓	✓	X
MP510	✓	✓	X
MP520	✓ *5	✓ *5	X
MP540	✓ *4	✓ *4	X
MP530	✓	✓	X
MP550/558	✓	✓	X
MP560/568	✓	✓	X
MP600	✓	✓	X
MP610	✓ *5	✓ *5	X
MP620	✓ *5	✓ *5	X
MP630	✓ *4	✓	X
MP700	✓	✓	X
MP710	✓ *2	✓ *2	X
MP730	✓ *2	✓ *2	X
MP740	✓	✓	X
MP750	✓	✓	X
MP760	✓	✓	X
MP770	✓	✓	X
MP780	✓	✓	X
MP790	✓ *5	✓ *5	X
MP800	✓	✓	X
MP810	✓	✓	X
MP830	✓	✓	X
MP865R	✓	✓	X
MP900	✓	✓	X
MP950	✓	✓	X
MP960	✓	✓	X
MP970	✓	✓	X

✓ = Compatible
X = Not Compatible
- = Not Tested

Canon USB Device	C-6700WG C-6600GB	SX-2000WG SX-3000GB SX-DS-4000U2	SX-2500CG SX-600
MP980	✓ *4	✓ *4	X
MX300	✓	✓	X
MX310	✓ *7	✓ *7	X
MX320	✓	✓	X
MX360	✓	✓	X
MX375	✓	✓	X
MX410	✓	✓	X
MX435	✓	✓	X
MX700	✓	✓	X
MX7600	✓	✓	X
MX850	✓	✓	X
Pro9000	✓	✓	X
Pro9500MkII	✓	✓	X
Pro9500	✓	✓	X
Pro9000MkII	✓	✓	X
PIXMA PRO-1	✓	✓	X
S100	✓	✓	X
S200	✓	✓	X
S300	✓	✓	X
S330	✓	✓	X
S400	✓	✓	X
S450	✓	✓	X
S4500	✓	✓	X
S500	✓	✓	X
S520	✓	✓	X
S530D	✓	✓	X
S600	✓	✓	X
S630	✓	✓	X
S6300	✓	✓	X
S750	✓	✓	X
S800	✓	✓	X
S820	✓	✓	X
S820D	✓	✓	X
S830D	✓	✓	X
S900	✓	✓	X
S9000	✓	✓	X

- *0 = With Canon Network Option.
 *2 = This model does not support PC fax function.
 *3 = This model does not support Windows 98, because the printer driver is not available.
 *4 = Access to card reader with MP Navigator EX not available for Windows 2000.
 *5 = Special Setting function of the driver utility not available.
 *7 = ADF scanning stops at the second page by Windows XP "OS standard Scanner and Camera Wizard."
 *8 = Scanbuttons on device are not supported
 *9 = Use "Full Feature Mode" for support of fax function
 *10 = for DHCP support first turn on bridge, then printer

Note: All devices are tested only on Windows. Mac OS might also work but is not tested.

✓ = Compatible
 X = Not Compatible
 - = Not Tested