

Bumper Case User Manual – English version draft

Thank you very much for purchasing the Bumper Case. Before using it, read this manual carefully and then use it correctly.

Check product packaging

Before use, please make sure that the following items are included. Please feel free to contact us in case of any inadequacies.


- Bumper Case
- Fall prevention stopper
- Smart card guide
- Stand spacer (2 pieces)
- Shoulder strap
- Bumper Case user manual

Attach the tablet


When attaching the tablet, please turn off the power of the tablet before attaching to avoid any malfunction. Also, make sure that the terminal cover and the slot cover of the tablet are tightly closed.

1. If the pen strap is attached to the tablet, remove the pen strap and the pen from the tablet.
2. Attach the removed pen strap to either hole of the Bumper Case.

First attach pen strap to the Bumper Case and then attach the tablet.

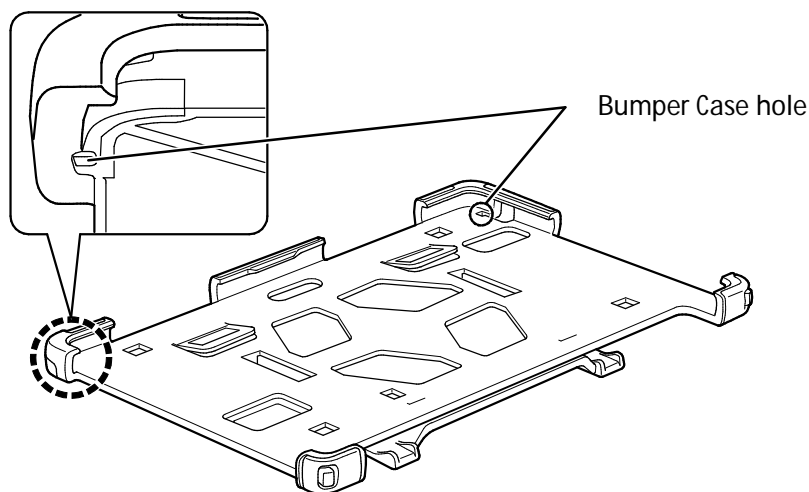


3. Fit the upper left side of the tablet into the upper left side (1) of the Bumper Case, move the tablet in the direction of the arrow and fit it into the upper right side (2) of the Bumper Case.

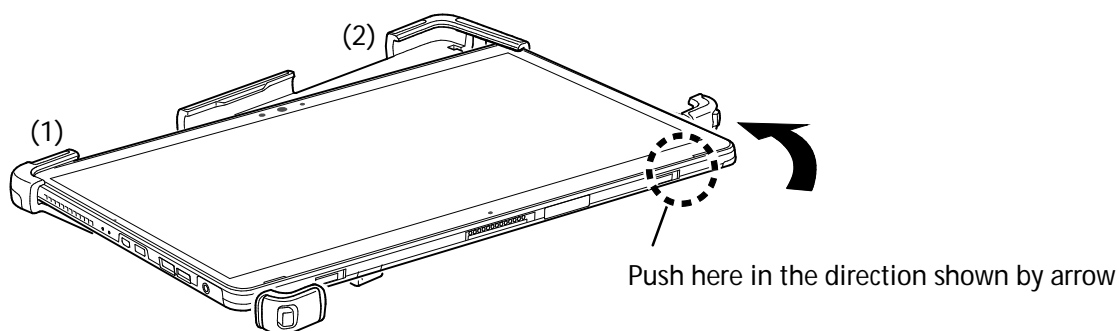

4. Fit the lower side of the tablet into the Bumper Case.

First, fit the lower right side, then fit the lower left side. Please confirm that the tablet is fitted properly.

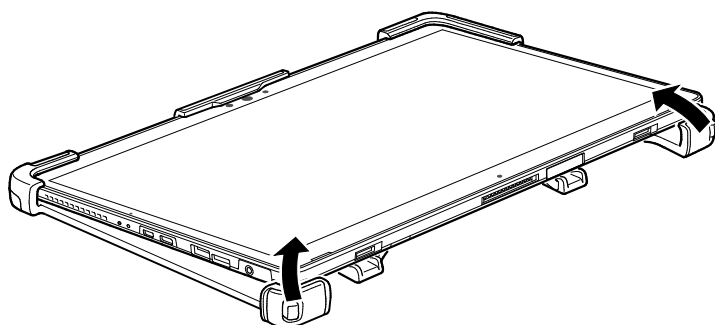


Remove the tablet

When removing the tablet, please turn off the power of the tablet before removing to avoid any malfunction.


1. Remove the tablet from the lower side of the Bumper Case.

First remove the lower right side (1) and then remove the lower left side (2).

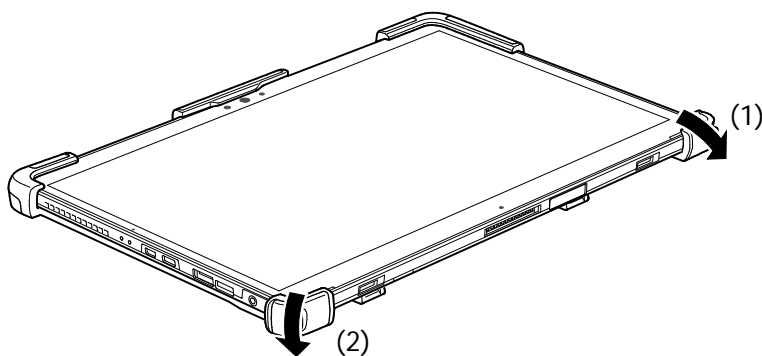

2. Remove the tablet from the Bumper Case.

Hold entire body in the vertical direction, hold upper left side (1) of the Bumper Case by hand, and then move the upper right side (2) of the tablet in the direction shown by arrow.

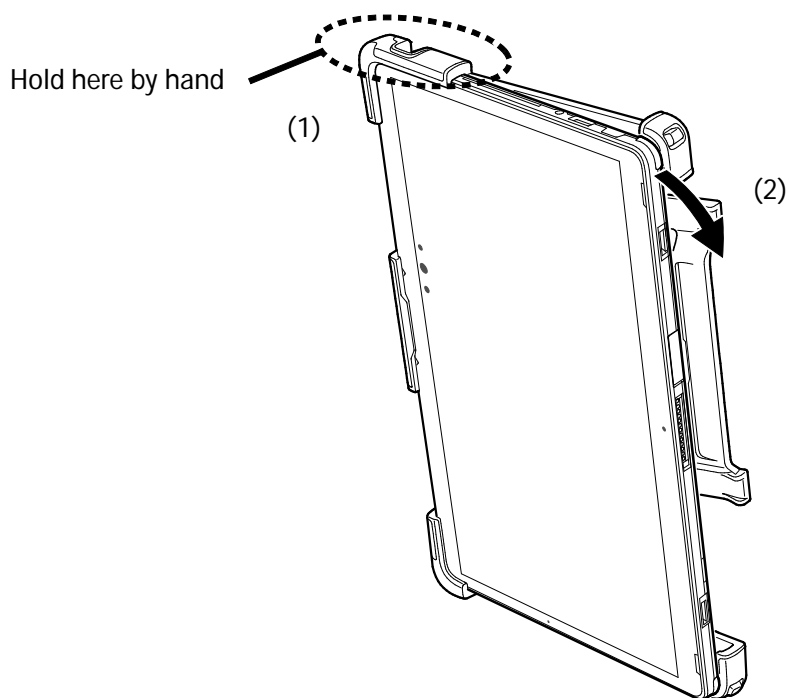


How to use the Bumper Case

Stand style


You can use your tablet by resting the stand upright with the Bumper Case attached.

- Move stand in the direction of the arrow and set the Bumper Case with the stand upright.

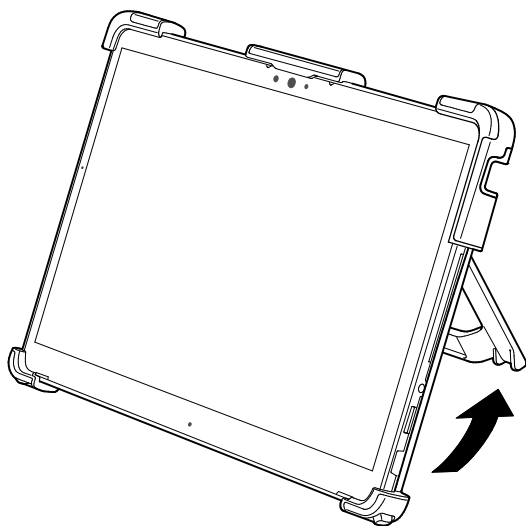

Tablet style


You can use your tablet with the Bumper Case attached.

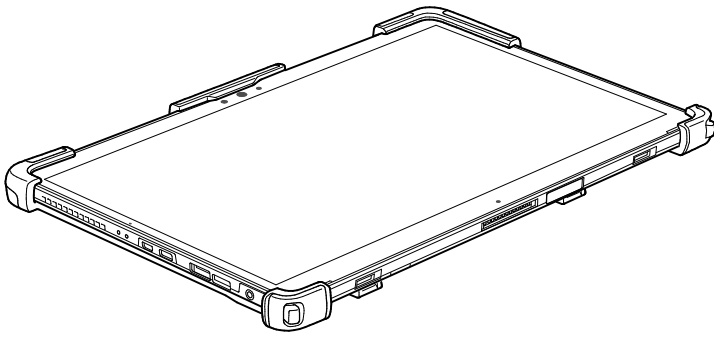

Keyboard style

You can attach a slim keyboard when the Bumper Case is attached.


1. Peel off the release paper of the double-sided tape on the back side of the fall prevention stopper and paste it on the slim keyboard.

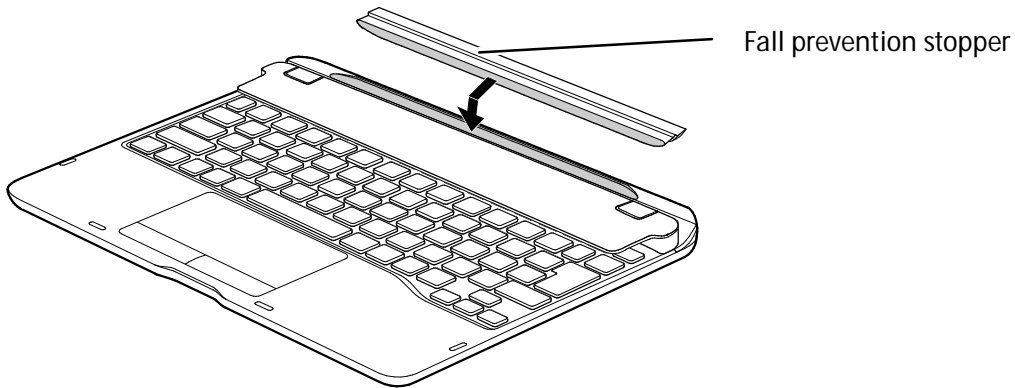

Paste it firmly. After pasting, please do not apply force to the fall prevention stopper for about one day to ensure the adhesive strength.

2. Attach the tablet to the slim keyboard.

Please refer to the tablet manual for method of attachment and precautions on use.

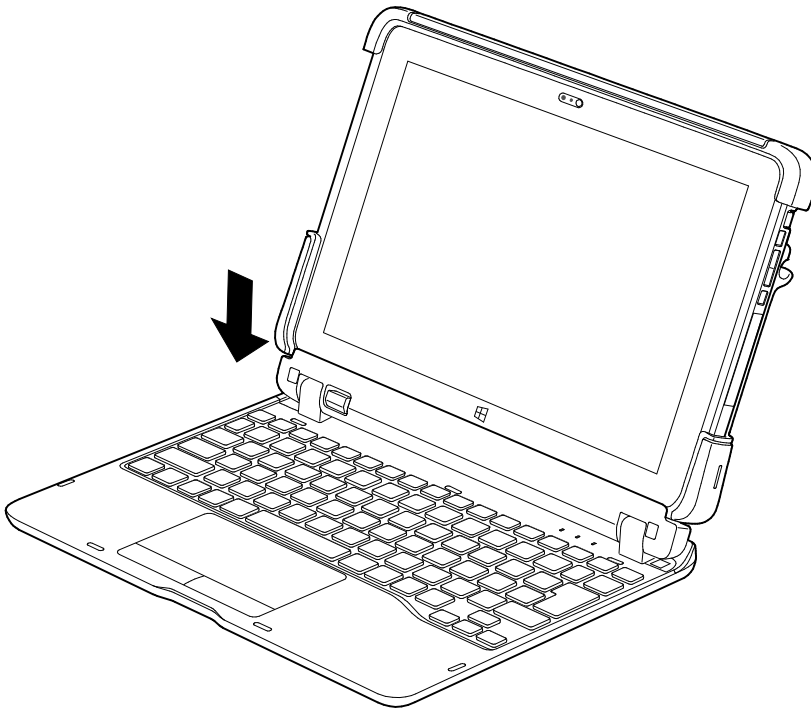


The tablet itself cannot be closed completely.

Cradle style

You can attach your tablet to the cradle when the Bumper Case is attached.

1. Attach the tablet to the cradle.


Please refer to the tablet manual for method of attachment and precautions on use.

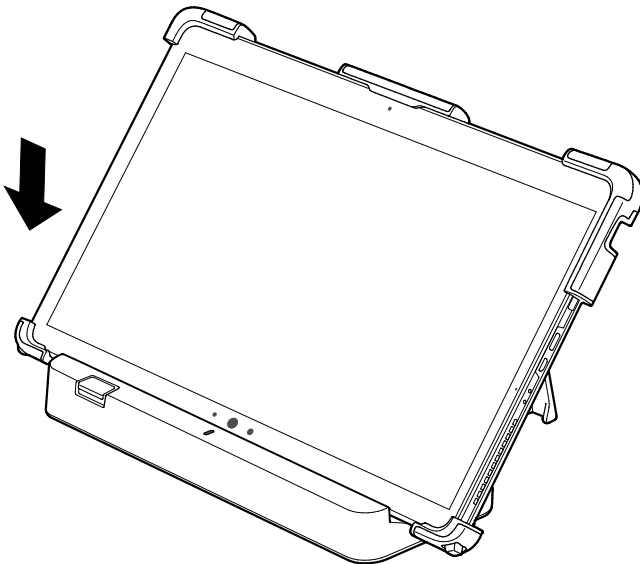


Remove the stand

You can remove the stand if you do not want to use it.


1. Press the stand on the back until the stand connection parts appear on the surface of the Bumper Case.

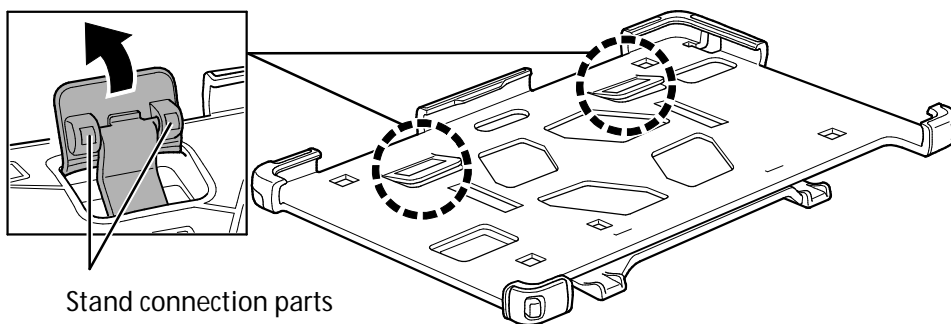

2. Expand the stand connection parts in the direction of arrows shown in the following figure and then remove the stand.

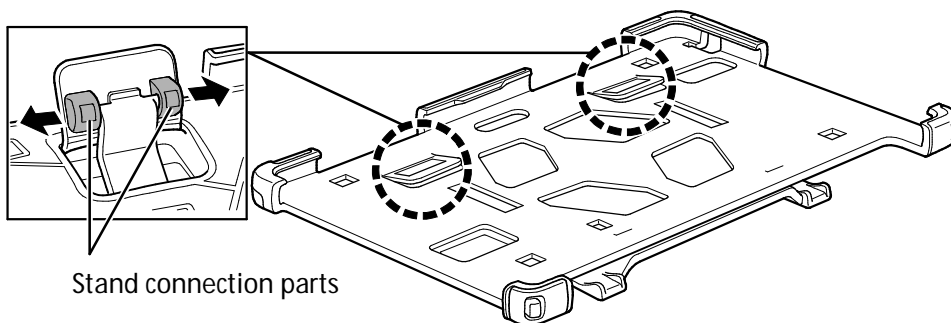


3. Use alignment mark as a reference and fix the stand spacer to the empty space.

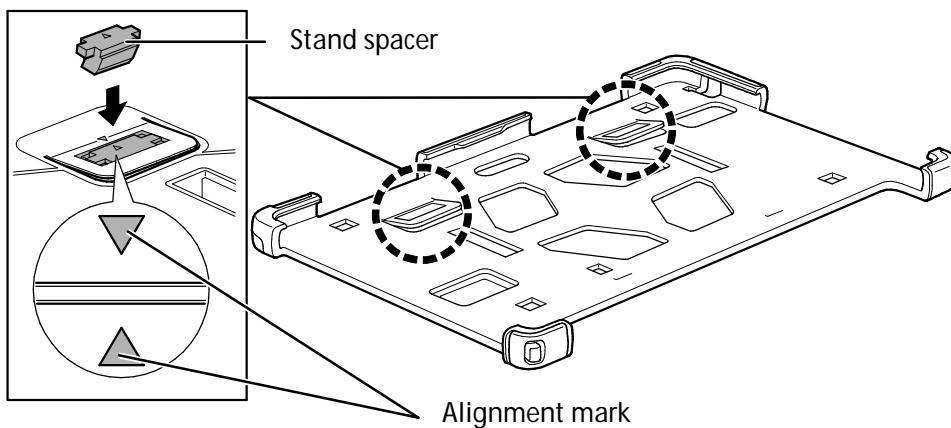


Attach a smart card guide

Attach a smart card guide before using a smart card.

- Insert the claw on the back of the Bumper Case into the hole of the smart card guide and move it in the direction shown by arrow.

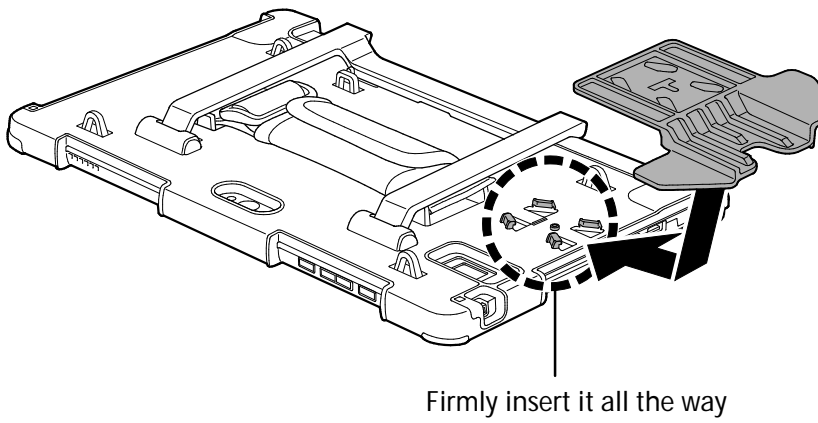

About the back of strap cover

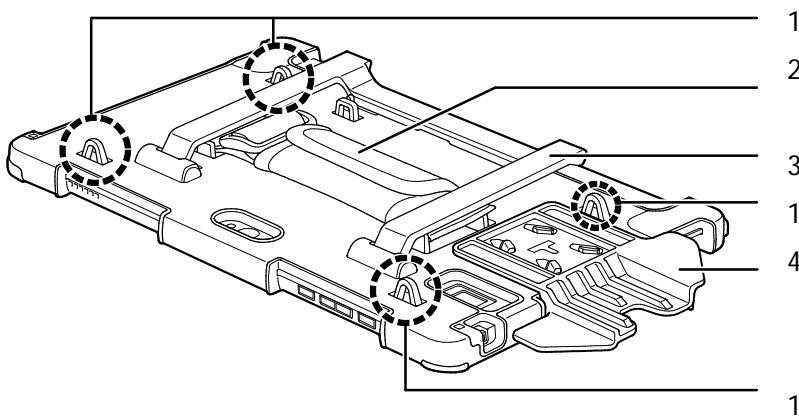

1. Strap mounting hole

You can fix both ends of the shoulder strap before use.


2. Hand strap

3. Stand

4. Smart card guide

Precautions on use

- If the tablet is not tightly fitted into the Bumper Case, the tablet itself may come off during use.
- Firmly hold the tablet itself, even if the Bumper Case is attached to it. The Bumper Case may come off if you hold only on the edges of the Bumper Case.

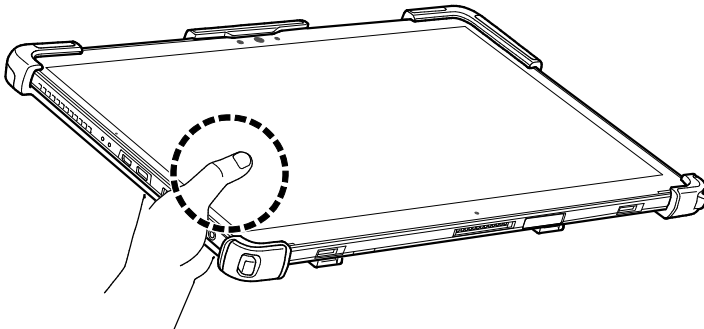

- Keep away from fire and heating equipment.
- Do not keep it under direct sunlight, or places with high temperature or high humidity.
- Store it in a place which is free from dust or chemicals and is cool, dry and ventilated.
- Please keep it out of reach of children.
- Do not place the Bumper Case on resin material products (synthetic leather sofa, resin sheet, etc.). Color may get transferred due to contact for longer duration or rubbing with a strong force.
- The color of the Bumper Case may change with time due to the characteristics of the material.
- The processing is done by giving careful consideration to the texture, so some color fading may be observed or it may become dirty or stained due to water leakage. We appreciate your understanding.
- Please discontinue use of the Bumper Case when you find cracks, breakage, fraying, tearing, deformation, deterioration, etc.
- The Bumper Case is a cover for storing and carrying tablets. Please do not use it for other purposes.
- The Bumper Case is not a cover for protecting the tablets and smart cards from shocks.
- The Bumper Case does not guarantee the prevention from scratches on stored items.
- Do not allow alcohol or other chemicals to adhere to the Bumper Case.
- Do not wipe the Bumper Case with a hard cloth.
- Material may smell when you open the product, but please note that the odor will decrease with time.
- If you paste a protective film, etc. on the display, the film may peel off during use.
- Re-tighten the hand strap if it loosens.
- Do not swing around with a hand strap. Hand strap may come off.
- Do not apply excessive force to the Bumper Case with the stand upright.
- Do not carry it around while holding the stand.
- Do not carry it while holding the smart card guide.

Maintenance

- Do not wash. If it gets dirty, soak a cloth in the water, squeeze it well, wipe off the dirt using that cloth, and then wipe with a dry cloth.
- Do not use solvents such as benzine, thinner, alcohol, household detergents, or chemically treated cloths as they may affect the quality or discolor the product.
- When it gets wet, please wipe the moisture from the wet part with a dry towel, keep it properly under the shade and dry thoroughly.

Specifications

External dimensions (Width × Depth × Height)	Approx. 328 mm × Approx. 213 mm × Approx. 33 mm
Weight	Approx. 370 g

Note: Excluding the weight of items that are included in the package other than the Bumper Case.