


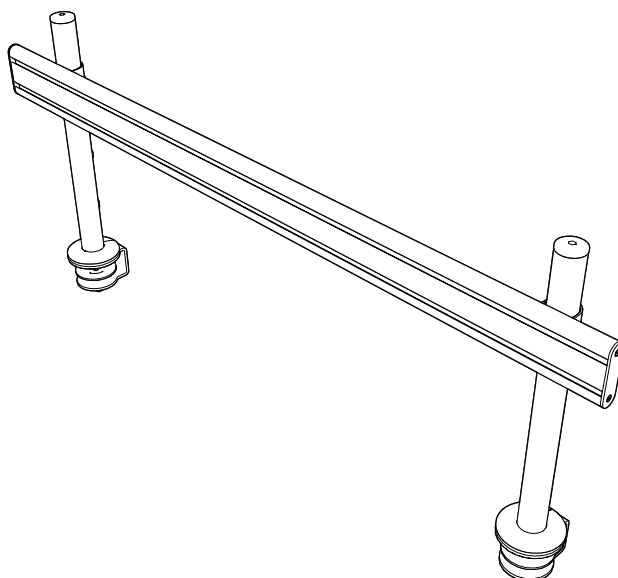









58.702


v1.0

Installation manual/Installatie handleiding
Installations-handbuch/Manuel d'installation
Manuale d'installazione/Manual de instalaci3n
Copyright 2015 – Dataflex International BV













T +31 180 515444
F +31 180 518540
info@dataflex-int.com
www.dataflex-int.com

        
Parts/Onderdelen/Pi3ces/Teile/Parti/Partes

a  2x	b  1x	c  2x	d  2x	e  2x	f  2x	g  2x	h  10x	i  4x
j  2x	k  2x	l  2x	m  2x	n  6mm 1x	o  5mm 1x	p  3mm 1x		

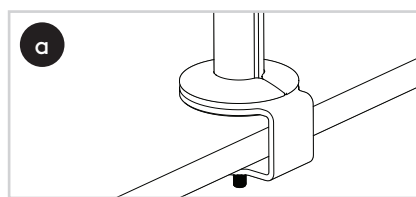

or/of/oder/ou/o

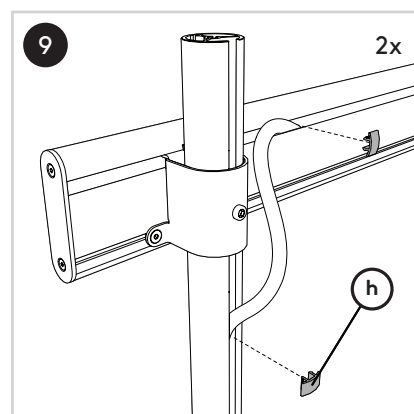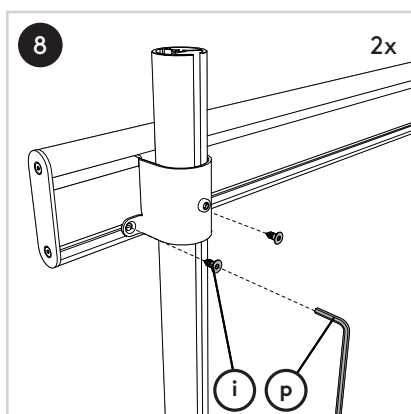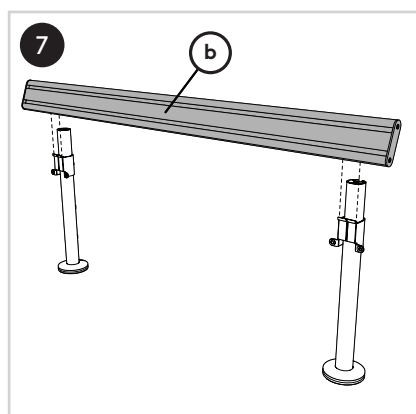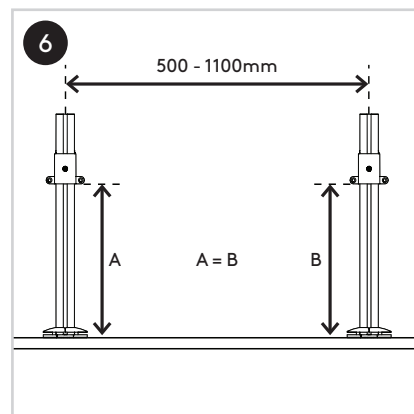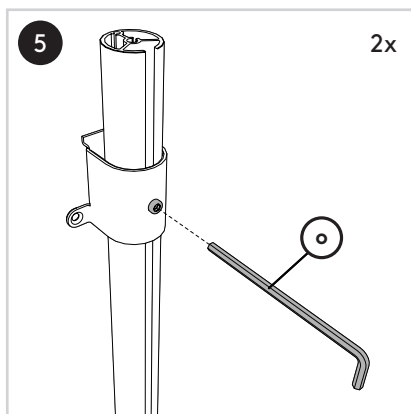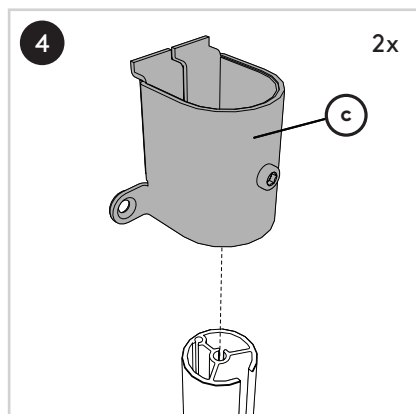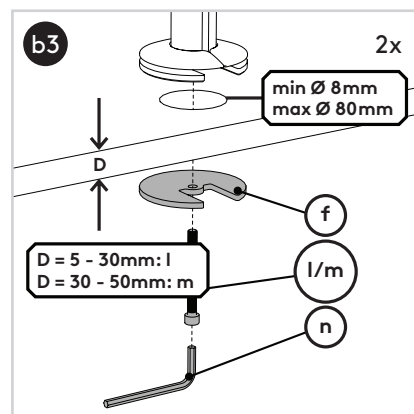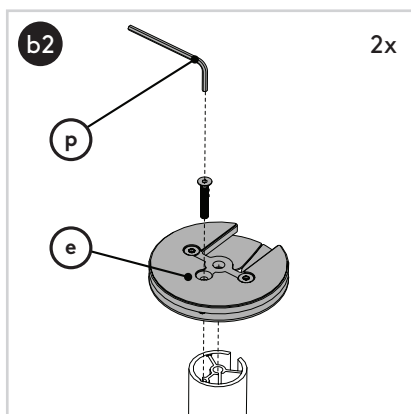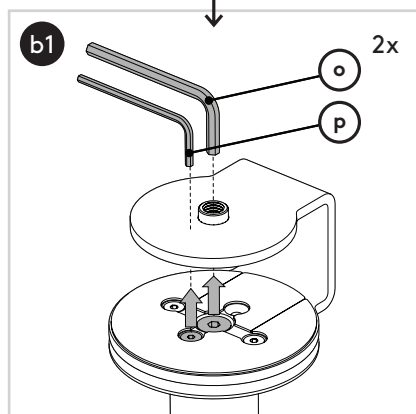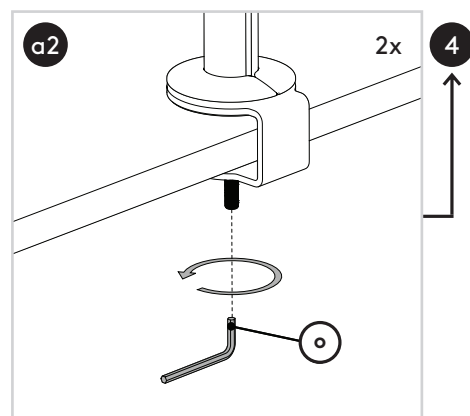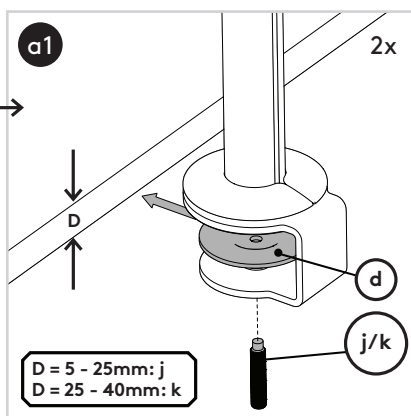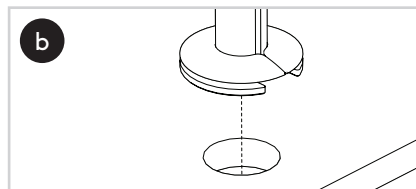

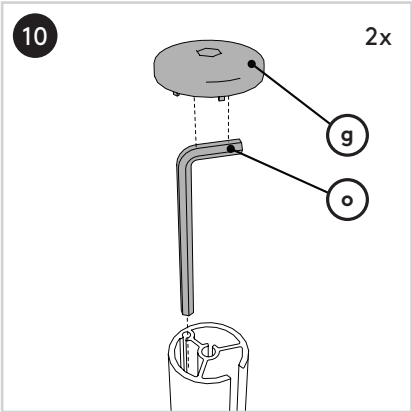

No rights can be derived from this publication/
Aan deze uitgave kunnen geen rechten worden
ontleend/Aus dieser Ausgabe können keine
Rechte abgeleitet werden/Aucun droit ne peut
découler de cette publication/Dal presente
documento non deriva alcun diritto/Del
contenido de esta publicación no podrá
derivarse ningún derecho