MerryIoT Hotspot Miner Onboarding Instruction
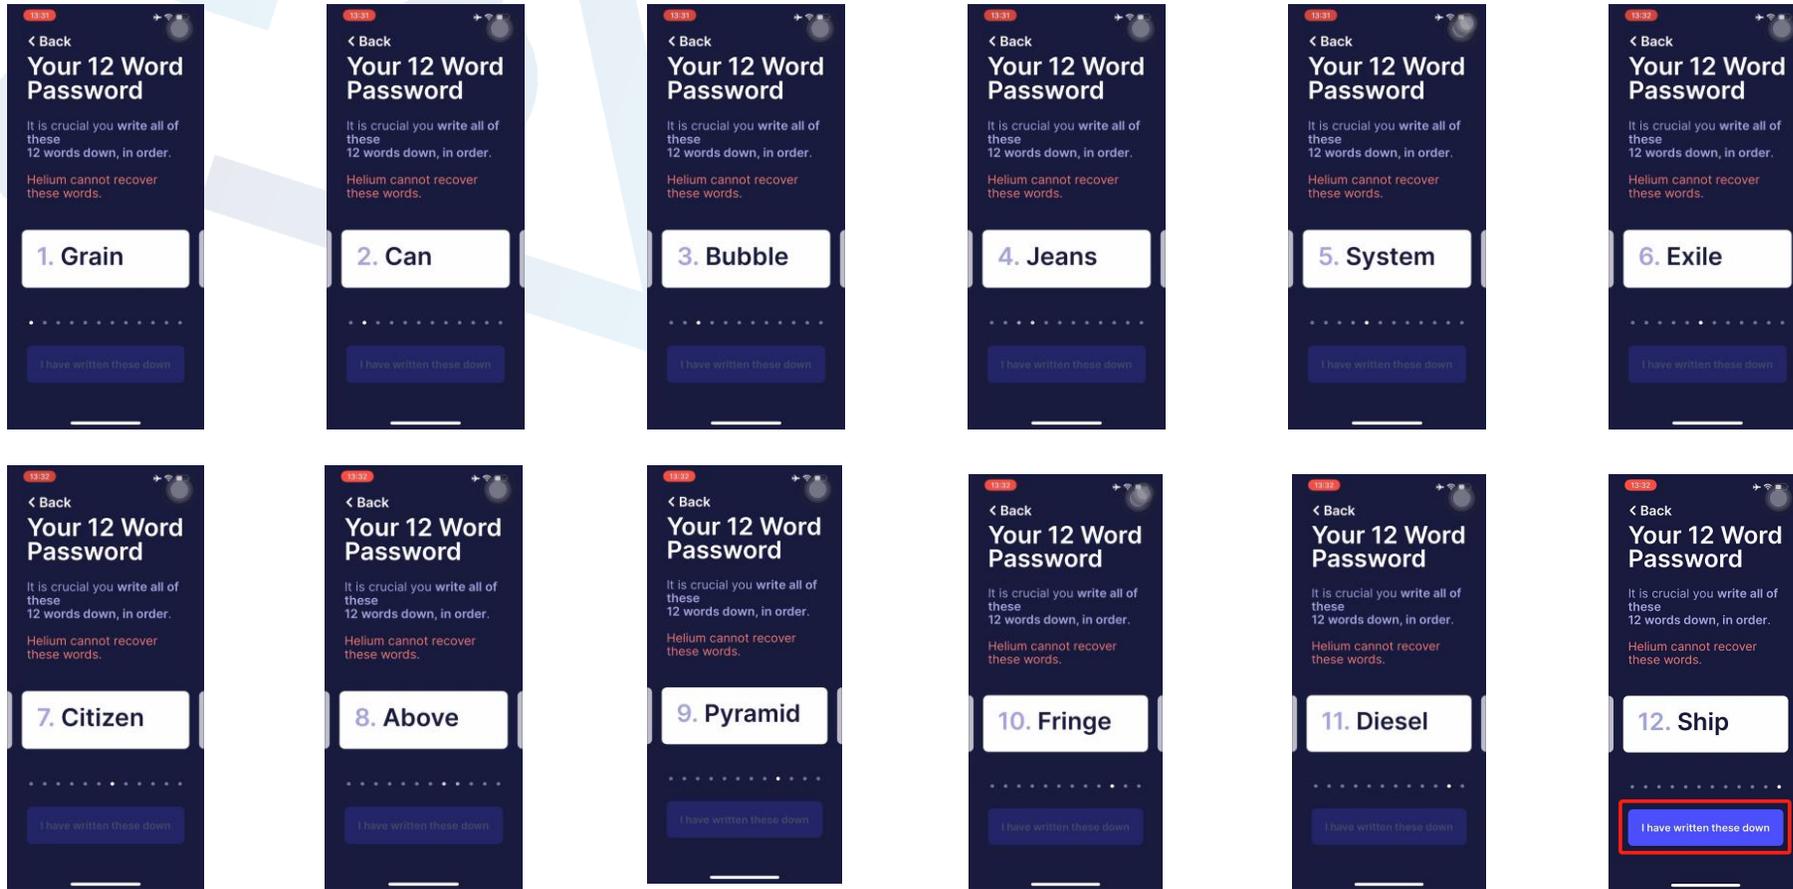
Create Account

Download Helium Hotspot APP
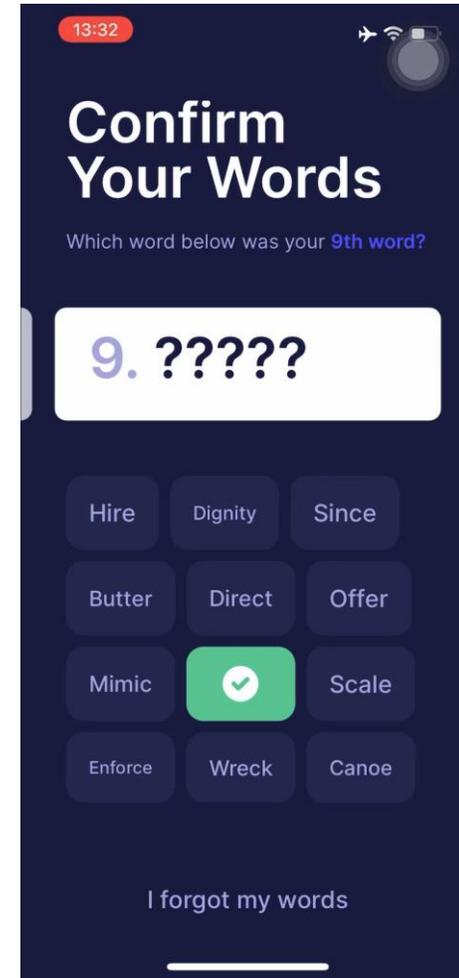
Create an Account   Generate the 12 Words for Protecting Helium Account
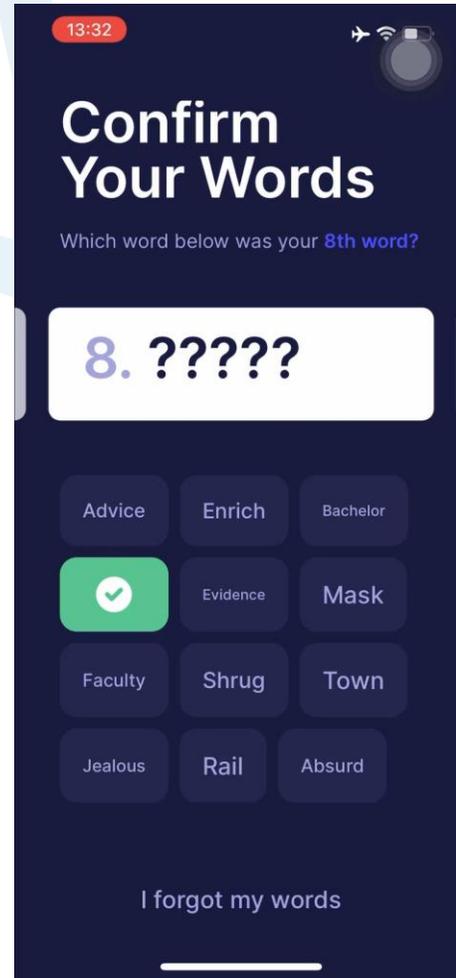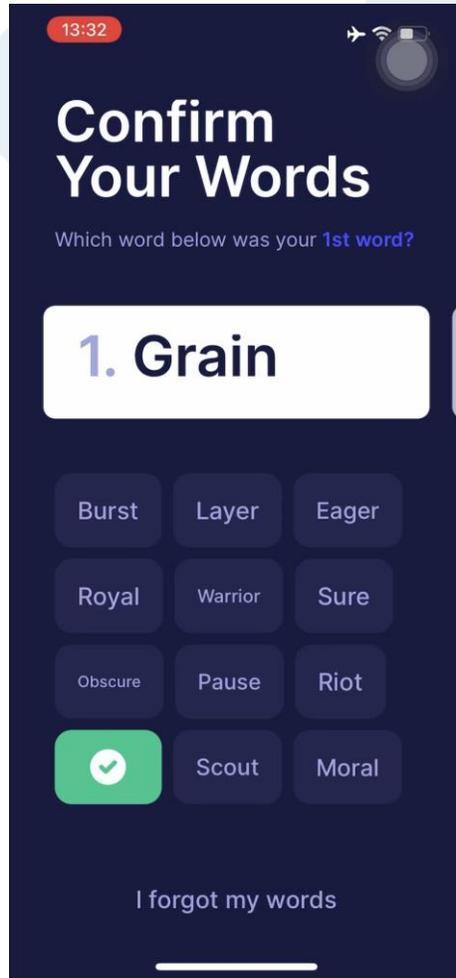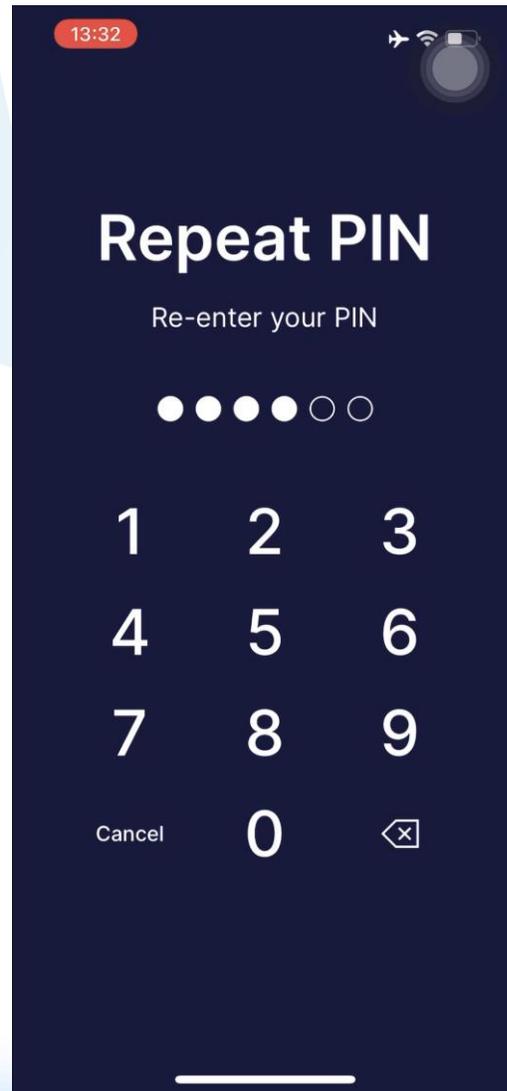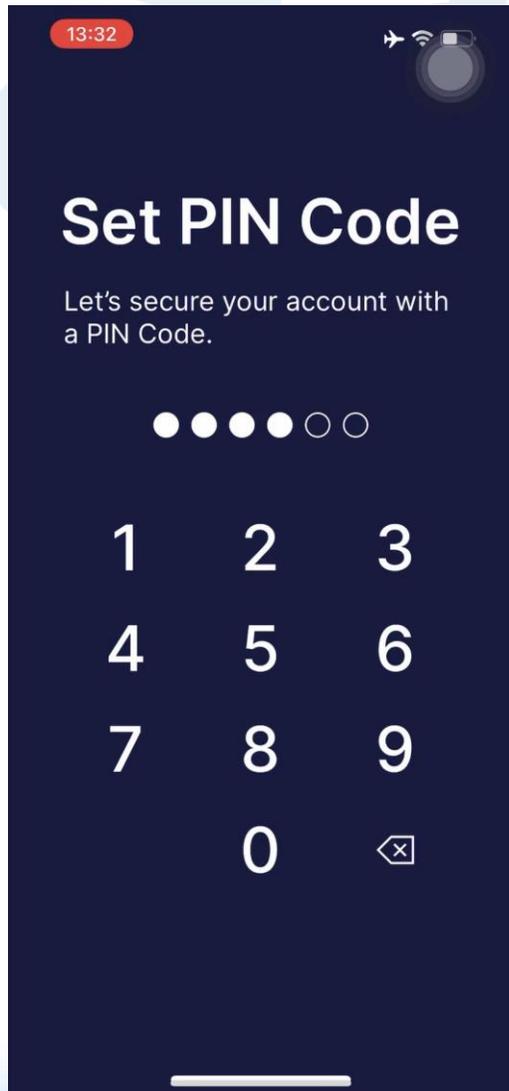
Example - the 12 Words Password
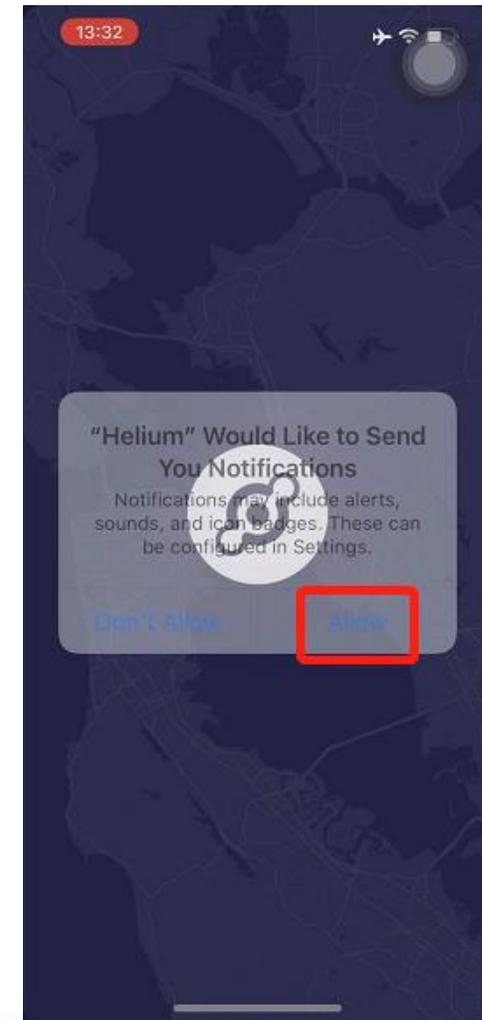

*Please write or screenshot each word!!

Confirm and Verify those words

Set PIN Code and Repeat PIN

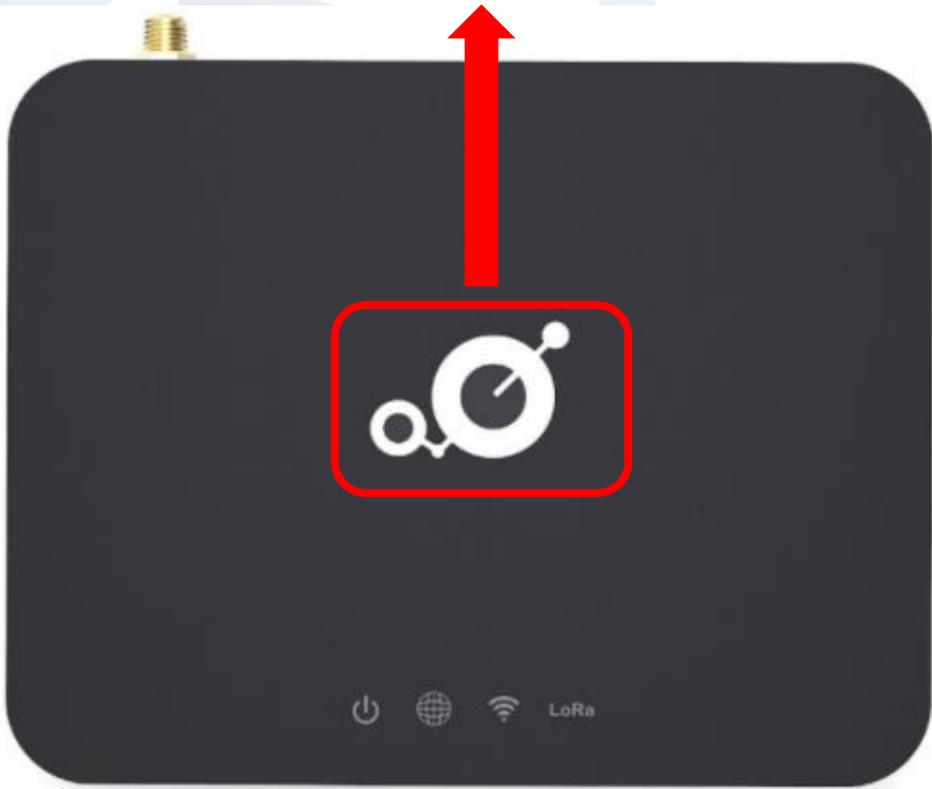# Recommend to Allow the Notifications
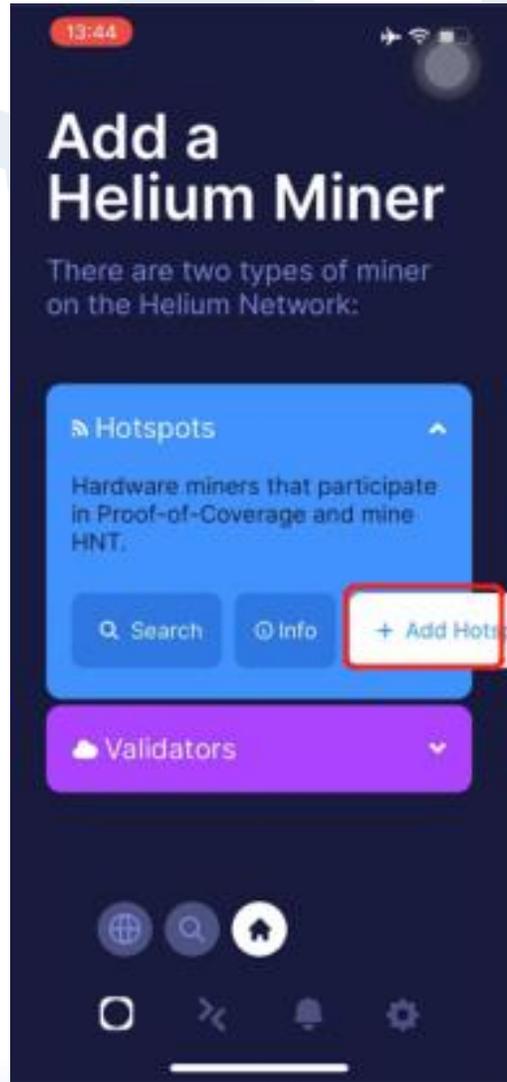
Onboarding Hotspot Miner

Power up the MerryIoT Hotspot Miner

1. The MerryIoT logo's LED light will flash when miner booting up
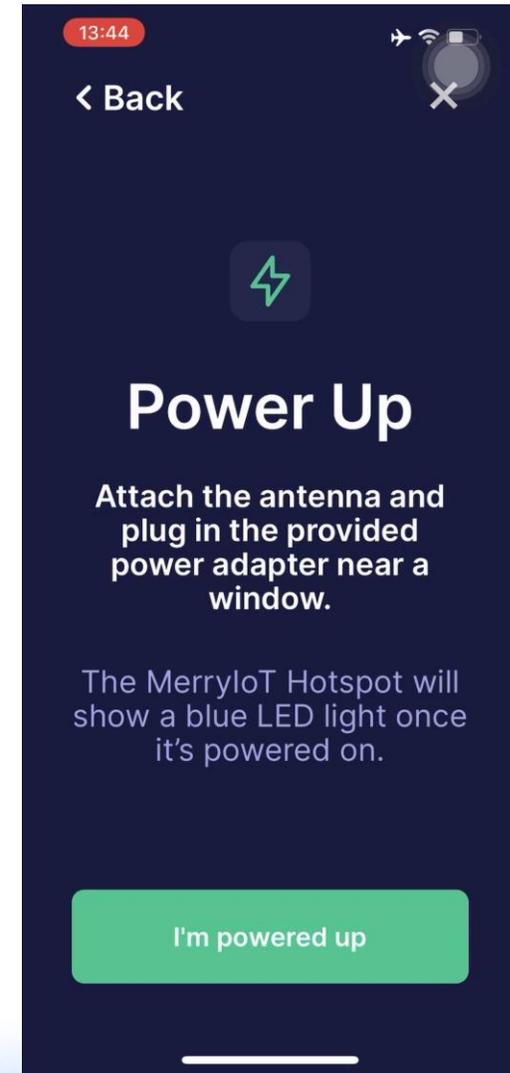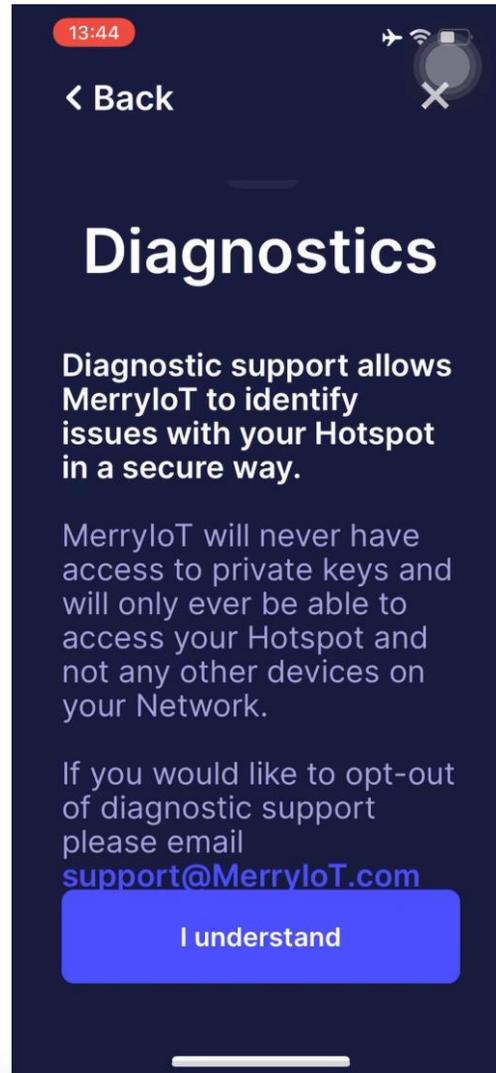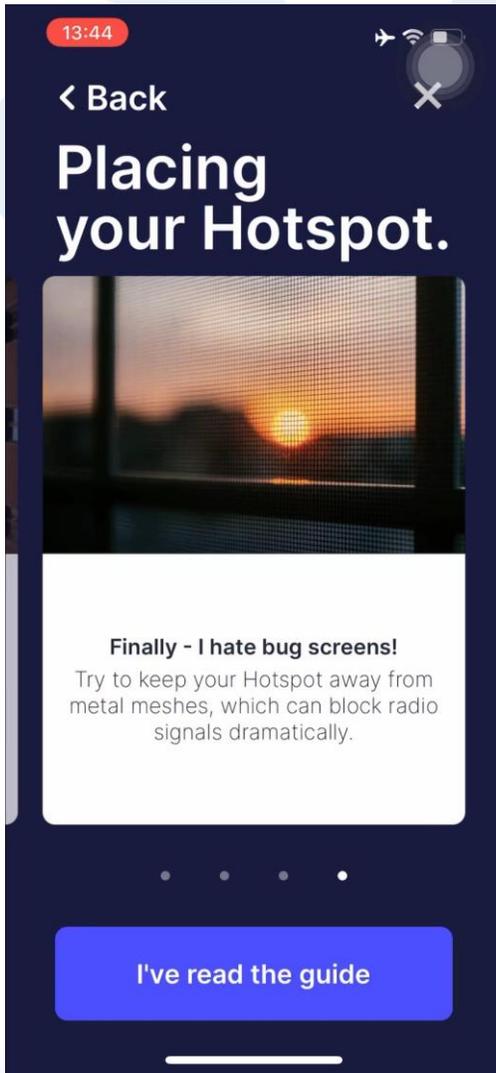2. Wait for MerryIoT logo's LED with solid light, then go next step
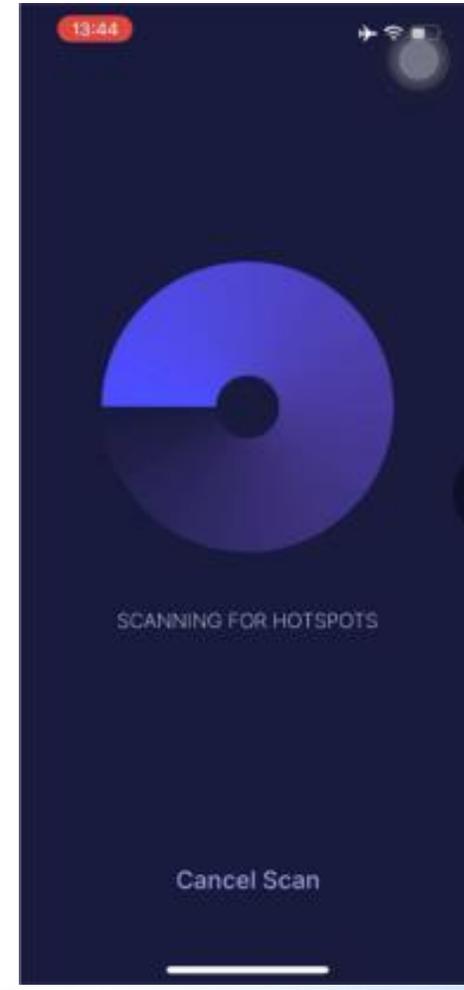
Add a Helium Miner

Choose MerryIoT Hotspot V1
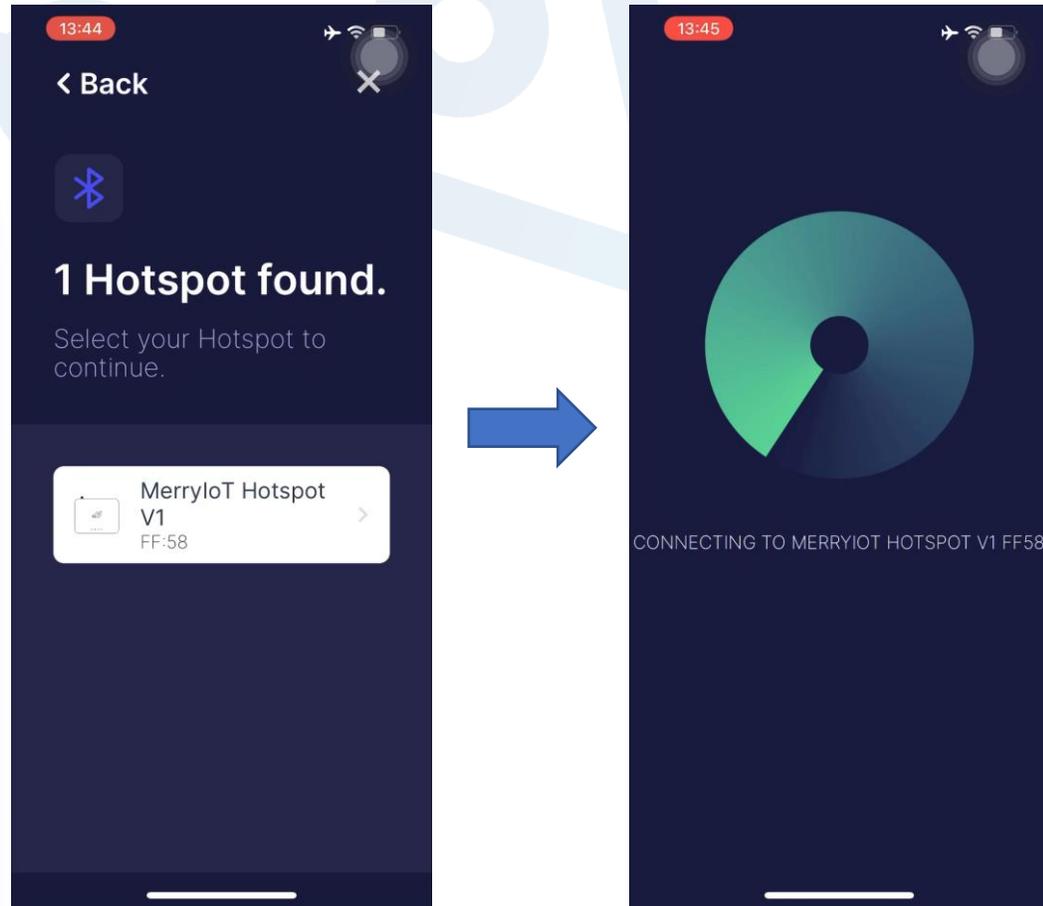
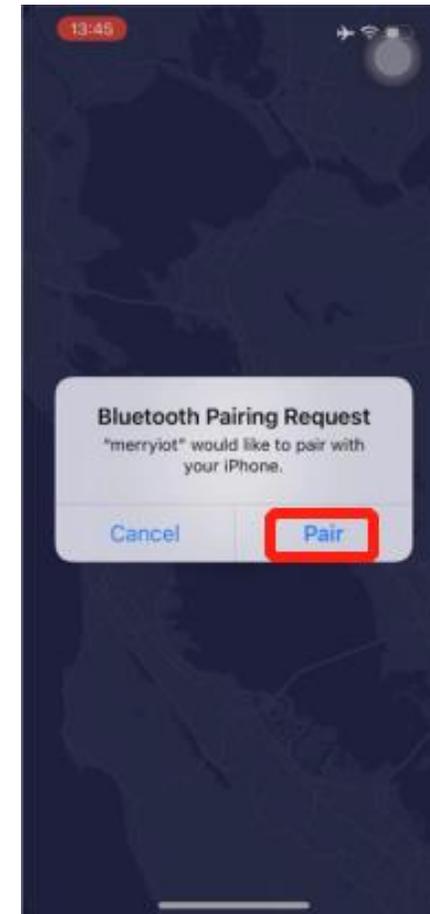# There are some hints before onboarding miner

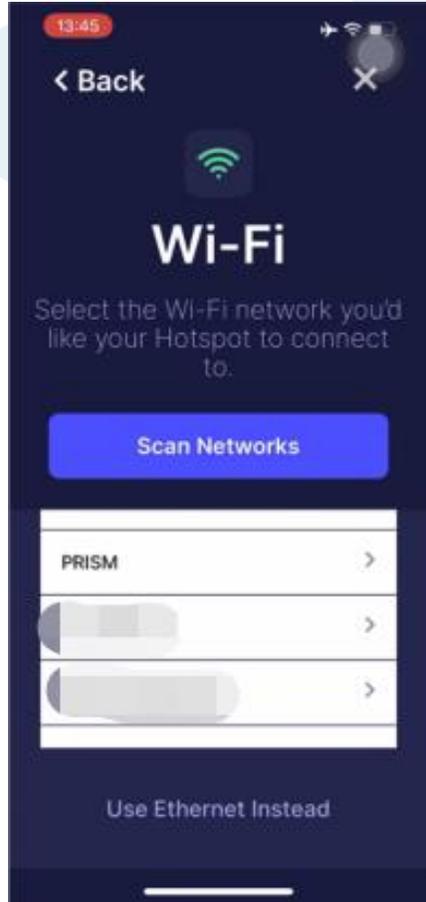# Enable smart phone's Bluetooth   Scan for Hotspot Miner
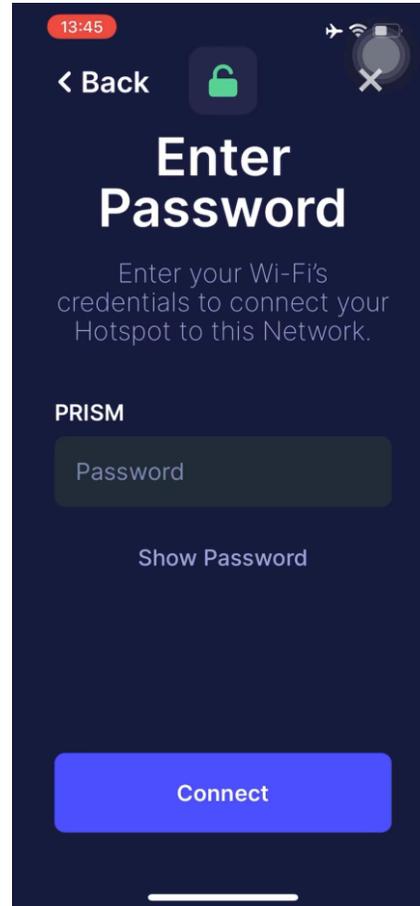
Select your Hotspot to continue

Pair with MerryIoT Hotspot Miner

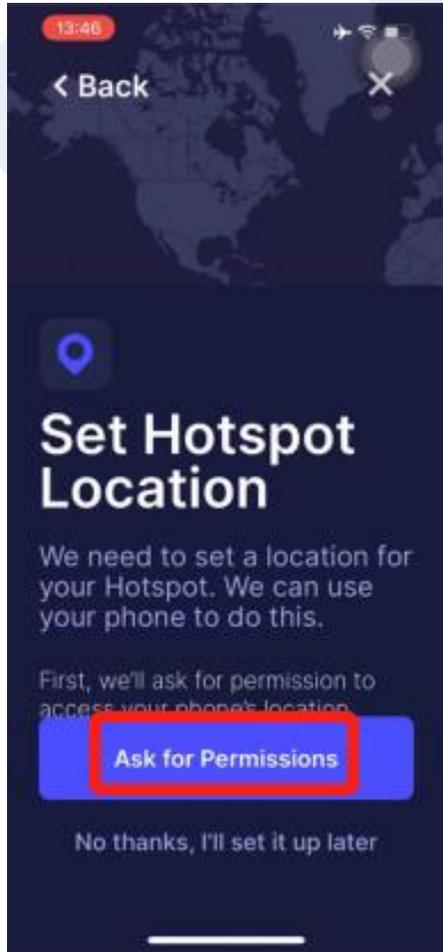# Select the WiFi network   Enter WiFi access password

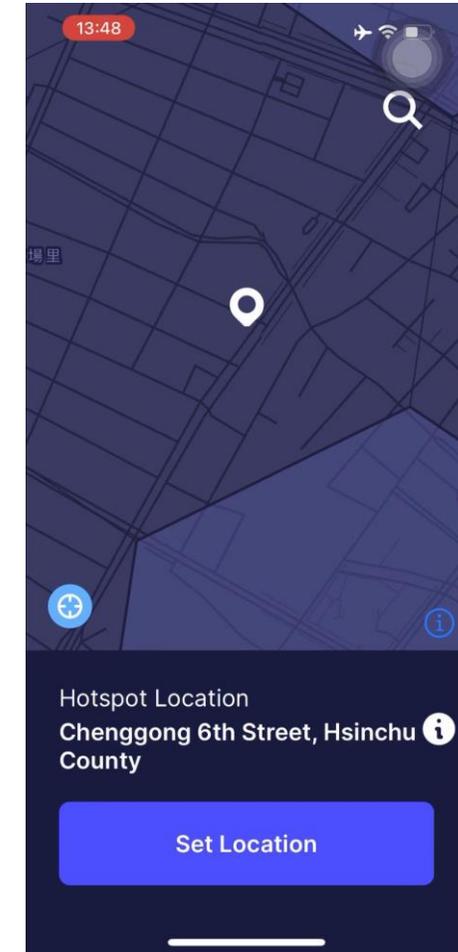# Set Hotspot Location   Enable Location Services   Set Location on the Map

Antenna Setup
(Default is 1.2 dBi)

Set Hotspot Installation Height

Register Hotspot
(Hotspot will take a while for sync up with Helium Blockchain)

THANKS