## **Monitor Handle Kit**

ASSEMBLY INSTRUCTIONS Instrucciones de instalación Notice d'assemblage Montageanleitungen

Installatie instructies

Manuali d'Istruzione 取扱い説明書

安装说明

설치 안내



www.ergotron.com



USA 1-800-888-8458 Europe +31 (0)33-45 45 600 China 400-120-3051

For service and warranty visit www.ergotron.com/warranty

Si desea información de servicio y garantía, visite www.ergotron.com/warranty

Pour toute question concernant la garantie ou le service client, consultez www.ergotron.com/warranty

Weitere Informationen zu Service und Gewährleistung erhalten Sie unter www.ergotron.com/warranty

Ga voor service en garantie naar www.ergotron.com/warranty

Per assistenza e la garanzia visitare www.ergotron.com/warranty


Gå in på www.ergotron.com/warranty för service och garanti

サービスおよび保証について詳しくは、www.ergotron.com/warrantyをご覧ください。

有关服务和保修,请访问 www.ergotron.com/warranty

## www.ergotron.com

User's Guide - English Guía del usuario - Español Manuel de l'utilisateur - Français Gebruikersgids - Nederlands Benutzerhandbuch - Deutsch Guida per l'utente - Italiano Användarhandbok - svenska ユーザーガイド: 日本語 用户指南 : 汉语

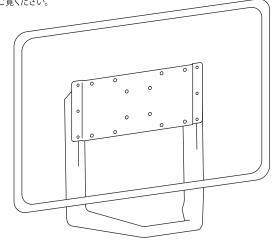







IMPORTANT! This product adds an additional 2.9 lbs. (1.3 kg) to your mounting solution. Your mounting solution's monitor weight capacity must be reduced by 2.9 lbs. (1.3 kg) when using standard monitors less than or equal to 2.5" (64 mm) thick. Additional reduction will be required if monitors are greater than 2.5" (64 mm) thick.

	А	В	С	D	E	D
1	1x	1x	<b>4x</b>	2x () M6 x 25mm		<b>4x</b>
2	1x 4 mm •		4x ()	4x	4x	2x
3	2x	<b>4x</b> M4 x 10mm	M6-M8 x 10mm	ID: 5.2 mm OD: 13 mm THK: 2.5 mm	ID: 8.5 mm OD: 18 mm THK: 2.5 mm	ID: 6.5 mm OD: 12 mm THK: 1 mm
4	<b>4x</b> (3) M4 x 15mm	<b>4x</b> M5 x 15mm	<b>4x</b> ② M4 x 30mm		<b>4x</b> (3) M5 x 30mm	
5	<b>4x</b>	4x M8 x 15mm	<b>4x</b> (3) M6 x 30mm		4x M8 x 30mm	







- There are 5 ways to mount this product. Based on what mounting solution and display you are attaching this product to, follow the appropriate mounting instructions.
  - A. Attach to mounting solution with 50 x 50 mm hole pattern and display with 100x100mm hole pattern.
  - B. Attach to mounting solution with 50 x 50 mm hole pattern and display with 200x100mm hole pattern.
  - C. Attach to mounting solution and display with 100 x 100 mm mounting hole pattern.
  - D. Attach to mounting solution and display with 200 x 100 mm mounting hole pattern.
  - E. Attach to mounting solution with 100 x 100 mm hole pattern and display with 200x100mm hole pattern.

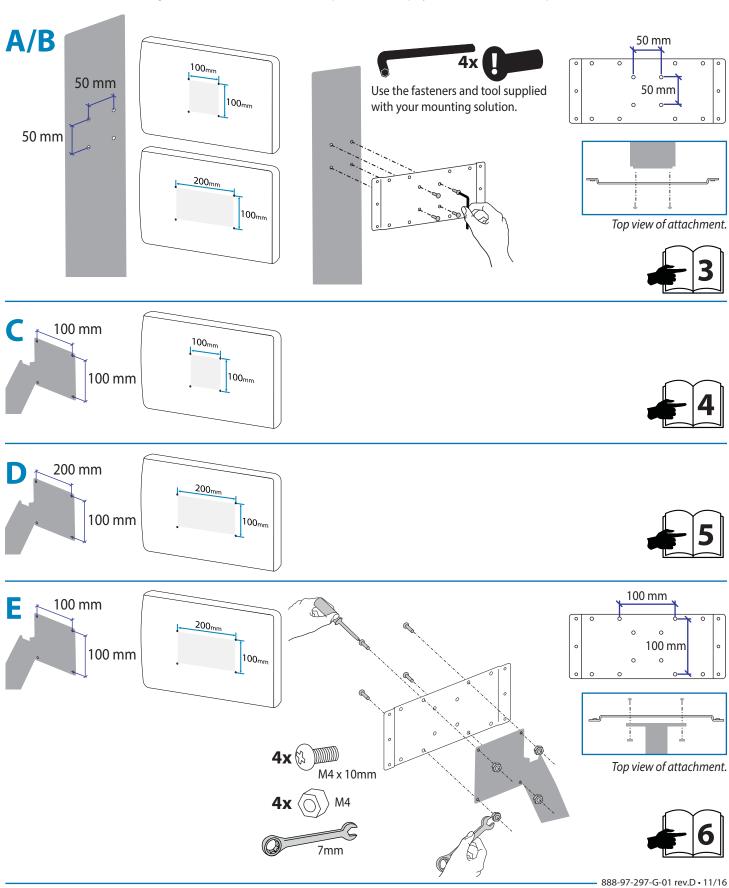


ΕN

2 of 7

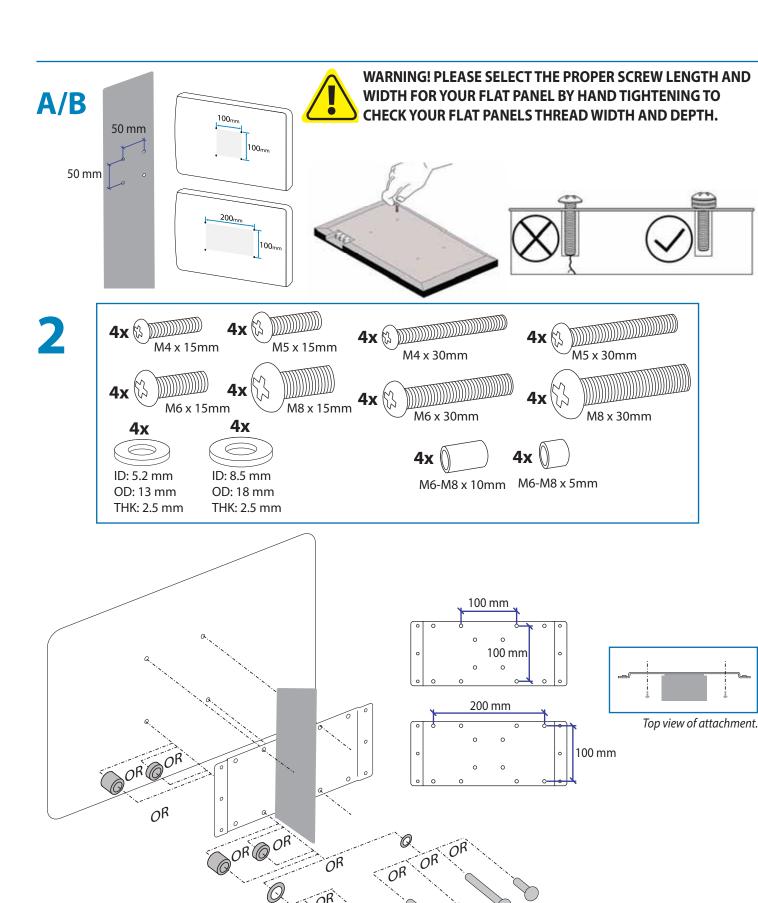











# WARNING! PLEASE SELECT THE PROPER SCREW LENGTH AND WIDTH FOR YOUR FLAT PANEL BY HAND TIGHTENING TO CHECK YOUR FLAT PANELS THREAD WIDTH AND DEPTH.

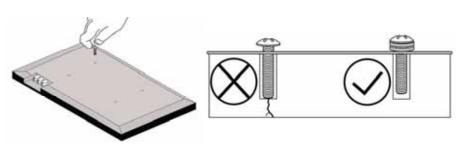




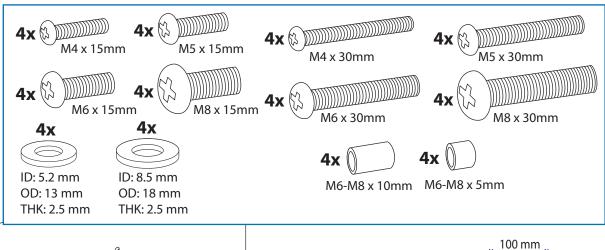

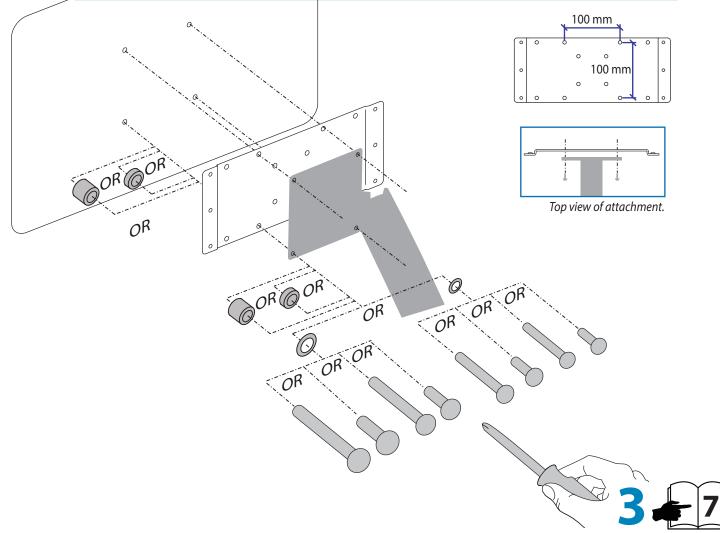










# WARNING! PLEASE SELECT THE PROPER SCREW LENGTH AND WIDTH FOR YOUR FLAT PANEL BY HAND TIGHTENING TO CHECK YOUR FLAT PANELS THREAD WIDTH AND DEPTH.

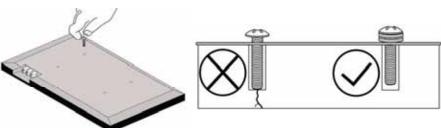




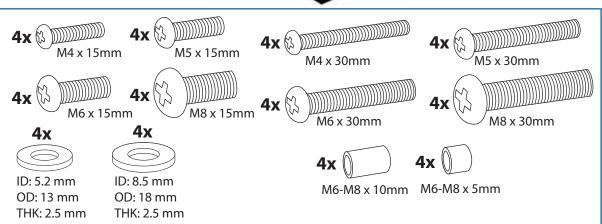

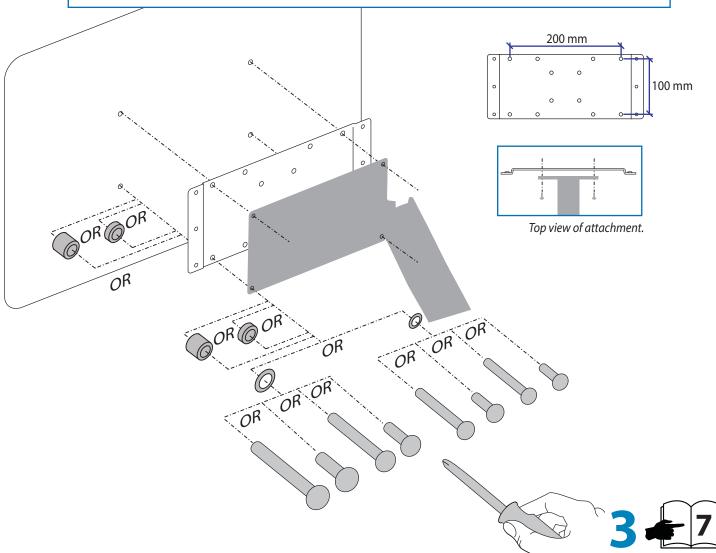


ΕN

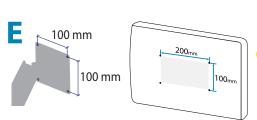





WARNING! PLEASE SELECT THE PROPER SCREW LENGTH AND WIDTH FOR YOUR FLAT PANEL BY HAND TIGHTENING TO CHECK YOUR FLAT PANELS THREAD WIDTH AND DEPTH.

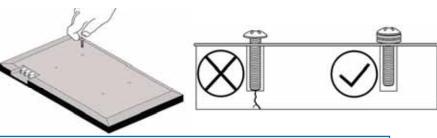




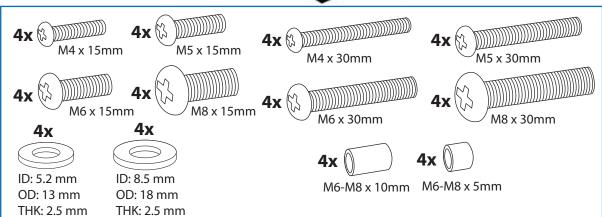

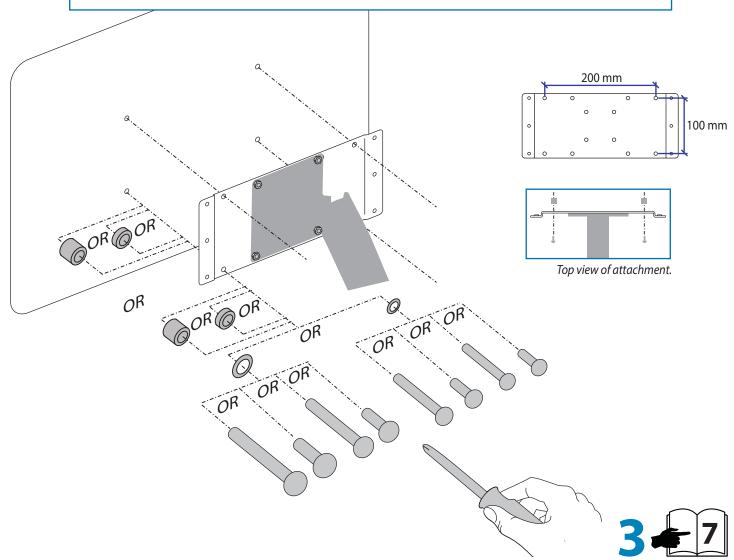




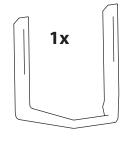

**2**x





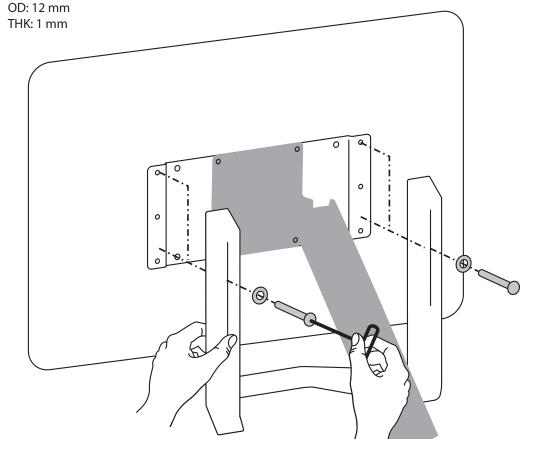



### Adjustment · Ajuste · Réglage · Einstellung · Instellen · Regolazione · 調整 · · 조절

Important! Adjust your mounting solution to handle the added weight.

You will need to adjust your product after installation is complete. Make sure all your equipment is properly installed on the product before attempting adjustments. Your mounting solution should move smoothly and easily through the full range of motion and stay where you set it. If movements are too easy or difficult or if product does not stay in desired positions, follow the adjustment instructions that came with your mounting solution to create smooth and easy movements. Depending on your product and the adjustment, it may take many turns to notice a difference. Any time equipment is added or removed from your moutning solution, resulting in a change in the weight of the mounted load, you should repeat the adjustment steps to ensure safe and optimum operation.

ΕN

## **ERGOTRON®**

 $While \ Ergotron, Inc. \ makes \ every \ effort \ to \ provide \ accurate \ and \ complete \ information \ on \ the \ installation$ and use of its products, it will not be held liable for any editorial errors or omissions (including those made in the process of translation from English to another language), or for incidental, special or consequential damages of any nature resulting from furnishing this instruction and performance of equipment in connection with this instruction. Ergotron, Inc. reserves the right to make changes in the product design and/or product documentation without notification to its users. For the most current product information, or to know if this document is available in languages other than those herein, please contact Ergotron. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of Ergotron, Inc., 1181 Trapp Road, Eagan, Minnesota, 55121, USA Patents Pending and Patented U.S. & Foreign. Ergotron is a registered trademark of Ergotron, Inc.

#### Americas Sales and **Corporate Headquarters**

St. Paul, MN USA (800) 888-8458 +1-651-681-7600 www.ergotron.com sales@ergotron.com

### **EMEA Sales**

Amersfoort, The Netherlands +31 33 45 45 600 www.ergotron.com

#### APAC Sales

#### Worldwide OEM Sales

Tokyo, Japan www.ergotron.com apaccustomerservice@ergotron.com www.ergotron.com info.oem@ergotron.com