



### WorkFit-LX, Sit-Stand Desk Mount System




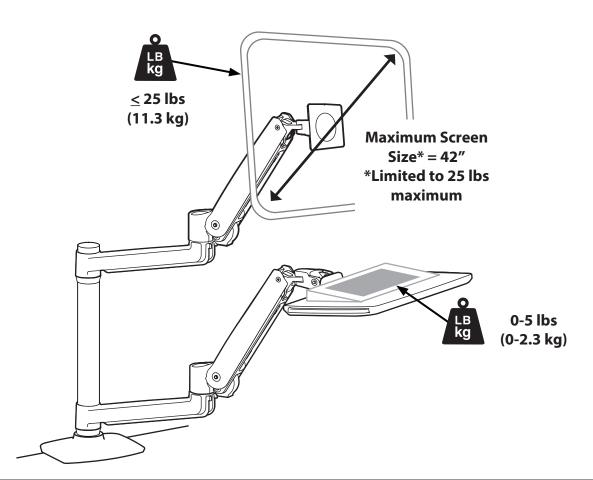

### **Tools Needed**

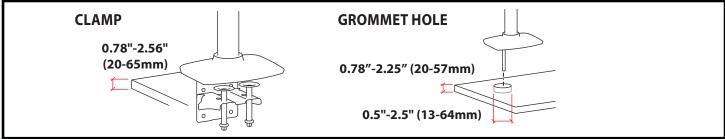





For the latest User Installation Guide please visit: www.ergotron.com




User's Guide - English Guía del usuario - Español Manuel de l'utilisateur - Français Gebruikersgids - Deutsch Benutzerhandbuch - Nederlands Guida per l'utente - Italiano Användarhandbok - svenska ユーザーガイド: 日本語

用户指南 : 汉语



### Features & Specifications

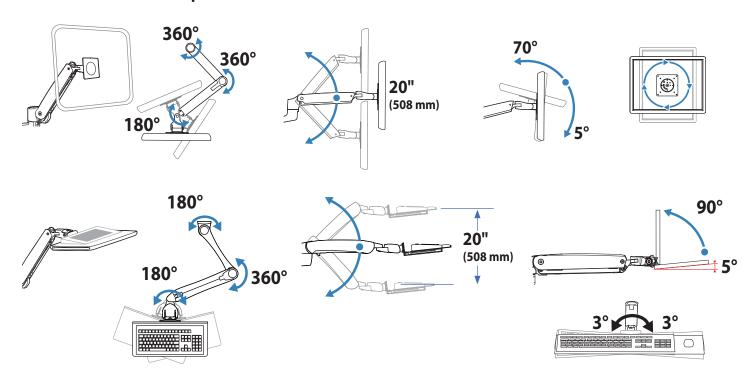


### Safety




CAUTION: DO NOT rotate monitor past rear edge of desk. Doing so will create an unstable situation and may cause equipment damage or personal injury.



CAUTION: Monitor may hit Keyboard arm in some configurations. Use caution when moving your monitor and keyboard arms.

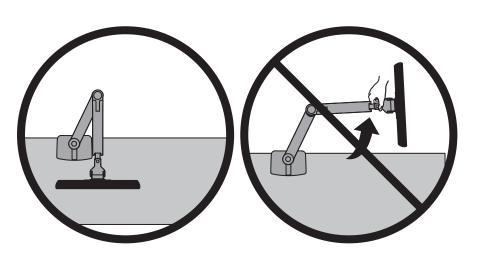


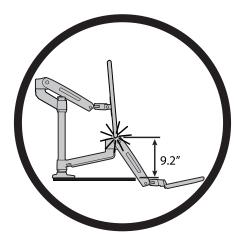



Important! You will need to adjust this product after installation is complete. Make sure all your equipment is properly installed on the product before attempting adjustments. This product should move smoothly and easily through the full range of motion and stay where you set it. If movements are too easy or difficult or if product does not stay in desired positions, follow the adjustment instructions to create smooth and easy movements. Depending on your product and the adjustment, it may take many turns to notice a difference. Any time equipment is added or removed from this product, resulting in a change in the weight of the mounted load, you should repeat these adjustment steps to ensure safe and optimum operation.

### Components

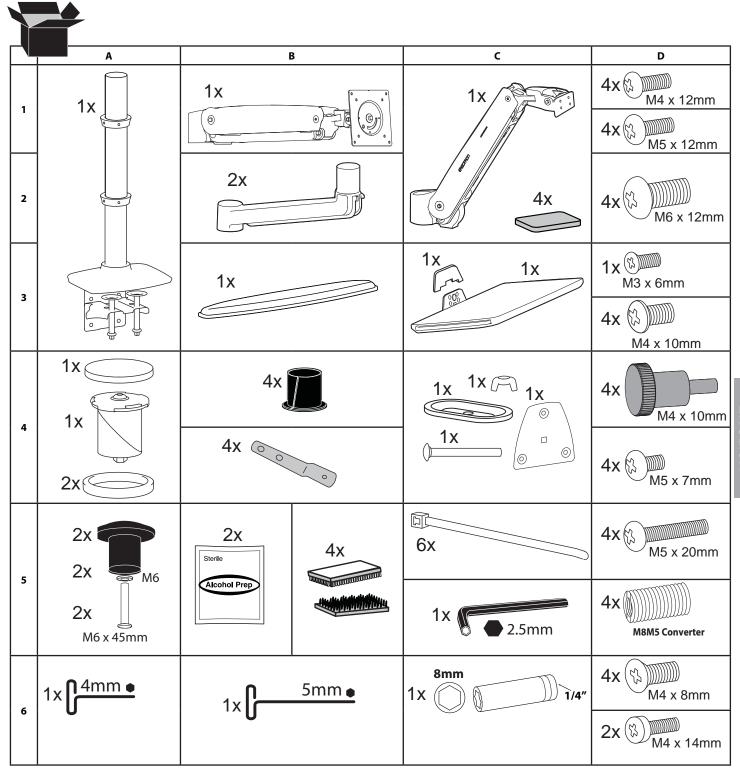


### Desk Placement

Maximum dimensions to allow keyboard arm to lower below front of desk.



CAUTION: Base must be completely on desk surface. Failure to follow these instructions may result in equipment damage or personal injury.



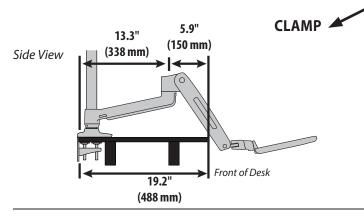

GROMMET HOLE

11.7" 5.9"


(297 mm) (150 mm)

17.6"


(447 mm)

Top View


Top View

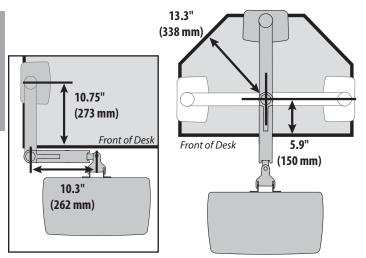


Grommet hole can be located anywhere along this arch.

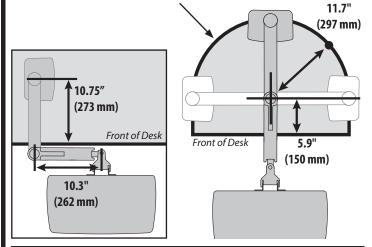


Corner mount - Top View

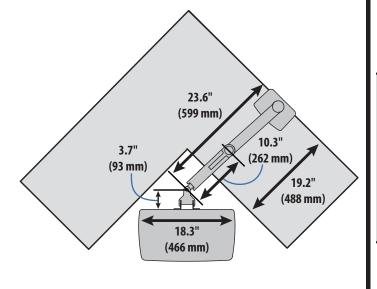




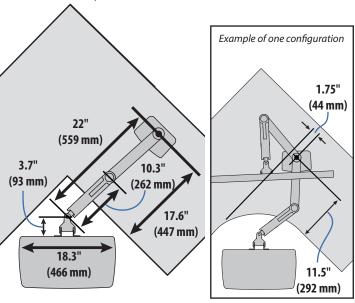


CLAMP

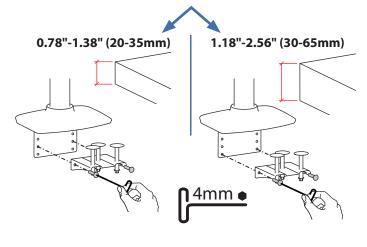


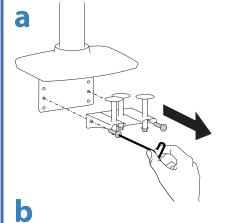




ENGLISH




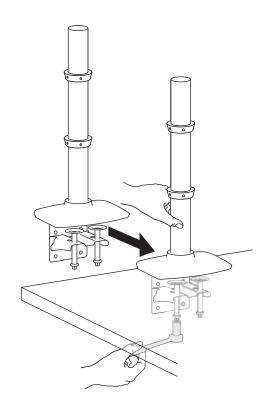


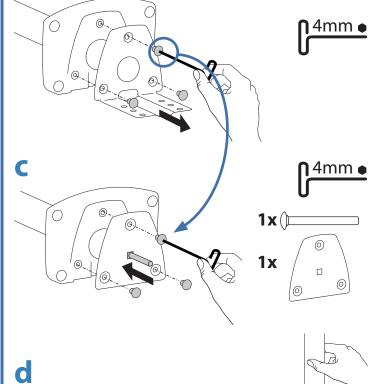





CAUTION: Bolt must be centered in hole.

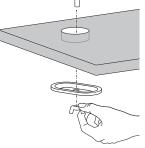


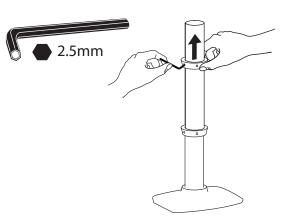


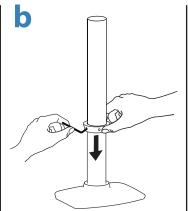


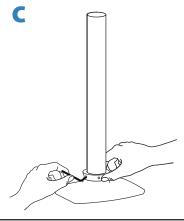

1x

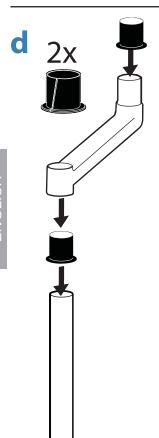


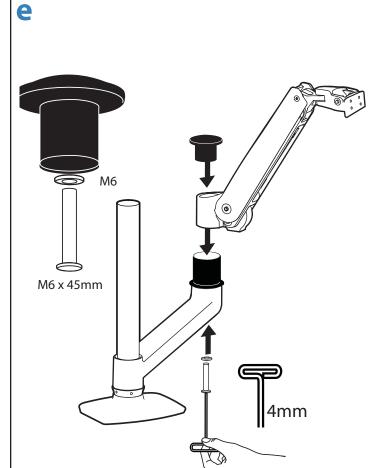


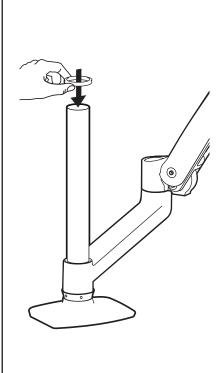





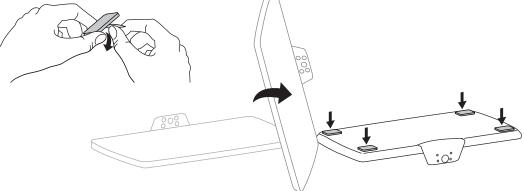

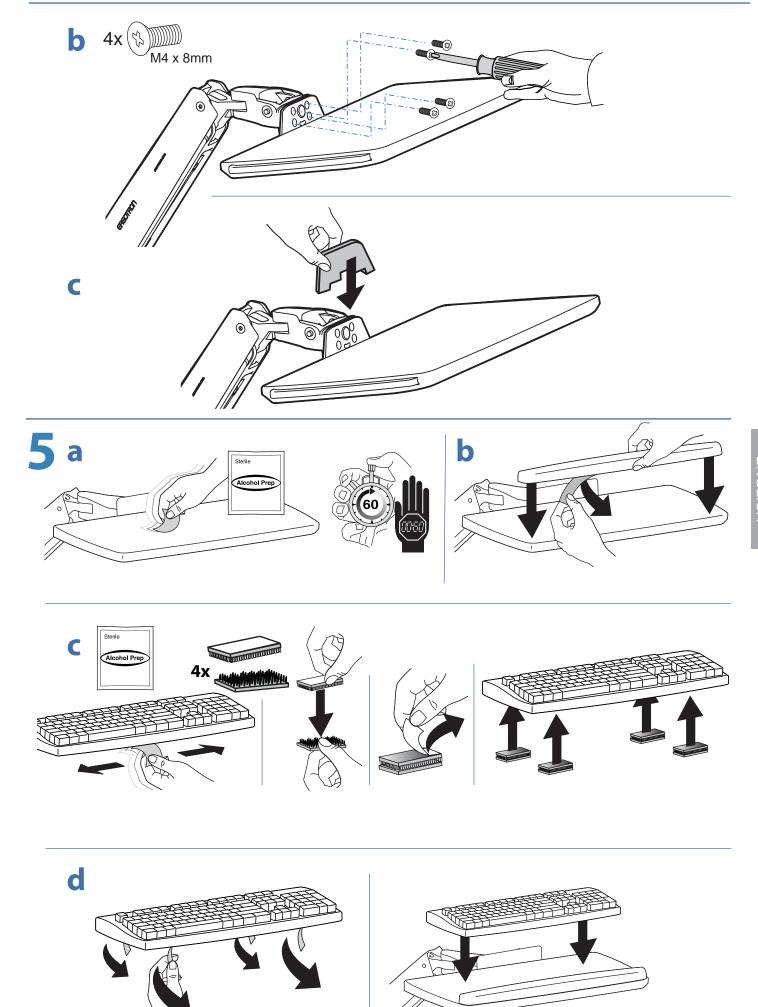

888-45-323-G-00 rev.B • 04/15




### **Portrait / Landscape Options**

OPTION i If you want full portrait/landscape rotation, skip to step 8 on the next page.


OPTION ii If you do not want your TV/Monitor to rotate all all, you can stop rotation by inseting

the set screw.



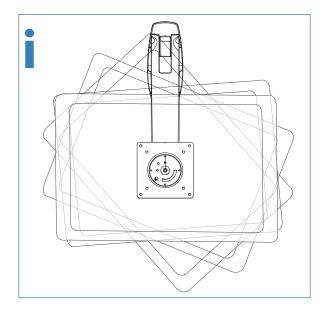



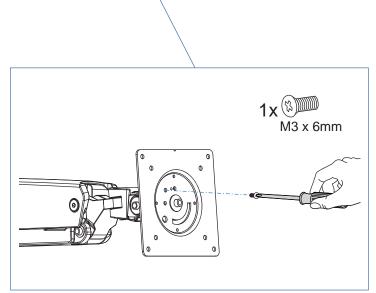



# Check size of TV/Monitor hole pattern


#### TV/Monitor Hole Pattern Sizes


# **VESA Adapter Configurations**

100mm (3-15/16") 75mm (2-15/16")

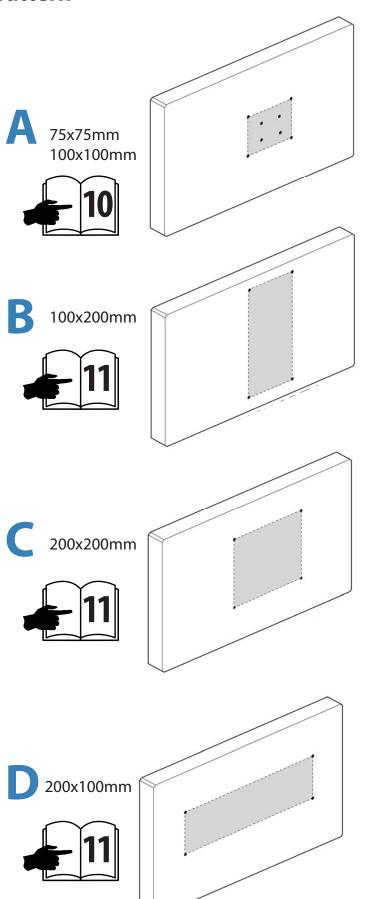


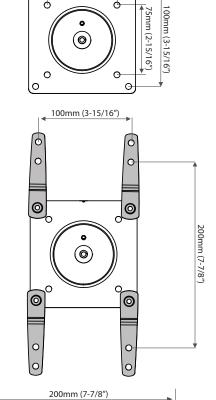


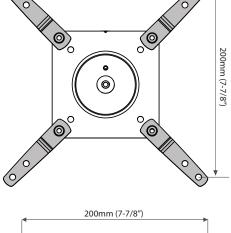

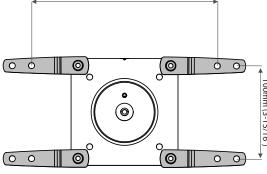


### Mount Type A TV/Monitor to Arm

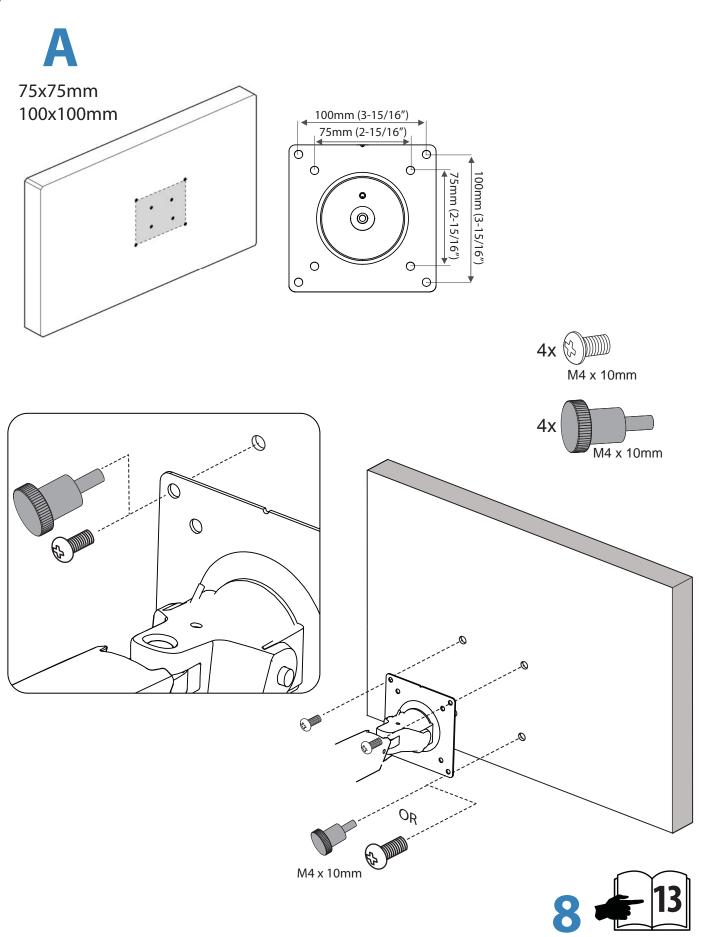

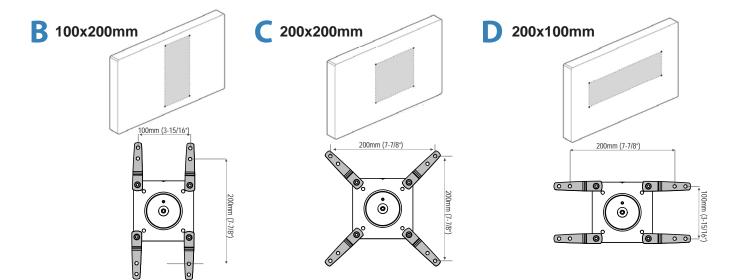


Mount VESA Adapters to Arm based on TV/Monitor hole pattern size (B, C, or D).

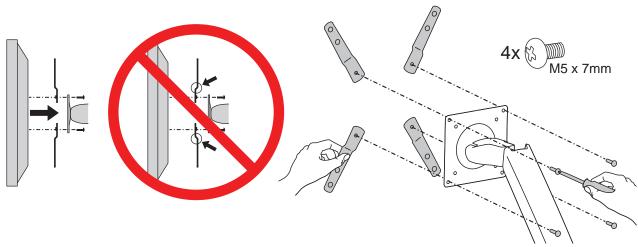

# **7**b Mount Type B, C, or D TV/Monitor to Arm

**NOTE:** To reduce M8 holes for use with M5 screws, or if you have a model with Samsung holder rings, follow the **M8M5 KIT** instructions on the next page.




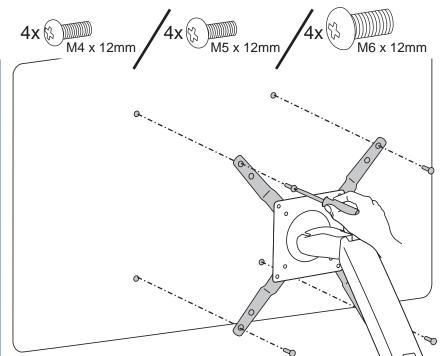


### **M8M5 KIT Instructions**

NOTE: Follow this step only if your TV/monitor has M8 holes which need to be reduced to M5.


Install M8M5 reducer bushing to TV/Monitor and use M5 x 20 mm monitor screws to secure.

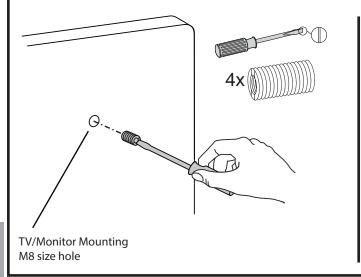


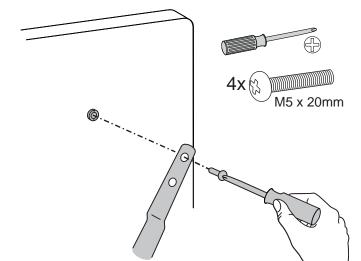


NOTE: Follow this step only for Samsung models using the holder ring.


Install M8M5 reducer bushing to TV/Monitor then use M5 x 20 mm monitor screws and Samsung holder ring to secure.

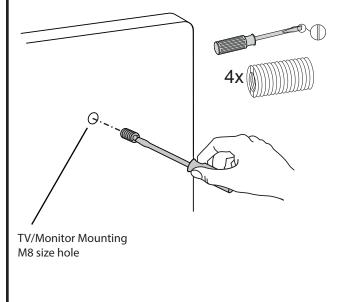

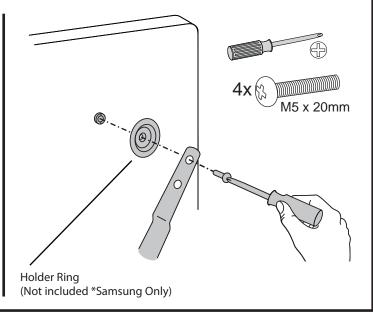

### 8 Mount extension and arm to pole.

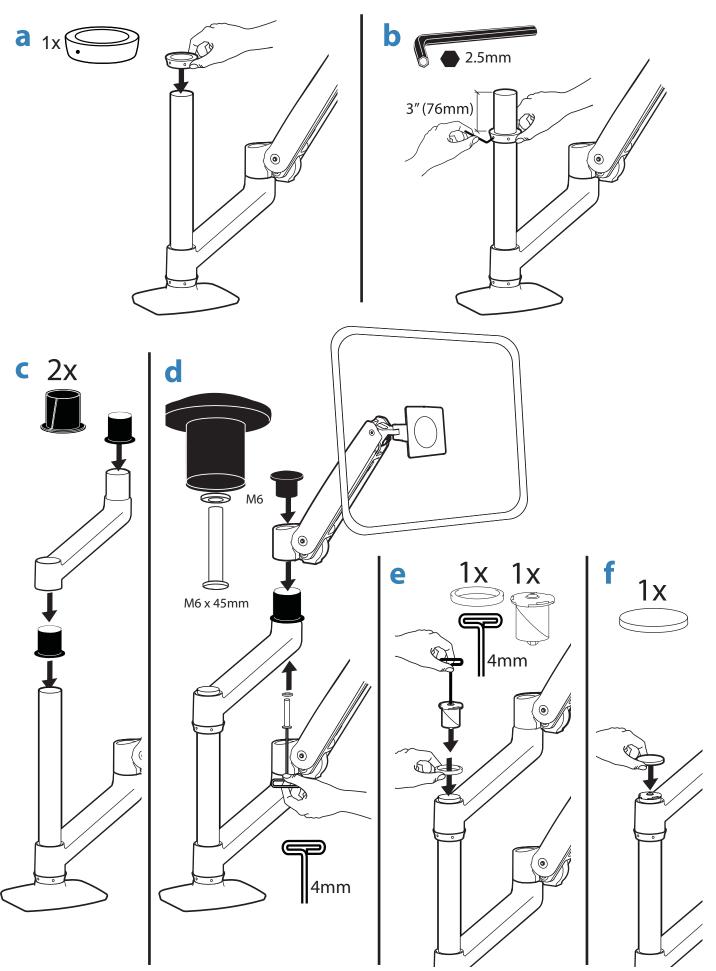

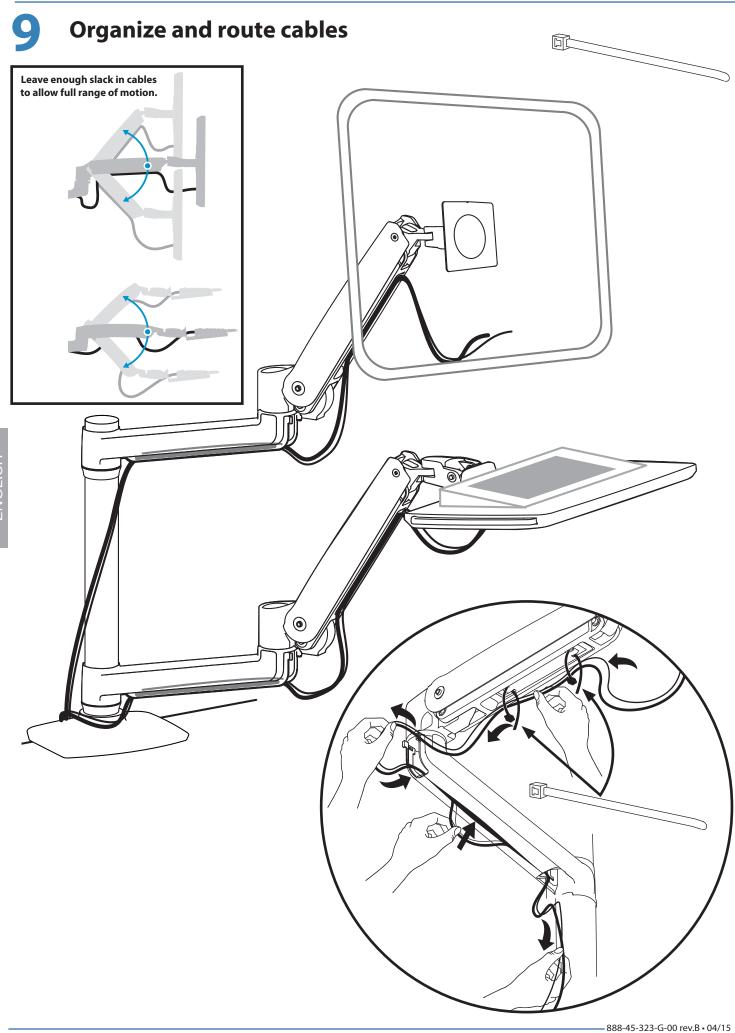




### Adjustment Step


Important! You will need to adjust this product after installation is complete. Make sure all your equipment is properly installed on the product before attempting adjustments. This product should move smoothly and easily through the full range of motion and stay where you set it. If movements are too easy or difficult or if product does not stay in desired positions, follow the adjustment instructions to create smooth and easy movements. Depending on your product and the adjustment, it may take many turns to notice a difference. Any time equipment is added or removed from this product, resulting in a change in the weight of the mounted load, you should repeat these adjustment steps to ensure safe and optimum operation.



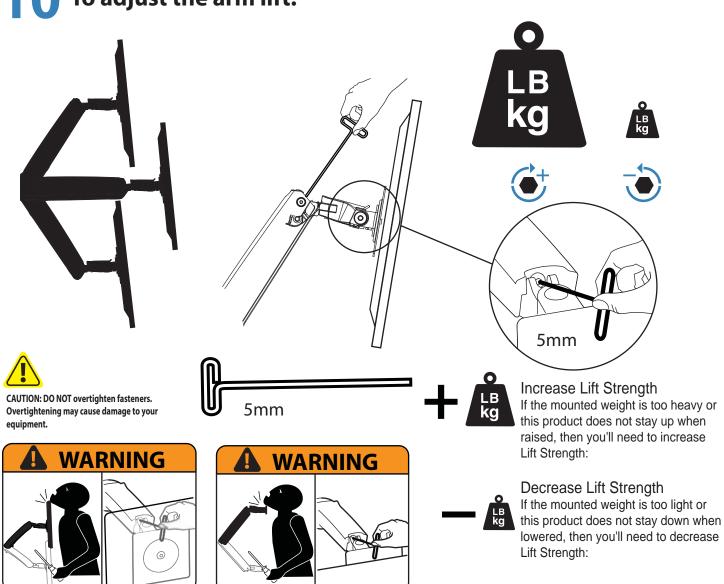

WARNING! Stored Energy Hazard: The arm mechanism is under tension and will move up rapidly, on its own, as soon as attached equipment is removed. For this reason, DO NOT remove equipment unless the arm has been moved to the highest position! Failure to follow this instruction may result in serious personal injury and/or equipment damage!

### To adjust the TV/monitor tilt:

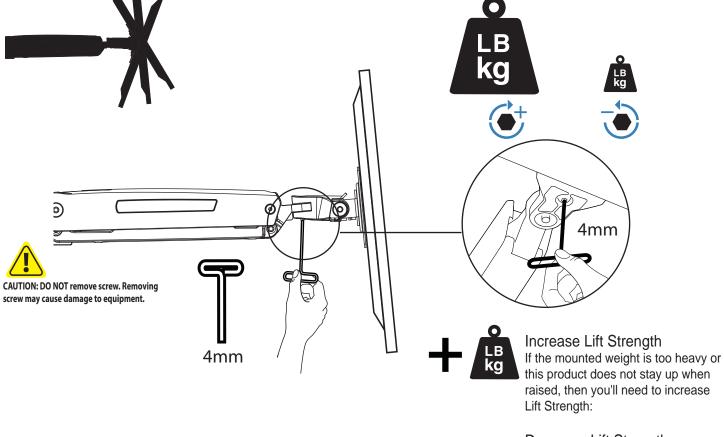


Decrease Lift Strength

If the mounted weight is too
this product does not stay of


If the mounted weight is too light or this product does not stay down when lowered, then you'll need to decrease Lift Strength:

## 12 Lift – Up and down

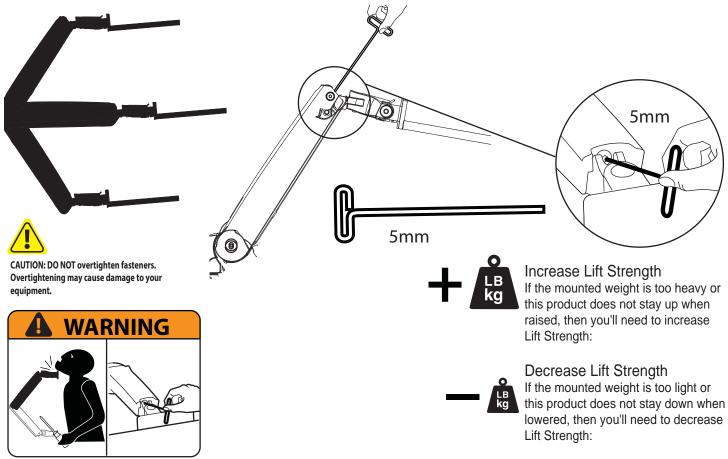


WARNING! Stored Energy Hazard: The arm mechanism is under tension and will move up rapidly, on its own, as soon as attached equipment is removed. For this reason, DO NOT remove equipment unless the arm has been moved to the highest position! Failure to follow this instruction may result in serious personal injury and/or equipment damage!


## 13 To adjust height on pole:

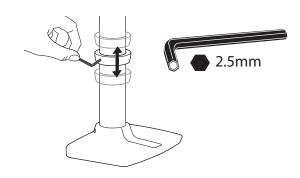

### How to remove this tilting feature:

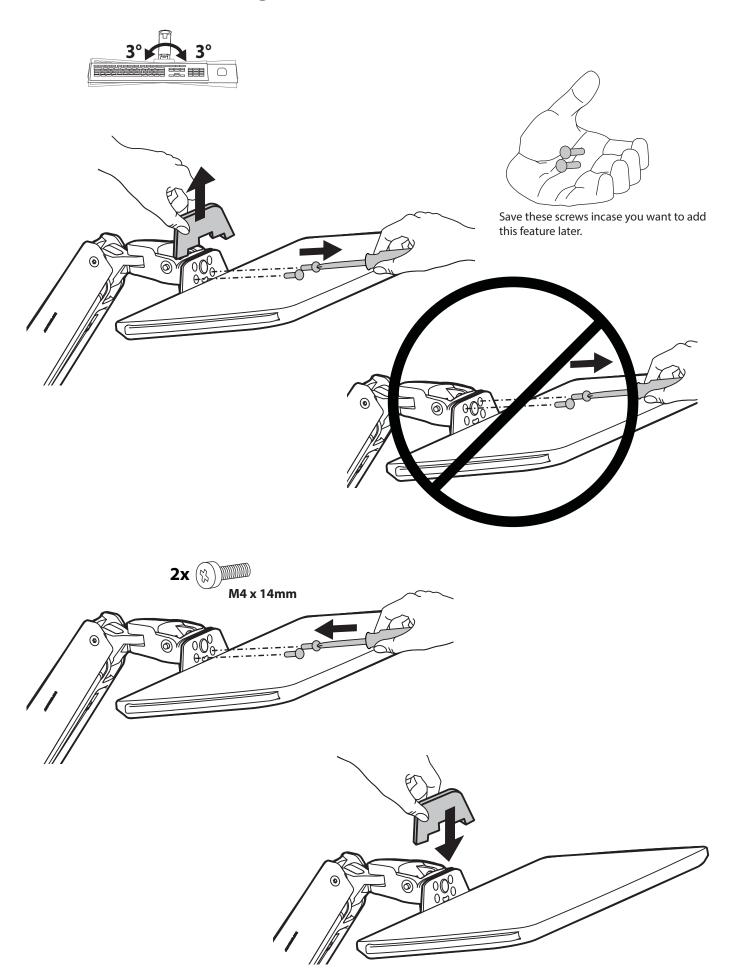

#### **Set Your Workstation to Work For YOU!**

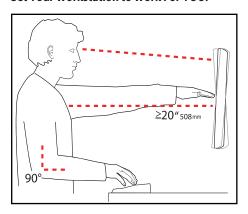

### Learn more about ergonomic computer use at: www.computingcomfort.org

Height Position top of screen slightly below eye level.

Position keyboard at about elbow height with wrists flat.

Distance Position screen an arm's length from face—at least 20" (508mm).

Position keyboard close enough to create a 90° angle in elbow.

Angle Tilt screen to eliminate glare.

Tilt the keyboard back 10° so that your wrists remain flat.

To Reduce Fatigue Breathe - Breathe deeply through your nose. Blink - Blink often to avoid dry eyes. Break • 2 to 3 minutes every 20 minutes


• 15 to 20 minutes every 2 hours.

For service and warranty visit www.ergotron.com

For local customer care phone numbers visit: http://contact.ergotron.com



NOTE: When contacting customer service, reference the serial number.

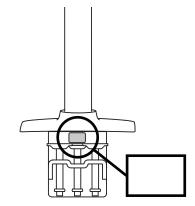

#### **ERGOTRON®**

While Ergotron, Inc. makes every effort to provide accurate and complete information on the installation and use of its products, it will not be held liable for any editorial errors or omissions (including those made in the process of translation from English to another language), or for incidental, special or consequential damages of any nature resulting from furnishing this instruction and performance of equipment in connection with this instruction. Ergotron, Inc. reserves the right to make changes in the product design and/or product documentation without notification to its users. For the most current product information, or to know if this document is available in languages other than those herein, please contact Ergotron. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of Ergotron, Inc.,1181 Trapp Road, Eagan, Minnesota, 55121, USA Patents Pending and Patented U.S.& Foreign. Ergotron is a registered trademark of Ergotron, Inc.

#### Americas Sales and Corporate Headquarters EMEA Sales

St. Paul, MN USA (800) 888-8458 +1-651-681-7600 www.ergotron.com sales@ergotron.com Amersfoort, The Netherlands +31 33 45 45 600 www.ergotron.com info.eu@ergotron.com

APAC Sales

Tokyo, Japan

www.ergotron.com
apaccustomerservice@ergotron.com
info.oem@ergotron.com