# Univeral LEDGE for all MacBook Pro Models
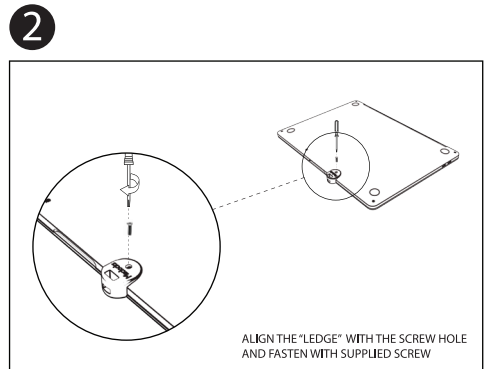Installation Guide



**❶**



REMOVE ONE OF THE TWO FRONTAL SCREWS

**❷**



ALIGN THE "LEDGE" WITH THE SCREW HOLE
AND FASTEN WITH SUPPLIED SCREW
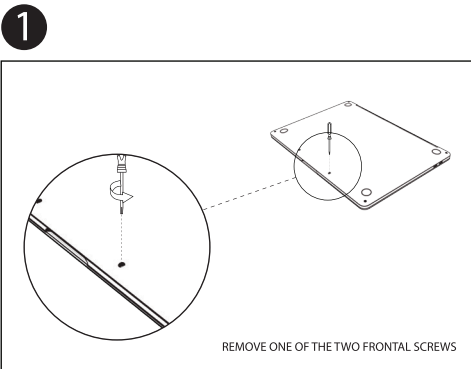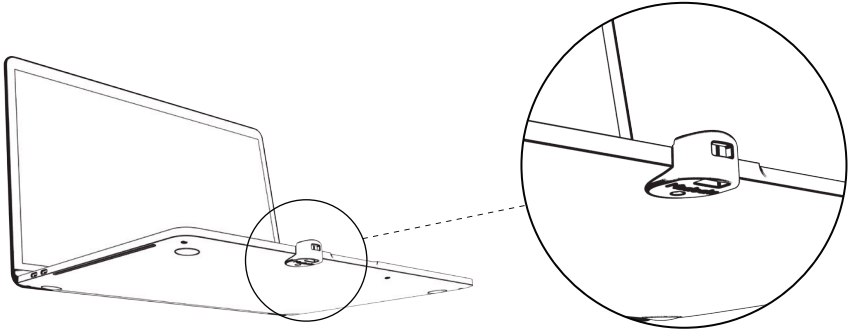
## KIT CONSISTS OF



"LEDGE" Lock Slot Adapter

Fastening Screws

Screwdriver