QuickSpecs

Overview

HPE FlexFabric 5945 Switch Series

HPE FlexFabric 5945 Switch Series is a family of high-density, ultra-low-latency, and ToR switches that is part of the HPE FlexFabric solution (from the HPE Cloud-First Reference Architecture).

Ideally suited for deployment at the aggregation or server access layer of large enterprise data centers and telecom customers. The HPE FlexFabric 5945 Switch Series is also powerful enough for deployment at the core layer of medium-sized enterprises.

With the increase in virtualized applications and server-to-server traffic, customers require spine and ToR switches that can meet their throughput requirements. With the HPE FlexFabric 5945, data centers can now support up to 100 Gb per port, allowing high-performance server connectivity and the capabilities to handle virtual environments. This is available in the low-latency HPE FlexFabric 5945 Switch Series.



HPE FlexFabric 5945 48SFP28 8QSFP28 Switch (JQ074A)



HPE FlexFabric 5945 4-slot Switch (JQ076A)



Overview



HPE FlexFabric 5945 2-slot Switch (JQ075A)



HPE FlexFabric 5945 32QSFP28 Switch (JQ077A)

Models

| HPE FlexFabric 5945 48SFP28 8QSFP28 Switch | JQ074A |
|--|--------|
| HPE FlexFabric 5945 4-slot Switch | JQ076A |
| HPE FlexFabric 5945 2-slot Switch | JQ075A |
| HPE FlexFabric 5945 32QSFP28 Switch | JQ077A |

Key Features

- Cut-through with ultra low latency and wirespeed
- These switches are NEBS certified making them the ideal fit for telecom customers (applicable for JQ074A and JQ077A)
- New 32G/16G FC support for storage networking and ROCE V1/V2 for RDMA High-Performance computing
- VXLAN, EVPN, MPLS, VTEP, and OVSDB support for virtualized environments
- High-density 100GbE/40GbE/25GbE/10GbE spine/top-of-rack (ToR) connectivity
- PTP 1588V2 IEEE 802.1AS support for Boundary Clock, Transparent Clock, End to End/Peer to Peer Transparent Clock.
- IPv6 support with full L2 and L3 features
- Includes Distributed Resilient Network Interconnect (DRNI) that offers high availability and resiliency by combining multiple physical switches into one virtual distributed-relay (DR) system.
- HPE IMC Orchestrator and Analyzer to simplify network management and operations
- Greater flexibility with two/four slot options for varying use cases such as MACsec encryption, high-performance DC leaf, storage networking with FC and NVMe storage



Quality of Service (QoS) Powerful QoS Features

• Flexible queue scheduling

Including Strict Priority (SP), WRR, WFQ, SP+WRR, SP+WDRR, SP+WFQ, configurable buffer, time range, queue shaping, and CAR with 8 kbps granularity.

• Packet filtering and remarking Packet filtering based on packet header fields from Layer 2 through Layer 4, including source MAC, destination MAC,

source IP (IPv4/IPv6), destination IP (IPv4/IPv6), port number, protocol type, and VLAN.

Data center Optimized

Flexible high port density

HPE FlexFabric 5945 Switch Series enables scaling of the server edge, with 100GbE, 40GbE. 25GbE, and 10GbE spine and leaf deployment. The HPE FlexFabric 5945 Switch Series solution includes a 48-port of 25 Gb with 8-port of , 32-port of 100 Gb and 2 modular models of respectively 1RU / 2-slot and 2RU / 4-slot

• High-performance switching

Cut-through and nonblocking architecture delivers low latency (~ 1 microsecond for 100GbE) for very demanding enterprise applications; the switch delivers high-performance switching capacity and wirespeed packet forwarding

• Higher scalability

HPE Intelligent Resilient Fabric (IRF) technology simplifies the architecture of server access networks; up to 10 HPE FlexFabric 5945 switches can be combined to deliver unmatched scalability of virtualized access layer switches and flatter 2-tier networks using HPE IRF, which reduces cost and complexity

• Advanced modular operating system

Comware v7 software's modular design and multiple processes bring native high stability, independent process monitoring, and restart; the OS also allows individual software modules to be upgraded for higher availability and supports enhanced serviceability functions such as hitless software upgrades with HPE IRF based in-service software upgrade (ISSU)

• Reversible airflow

Enhanced for data center hot-cold aisle deployment with reversible airflow—for either front-to-back or back-to-front airflow

• Redundant fans and power supplies

Internal redundant and hot-pluggable power supplies and dual fan trays enhance reliability and availability

Lower OPEX and greener data center

Provides reversible airflow and advanced chassis power management

• Data Center Bridging (DCB) protocols

Provides support for IEEE 802.1Qbb Priority Flow Control (PFC), Data Center Bridging Exchange (DCBX), IEEE 802.1Qaz Enhanced Transmission Selection (ETS), Explicit Congestion Notification (ECN) for converged FCoE, iSCSI, and RoCE environments

• Jumbo frames

With frame sizes of up to 9416 bytes on 100GbE ports, high-performance remote backup and disaster recovery services are enabled

VXLAN hardware support

VXLAN L2/L3 gateway support for up to 4K tunnels

- Dynamic VXLAN configuration
 OVSDB support for dynamic VXLAN configuration
- Security MACsec encryption with swappable interface modules for enhanced security

Convergence

• LLDP-MED (Media Endpoint Discovery)

Defines a standard extension of LLDP that stores values for parameters such as QoS and VLAN to configure network devices such as IP phones automatically



Manageability

- HPE IMC Orchestrator and Analyzer
 Offers enhanced network operations with orchestration, automation, and analytical capabilities. automated network overlay/underlay deployment enhanced visibility with application telemetry
- Al-enabled network monitoring for faster troubleshooting For more information, please refer to the <u>HPE IMC Orchestrator and Analyzer datasheet</u>
- Full-featured console Provides complete control of the switch with a familiar CLI
- Troubleshooting
 - Ingress and egress port monitoring: Enable network problem solving
 - Traceroute and ping: Enable testing of network connectivity
- Multiple configuration files

Allow multiple configuration files to be stored to a flash image

- sFlow[®] (RFC 3176)
 - Provides wirespeed traffic accounting and monitoring
- SNMP v1, v2c, and v3

Facilitates centralized discovery, monitoring, and secure management of networking devices

• Out-of-band interface

Isolates management traffic from user data plane traffic for complete isolation and total reachability, no matter what happens in the data plane

• Remote configuration and management

Delivered through a secure CLI over Telnet and SSH; role-based access control (RBAC) provides multiple levels of access; configuration rollback and multiple configurations on the flash provide ease of operation; remote visibility is provided with sFlow and SNMP v1/v2/v3, and is fully supported in **HPE Intelligent Management Center (IMC)**

• ISSU and hot patching

Provides hitless software upgrades with IRF-based ISSU and hitless patching of the modular operating system

• PTP and NTP support

Synchronizes timekeeping among distributed time servers and clients; support for Precision Time Protocol (PTP) and Network Time Protocol (NTP)

Layer 2 switching

- Address Resolution Protocol (ARP)
 Supports static, dynamic, and reverse ARP and ARP proxy
- IEEE 802.3x Flow Control Provides intelligent congestion management via PAUSE frames
- Ethernet Link Aggregation
 Provides IEEE 802.3ad Link Aggregation of up to 256 groups of 32 ports; support for LACP, LACP Local Forwarding First, and LACP Short-time provide a fast, resilient environment that is ideal for the data center
- Spanning Tree Protocol Supports STP (IEEE 802.1D), Rapid STP (RSTP, IEEE 802.1w), and Multiple STP (MSTP, IEEE 802.1s)
- VLAN support
 - Provides support for 4096 VLANs based on port
- IGMP support

Provides support for IGMP Snooping, fast-leave, and group policy; IPv6 IGMP Snooping provides L2 optimization of multicast traffic

• DHCP support at L2

Provides full DHCP Snooping support for DHCP Snooping Option 82, DHCP Relay Option 82, DHCP Snooping Trust, and DHCP Snooping Item Backup

Resiliency and high availability

• IRF technology

Enables an HPE FlexFabric switch to deliver resilient, scalable, and secured data center networks for physical and virtualized environments; groups up to 10 HPE FlexFabric 5945 switches in an HPE IRF configuration, allowing them to be configured and managed as a single switch with a single IP address; simplifies ToR deployment and management, reducing data center deployment and operating expenses

- IEEE 802.1w Rapid Convergence Spanning Tree Protocol Increases network uptime through faster recovery from failed links
- IEEE 802.1s Multiple Spanning Tree
 Provides high-link availability in multiple VLAN environments by allowing Multiple Spanning Trees
- Virtual Router Redundancy Protocol (VRRP)
 Allows groups of two routers to back each other up dynamically to create highly available routed environments
 Uitless metabolisments
- Hitless patch upgrades

Allows patches and new service features to be installed without restarting the equipment, increasing network uptime, and facilitating maintenance

- Fast protocol convergence with standard-based failure detection-Bidirectional Forwarding Detection (BFD)
 Enables link connectivity monitoring and reduces network convergence time for RIP, OSPF, BGP, IS-IS, VRRP, MPLS, and
 IRF
- Device Link Detection Protocol (DLDP)

Monitors link connectivity and shuts down ports at both ends if unidirectional traffic is detected, preventing loops in STPbased networks

Graceful restart

Allows routers to indicate to others their capability to maintain a routing table during a temporary shutdown and significantly reduces convergence times upon recovery; supports OSPF, BGP, and IS-IS

Layer 3 services

Address Resolution Protocol

Determines the MAC address of another IP host in the same subnet; supports static ARPs; gratuitous ARP allows detection of duplicate IP addresses; proxy ARP allows normal ARP operation between subnets or when subnets are separated by a L2 network

- **Dynamic Host Configuration Protocol** Simplifies the management of large IP networks and supports client and server; DHCP Relay enables DHCP operation across subnets
- Operations, administration, and maintenance (OAM) support

Provides support for Connectivity Fault Management (IEEE 802.1AG) and Ethernet in the First Mile (IEEE 802.3AH); provides additional monitoring that can be used for fast fault detection and recovery

Security

Access control lists

Provides IP L3 filtering based on source/destination IP, address/subnet, and source/destination TCP/UDP port number **RADIUS/TACACS+**

- Eases switch management security administration by using a password authentication server
- Secure shell Encrypts all transmitted data for secure remote CLI access over IP networks
- IEEE 802.1X and RADIUS network logins
 Controls port-based access for authentication and accountability
- Port security
- Allows access only to specified MAC addresses, which can be learned or specified by the administrator

Layer 3 routing

EVPN and EVPN-DCI

Can act as a VTEP, EVPN Gateway, or Border Gateway enabling virtual multipoint bridged connectivity between different Layer 2 domains over an IP network

- VRRP and VRRP Extended Allows quick failover of router ports
- Policy-based routing Makes routing decisions based on policies set by the network administrator
- Equal-Cost Multipath (ECMP) Enables multiple equal-cost links in a routing environment to increase link redundancy and scale bandwidth
- L3 IPv4 routing

Provides routing of IPv4 at media speed; supports static routes, RIP and RIPv2, OSPF, BGP, and IS-IS

• Open shortest path first

Delivers faster convergence; uses this link-state routing interior gateway protocol (IGP), which supports ECMP, NSSA, and MD5 authentication for increased security and graceful restart for faster failure recovery

• Border Gateway Protocol 4 (BGP-4)

Delivers an implementation of the BGP utilizing path vectors; uses TCP for enhanced reliability for the route discovery process; reduces bandwidth consumption by advertising only incremental updates; supports extensive policies for increased flexibility; scales to very large networks

• Intermediate system to intermediate system (IS-IS)

Uses a path vector IGP, which is defined by the ISO organization for IS-IS routing and extended by IETF RFC 1195 to operate in both TCP/IP and the OSI reference model (integrated IS-IS)

• Static IPv6 routing

Provides simple manually configured IPv6 routing

• Dual IP stack

Maintains separate stacks for IPv4 and IPv6 to ease the transition from an IPv4-only network to an IPv6-only network design

- Routing Information Protocol next generation (RIPng)
 - Extends RIPv2 to support IPv6 addressing
- OSPFv3

Provides OSPF support for IPv6

• BGP+

Extends BGP-4 to support Multiprotocol BGP (MBGP), including support for IPv6 addressing

• IS-IS for IPv6

Extends IS-IS to support IPv6 addressing

IPv6 tunneling

Allows IPv6 packets to traverse IPv4-only networks by encapsulating the IPv6 packet into a standard IPv4 packet; supports manually configured, 6 to 4, and intra-site automatic tunnel addressing protocol (ISATAP) tunnels; is an important element for the transition from IPv4 to IPv6

• Policy routing

Allows custom filters for increased performance and security; supports ACLs, IP prefix, AS paths, community lists, and aggregate policies

• Bidirectional Forwarding Detection (BFD)

Enables link connectivity monitoring and reduces network convergence time for RIP, OSPF, BGP, IS-IS, VRRP, MPLS, and IRF

Multicast Routing PIM dense and sparse modes

Provides robust support of multicast protocols

- Layer 3 IPv6 routing Provides routing of IPv6 at media speed; supports static routing, RIPng, OSPFv3, BGP4+ for IPv6, and IS-ISv6.
- Storage Network 32/16/8/4/2G Fiber Channel, FCoE, NVMe over FC, ROCE V1/V2. VSAN and Zoning, single and multi-hop SAN network.



Management

- USB support
 - File copy: Allows users to copy switch files to and from a USB flash drive
- **Multiple configuration files** Stores easily to the flash image
- SNMPv1, v2c, and v3 Facilitates centralized discovery, monitoring, and secure management of networking devices
- Out-of-band interface
 Isolates management traffic from user data plane traffic for complete isolation and total reachability, no matter what happens in the data plane

• Port mirroring

- Enables traffic on a port to be simultaneously sent to a network analyzer for monitoring
- Remote configuration and management
- Is available through a CLI
- IEEE 802.1AB Link Layer Discovery Protocol (LLDP)

Advertises and receives management information from adjacent devices on a network, facilitating easy mapping by network management applications

• sFlow (RFC 3176)

Provides scalable ASIC-based wirespeed network monitoring and accounting with no impact on network performance; this allows network operators to gather a variety of sophisticated network statistics and information for capacity planning and real-time network monitoring purposes

• Command authorization

Leverages RADIUS to link a custom list of CLI commands to an individual network administrator's login; an audit trail documents activity

• Dual flash images

Provides independent primary and secondary operating system files for backup while upgrading

• Command-line interface

Provides a secure, easy-to-use CLI for configuring the module via SSH or a switch console; provides direct real-time session visibility

• Logging

Provides local and remote logging of events via SNMP (v2c and v3) and syslog; provides log throttling and log filtering to reduce the number of log events generated

• Management interface control

Provides management access through a modem port and terminal interface, as well as in-band and out-of-band Ethernet ports; provides access through terminal interface, Telnet, or SSH

• Industry-standard CLI with a hierarchical structure

Reduces training time and expenses, and increases productivity in multivendor installations

• Management security

Restricts access to critical configuration commands; offers multiple privilege levels with password protection; ACLs provide Telnet and SNMP access; local and remote syslog capabilities allow logging of all access

Information center

Provides a central repository for system and network information; aggregates all logs, traps, and debugging information generated by the system and maintains them in order of severity; outputs the network information to multiple channels based on user-defined rules

• Network management

HPE IMC centrally configures, updates, monitors, and troubleshoots

• Remote intelligent mirroring

Mirrors ingress/egress ACL-selected traffic from a switch port or VLAN to a local or remote switch port anywhere on the network



Additional information

Green IT and power

Improves energy efficiency through the use of the latest advances in silicon development; shuts off unused ports and utilizes variable-speed fans, reducing energy costs

Warranty and support

• 1-year warranty


See <u>http://www.hpe.com/networking/warrantysummary</u> for warranty and support information included with your product purchase.

• Software releases

To find software for your product, refer to <u>http://www.hpe.com/networking/support</u>; for details on the software releases available with your product purchase, refer to <u>http://www.hpe.com/networking/warrantysummary</u>

BTO Models

| | Standard Switch Enclosures | |
|---------------|---|------------------|
| Rule # | Description | SKU |
| 1, 2, 3, 4, 5 | 5, 6,HPE FlexFabric 5945 48SFP28 8QSFP28 Switch | JQ074A |
| 7, 8 | | |
| | 48 SFP/SFP+/SFP28 ports (min=0 \ max=48) | |
| | 8 QSFP+/QSFP28 ports (min=0 \ max=8) | |
| | 3 SFP Management Port (min=0 \ max=3) | |
| | - | |
| | 2 Power Supply Slots (Min 1 required) | |
| | 5 Fan Tray Slots (Min 5 required) | |
| | • 1U - Height | |
| 1, 2, 5, 6 | HPE FlexFabric 5945 2-slot Switch | JQ075A |
| | 2 port expansion module slots | |
| | 1 SFP Management Port (min=0 \ max=1) | |
| | 2 QSFP+/QSFP28 (min=0 \ max=2) | |
| | 2 Power Supply Slots (Min 1 required) | |
| | | |
| | • 5 Fan Tray Slots (Min 5 required) | |
| 1.0 | • 10 - Height | 1007/1 |
| 1, 2 | HPE FlexFabric 5945 4-slot Switch | JQ076A |
| | 4 port expansion module slots | |
| | 3 SFP Management Port (min=0 \ max=3) | |
| | 4 Power Supply Slots (Min 2 required) | |
| | • 2 Fan Tray Slots (Min 2 required) | |
| | 2U - Height | |
| 12567 | 7, 8HPE FlexFabric 5945 32QSFP28 Switch | JQ077A |
| 1, 2, 3, 0, , | • 32 QSFP+/QSFP28 ports (min=0 \ max=32) | 300//// |
| | | |
| | 3 SFP Management Port (min=0 \ max=3) | |
| | 2 Power Supply Slots (Min 1 required) | |
| | 5 Fan Tray Slots (Min 5 required) | |
| | • 1U - Height | |
| | Configuration Rules | |
| Rule # | Description | SKU |
| 1 | The following SFP/SFP+ Transceivers install into this Switch's Management Ports and SFP+ | |
| | Ports: | |
| | HPE X115 100M SFP LC FX Transceiver | JD102B |
| | HPE X110 100M SFP LC LX Transceiver | JD120B |
| 2 | The following SFP Transceivers install into this switch's Management Port and SFP+ Ports: | 001200 |
| - | HPE X120 1G SFP LC SX Transceiver | JD118B |
| | HPE X120 1G SFP LC LX Transceiver | JD119B |
| | HPE X120 1G SFP LC LH100 Transceiver | JD103A |
| | HPE X120 1G SFP RJ45 T Transceiver | JD103A JD089B |
| 3 | The following SFP+ Transceivers install into this Switch: | JD009D |
| 5 | HPE X130 10G SFP+ LC BiDi 10km-Uplink Transceiver | JL737A |
| | HPE X130 10G SFP+ LC BiDi 10km-Downlink Transceiver | JL738A |
| | | |
| | HPE X130 10G SFP+ LC BiDi 40km-Uplink Transceiver | JL739A |
| | HPE X130 10G SFP+ LC BiDi 40km-Downlink Transceiver | JL740A |
| | HPE X130 10G SFP+ LC SR Transceiver | JD092B |
| | HPE X130 10G SFP+ LC LR Transceiver | JD094B |
| | HPE X2A0 10G SFP+ to SFP+ 7m Active Optical Cable | JL290A |
| | HPE X2A0 10G SFP+ to SFP+ 10m Active Optical Cable | JL291A |
| | HPE X2A0 10G SFP+ to SFP+ 20m Active Optical Cable | JL292A |
| | HPE FlexNetwork X240 10G SFP+ to SFP+ 0.65m Direct Attach Copper Cable | JD095C |
| | | |

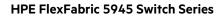

| | HPE FlexNetwork X240 10G SFP+ to SFP+ 1.2m Direct Attach Copper Cable HPE FlexNetwork X240 10G SFP+ to SFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 10G SFP+ to SFP+ 5m Direct Attach Copper Cable | JD096C JD097C JG081C |
|--------|---|----------------------------|
| Rule # | Description | SKU |
| 4 | The following SFP28 Transceivers install into this Switch: | |
| | HPE X190 25G SFP28 LC SR 100m MM Transceiver | JL293A |
| | HPE 25G SFP28 LC LR 10km SMF Xcvr | JL855A |
| | HPE X240 25G SFP28 to SFP28 1m Direct Attach Copper Cable | JL294A |
| | HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable | JL295A |
| | HPE X240 25G SFP28 to SFP28 5m Direct Attach Copper Cable | JL296A |
| | HPE X2A0 25G SFP28 to SFP28 3m Active Optical Cable HPE X2A0 25G SFP28 to SFP28 5m Active Optical Cable | JH955A JH956A |
| | HPE X2A0 25G SFP28 to SFP28 7m Active Optical Cable | JL297A |
| | HPE X2A0 25G SFP28 to SFP28 10m Active Optical Cable | JL298A |
| | HPE X2A0 25G SFP28 to SFP28 20m Active Optical Cable | JL298A JL299A |
| 5 | The following QSFP+ Transceivers install into this Switch: | JLZ99A |
| 5 | HPE X140 40G QSFP+ MPO SR4 Transceiver | JG325B |
| | HPE X140 40G QSFP+ MPO MM 850nm CSR4 300m Transceiver | JG525B JG709A |
| | HPE X140 40G QSFP+ LC BiDi 100m MM Transceiver | JL251A |
| | HPE X140 40G QSFP+ LC LR4 SM 10km 1310nm Transceiver | JG661A |
| | HPE X140 40G QSFP+ LC LR4L 2km SM Transceiver | JL286A |
| | HPE X2A0 40G QSFP+ to QSFP+ 7m Active Optical Cable | JL287A |
| | HPE X2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable | JL288A |
| | HPE X2A0 40G QSFP+ to QSFP+ 20m Active Optical Cable | JL289A |
| | HPE FlexNetwork X240 40G QSFP+ QSFP+ 1m Direct Attach Copper Cable | JG326A |
| | HPE FlexNetwork X240 40G QSFP+ QSFP+ 3m Direct Attach Copper Cable | JG327A |
| | HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable | JG328A |
| 6 | The following QSFP28 Transceivers install into this Switch: | |
| | HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver | JL274A |
| | HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver | JH419A |
| | HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver | JQ344A |
| | HPE X150 100G QSFP28 eSR4 300m MM Transceiver | JH672A |
| | HPE X150 100G QSFP28 MPO PSM4 500m SM Transceiver | JH420A |
| | HPE X150 100G QSFP28 LC LR4 10km SM Transceiver | JL275A |
| | HPE X150 100G QSFP28 CWDM4 2km SM Transceiver | JH673A |
| | HPE X2A0 100G QSFP28 to QSFP28 7m Active Optical Cable | JL276A |
| | HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable | JL277A |
| | HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable | JL278A |
| | HPE X240 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable | JL271A |
| | HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable | JL272A |
| | HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | JL273A |
| Notes: | Selection Form - | |
| | HPE Offering > DataCenter Networking > FlexFabric Switches - Access: | |
| - | HPE FlexFabric 5945 Switch Series | |
| 7 | The following QSFP28 Transceivers install into this Switch: | |
| | HPE X240 QSFP28 4xSFP28 1m Direct Attach Copper Cable | JL282A |
| | HPE X240 QSFP28 4xSFP28 3m Direct Attach Copper Cable | JL283A |
| 0 | HPE X240 QSFP28 4xSFP28 5m Direct Attach Copper Cable | JL284A |
| 8 | The following QSFP28 Transceivers install into this Switch: | |
| | HPE FlexNetwork X240 40G QSFP+ to 4x10G SFP+ 1m Direct Attach Copper Splitter Cable HPE FlexNetwork X240 40G QSFP+ to 4x10G SFP+ 3m Direct Attach Copper Splitter Cable | JG329A JG330A |
| | HPE FlexNetwork X240 40G QSFP+ to 4x10G SFP+ 5m Direct Attach Copper Splitter Cable HPE FlexNetwork X240 40G QSFP+ to 4x10G SFP+ 5m Direct Attach Copper Splitter Cable | JG331A |
| | THE FIGWARMON V240 400 GOLT - 10 4XT00 OLL - OHI DIREC ANACH COPPER Shiller Caple | JODDIA |



| Rack Lev | vel Integration CTO Models | |
|-----------------------|--|------------------|
| _ | CTO Switch Chassis | |
| Rule # | Description | SKU |
| 1, 2, 3, 4, 5 7, 8 | , 6,HPE FlexFabric 5945 48SFP28 8QSFP28 Switch | JQ074A |
| | 48 SFP/SFP+/SFP28 ports (min=0 \ max=48) | |
| | 8 QSFP+/QSFP28 ports (min=0 \ max=8) | |
| | 3 SFP Management Port (min=0 \ max=3) | |
| | • 2 Power Supply Slots (Min 1 required) | |
| | • 5 Fan Tray Slots (Min 5 required) | |
| | • 1U - Height | |
| 1, 2, 5, 6 | HPE FlexFabric 5945 2-slot Switch | JQ075A |
| | 2 port expansion module slots | |
| | 1 SFP Management Port (min=0 \ max=1) | |
| | 2 QSFP+/QSFP28 (min=0 \ max=2) | |
| | • 2 Power Supply Slots (Min 1 required) | |
| | • 5 Fan Tray Slots (Min 5 required) | |
| | 1U - Height | |
| 1, 2 | HPE FlexFabric 5945 4-slot Switch | JQ076A |
| | • 4 port expansion module slots | |
| | 3 SFP Management Port (min=0 \ max=3) | |
| | 4 Power Supply Slots (Min 2 required) | |
| | 2 Fan Tray Slots (Min 2 required) | |
| | 2U - Height | |
| 1, 2, 5, 6, 7 | /, HPE FlexFabric 5945 32QSFP28 Switch | JQ077A |
| 8 | | |
| | • 32 QSFP+/QSFP28 ports (min=0 \ max=32) | |
| | • 3 SFP Management Port (min=0 \ max=3) | |
| | 2 Power Supply Slots (Min 1 required) | |
| | • 5 Fan Tray Slots (Min 5 required) | |
| | 1U - Height | |
| | Configuration Rules | |
| Rule # | Description | SKU |
| 1 | The following SFP/SFP+ Transceivers install into this Switch's Management Ports and SFP+ Ports: | |
| | (Use #0D1 or #B01 if switch is CTO) - if applicable | |
| | HPE X115 100M SFP LC FX Transceiver | JD102B |
| | HPE X110 100M SFP LC LX Transceiver | JD120B |
| 2 | The following SFP Transceivers install into this switch's Management Ports and SFP+ Ports: | |
| | (Use #0D1 or #B01 if switch is CTO) - if applicable | |
| | HPE X120 1G SFP LC SX Transceiver HPE X120 1G SFP LC LX Transceiver | JD118B JD119B |
| | HPE X120 IG SFP LC LA Manscelver HPE X120 IG SFP LC LH100 Transcelver | JD1196 JD103A |
| | HPE X120 1G SFP RJ45 T Transceiver | JD089B |
| 3 | The following SFP+ Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if | 300070 |
| 0 | applicable | |
| | HPE X130 10G SFP+ LC BiDi 10km-Uplink Transceiver | JL737A |
| | HPE X130 10G SFP+ LC BiDi 10km-Downlink Transceiver | JL738A |
| | HPE X130 10G SFP+ LC BiDi 40km-Uplink Transceiver | JL739A |
| | HPE X130 10G SFP+ LC BiDi 40km-Downlink Transceiver | JL740A |
| | HPE X130 10G SFP+ LC SR Transceiver | JD092B |
| | HPE X130 10G SFP+ LC LR Transceiver | JD094B |
| | HPE X2A0 10G SFP+ to SFP+ 7m Active Optical Cable | JL290A |
| | | |



| HPE FlexNetwork X240 10G SFP+ to SFP+ 0SFD Direct Attach Copper Cable HPE FlexNetwork X240 10G SFP+ to SFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 10G SFP+ to SFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 10G SFP+ to SFP+ 5m Direct Attach Copper Cable HPE K190 25G SFP28 LC R 100m MM Transceiver HPE X200 25G SFP28 to SFP28 1m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Active Optical Cable HPE X240 25G SFP28 to SFP28 3m Active Optical Cable HPE X240 25G SFP28 to SFP28 10m Active Optical Cable HPE X240 25G SFP28 to SFP28 2m Active Optical Cable HPE X240 25G SFP28 to SFP28 10m Active Optical Cable HPE X240 25G SFP28 to SFP28 10m Active Optical Cable HPE X240 25G SFP28 to SFP28 20m Active Optical Cable HPE X140 40G OSFP+ HC BID 100m MM Transceiver HPE X140 40G OSFP+ MPO SR4 Transceiver HPE X140 40G OSFP+ 1C LR4 SM 10km S110nm Transceiver HPE X140 40G OSFP+ 1C LR4 SM 10km S110nm Transceiver HPE X140 40G OSFP+ 1C LR4 SM 10km S110nm Transceiver HPE X140 40G OSFP+ 1C LR4 2km SM Transceiver HPE X140 40G OSFP+ 1C LR4 2km SM Transceiver HPE X140 40G OSFP+ 1C LR4 2km SM Transceiver HPE X140 40G OSFP+ 1C CR4 SM 10km S110nm Transceiver HPE X140 40G OSFP+ 1C CR4 SM 10km S110nm Transceiver HPE X140 40G OSFP+ 10 OSFP+ 3m Direct Attach Copper Cable HPE X140 40G OSFP+ 10 CMF+ 3m Direct Attach Copper Cable HPE X140 | | HPE X2A0 10G SFP+ to SFP+ 10m Active Optical Cable | JL291A |
|---|--------|--|------------------|
| HPE FlexNetwork X240 10G SFP+ to SFP+ 12m Direct Attach Copper Cable HPE FlexNetwork X240 10G SFP+ to SFP+ 5m Direct Attach Copper Cable The following SFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X190 25G SFP28 bC SR 100m MM Transceiver HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Active Optical Cable HPE X240 25G SFP28 to SFP28 3m Active Optical Cable HPE X240 25G SFP28 to SFP28 3m Active Optical Cable HPE X240 25G SFP28 to SFP28 3m Active Optical Cable HPE X240 25G SFP28 to SFP28 7m Active Optical Cable HPE X240 25G SFP28 to SFP28 7m Active Optical Cable HPE X240 25G SFP28 to SFP28 7m Active Optical Cable HPE X240 25G SFP28 to SFP28 7m Active Optical Cable HPE X240 40G OSFP+ HPO SR4 Transceiver HPE X140 40G OSFP+ MPO SR4 Transceiver HPE X140 40G OSFP+ LC BiD 100m MM Transceiver HPE X140 40G OSFP+ LC R4 40km S01 Transceiver HPE X140 40G OSFP+ LC R4 40km S01 Transceiver HPE X140 40G OSFP+ LC R4 40km S01 Transceiver HPE X240 40G OSFP+ 10 OSFP+ 10m Active Optical Cable HPE X240 40G OSFP+ to OSFP+ 10m Active Optical Cable HPE X250 100G OSFP28 Transceivers Install Into This Switch: (Use #001 or #B01 if switch is CTO) - if applicable HPE X250 100G OSFP28 Transceivers Install Into This Switch: (Use #001 or #B01 if switch is CTO) - if applicable HPE X140 40G OSFP+ 10 OSFP+ 10m Active Optical Cable HPE X250 100G OSFP28 Transceivers Install Into This Switch: (Use #001 or #B01 if switch is CTO) - if applicable HPE X150 100G OSFP28 TO OSFP+ 5m Direct At | | HPE X2A0 10G SFP+ to SFP+ 20m Active Optical Cable | JL292A |
| HPE FlexNetwork X240 10G SFP+ to SFP4 3m Direct Attach Copper Cable HPE FlexNetwork X240 10G SFP+ to SFP4 5m Direct Attach Copper Cable The following SFP28 Transceivers install into this Switch: (Use #OD1 or #B01 if switch is CTO) - if applicable HPE X240 25G SFP28 LC SR 100m MM Transceiver HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Active Optical Cable HPE X240 25G SFP28 to SFP28 3m Active Optical Cable HPE X240 25G SFP28 to SFP28 3m Active Optical Cable HPE X240 25G SFP28 to SFP28 20m Active Optical Cable HPE X240 25G SFP28 to SFP28 20m Active Optical Cable HPE X240 25G SFP28 to SFP28 20m Active Optical Cable HPE X240 25G SFP28 to SFP28 20m Active Optical Cable HPE X140 40G OSFP+ MPO SR4 Transceiver HPE X140 40G OSFP+ LC RL4 SM 100m MT Transceiver HPE X140 40G OSFP+ LC RL4 SM 100m MT Transceiver HPE X140 40G OSFP+ LC RL4 SM 100m MT Transceiver HPE X140 40G OSFP+ LC RL4 SM 100m SM Transceiver HPE X140 40G OSFP+ 10 OSFP+ 10m Active Optical Cable HPE X240 40G OSFP+ 10 CSFP+ 3m Direct Attach Copper Cable HPE X240 40G OSFP+ 10 CSFP+ 3m Direct Attach Copper Cable HPE X240 40G OSFP+ 10 CSFP+ 3m Direct Attach Copper Cable HPE X240 40G OSFP+ 10 CSFP+ 3m Direct Attach Copper Cable HPE X240 40G OSFP+ 10 CSFP+ 3m Direct Attach Copper Cable HPE X240 40G OSFP+ 10 CSFP+ 3m Direct Attach Copper Cable HPE X250 100G OSFP28 Transceivers install into this Switch: (Use #001 or #801 if switch is CTO) - if applicable HPE X240 40G OSFP+ 10 CSFP+ 3 | | HPE FlexNetwork X240 10G SFP+ to SFP+ 0.65m Direct Attach Copper Cable | JD095C |
| HPE FlexNetwork X240 10G SFP+ to SFP- 5m Direct Attach Copper Cable The following SFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X190 25G SFP28 LC LR 100m MM Transceiver HPE X260 SFP28 LC LR 100m SMF Xcvr HPE X240 25G SFP28 to SFP28 5m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 5m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 5m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 5m Active Optical Cable HPE X240 25G SFP28 to SFP28 5m Active Optical Cable HPE X240 25G SFP28 to SFP28 5m Active Optical Cable HPE X240 25G SFP28 to SFP28 5m Active Optical Cable HPE X240 25G SFP28 to SFP28 5m Active Optical Cable HPE X240 25G SFP28 to SFP28 5m Active Optical Cable HPE X240 25G SFP28 to SFP28 5m Active Optical Cable HPE X240 25G SFP28 to SFP28 5m Active Optical Cable HPE X240 40G OSFP+ Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X140 40G OSFP+ LD LR Di 100m MM Transceiver HPE X140 40G OSFP+ LC LR 45M 10km 1310nm Transceiver HPE X140 40G OSFP+ LC LR4 SM 10km 1310nm Transceiver HPE X240 40G OSFP+ LC LR4 40km SM Transceiver HPE X240 40G OSFP+ 10 OSFP+ 7m Active Optical Cable HPE X240 40G OSFP+ 10 OSFP+ 10m Active Optical Cable HPE X240 40G OSFP+ 10 OSFP+ 10m Active Optical Cable HPE X240 40G OSFP+ 20FP 40FP 45FP 4m Direct Attach Copper Cable HPE X240 40G OSFP+ 20FP 45FP 4m Direct Attach Copper Cable HPE X250 100G OSFP28 LC R44 40m SM Transceiver HPE X250 100G OSFP28 LC SWDM4 100m MM Transceiver HPE X250 100G OSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G OSFP28 LC SWDM4 100m MM Transceiver HPE X150 1000G OSFP | | | JD096C |
| The following SFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X190 25G SFP28 LC SR 100m MM Transceiver HPE X240 25G SFP28 to SFP28 in Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 m Active Optical Cable HPE X240 25G SFP28 to SFP28 m Active Optical Cable HPE X240 25G SFP28 to SFP28 m Active Optical Cable HPE X240 25G SFP28 to SFP28 m Active Optical Cable HPE X240 25G SFP28 to SFP28 m Active Optical Cable HPE X240 25G SFP28 to SFP28 20m Active Optical Cable HPE X240 25G SFP28 to SFP28 and Active Optical Cable HPE X140 40G OSFP+ MPO SR4 Transceiver HPE X140 40G OSFP+ MPO SR4 Transceiver HPE X140 40G OSFP+ MPO MM 850nm CSR4 300m Transceiver HPE X140 40G OSFP+ 10 MM Transceiver HPE X140 40G OSFP+ 10 SFP1 M Transceiver HPE X240 40G OSFP+ to OSFP+ 10m Active Optical Cable HPE X240 40G OSFP+ to OSFP+ 10m Active Optical Cable HPE X240 40G OSFP+ to OSFP+ 10m Active Optical Cable HPE X240 40G OSFP+ to OSFP+ 10m Active Optical Cable HPE K140 40G OSFP+ to OSFP+ 10m Active Optical Cable HPE FlexNetwork X240 40G OSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE K150 100G OSFP28 MPO SR4 100m MM Transceiver HPE K150 100G OSFP28 MPO SR4 100m MM Transceiver HPE K150 100G OSFP28 MPO SR4 100m MM Transceiver HPE K150 100G OSFP28 MPO SR4 100m MM Transceiver HPE K150 100G OSFP28 MPO SR4 100m MM Transceiver HPE K150 100G OSFP28 MPO SR4 100m MM Transceiver HPE K150 100G OSFP28 MPO SR4 100m MM Transceiver <li< td=""><td></td><td></td><td>JD097C</td></li<> | | | JD097C |
| applicable HPE X190 25G SFP28 LC SR 100 m M Transceiver HPE X260 SFP28 LC LR 10km SMF Xvr HPE X240 25G SFP28 to SFP28 in Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 in Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 sm Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 sm Active Optical Cable HPE X240 25G SFP28 to SFP28 sm Active Optical Cable HPE X240 25G SFP28 to SFP28 sm Active Optical Cable HPE X240 25G SFP28 to SFP28 20 m Active Optical Cable HPE X240 25G SFP28 to SFP28 20 m Active Optical Cable HPE X240 25G SFP28 to SFP28 20 m Active Optical Cable HPE X240 25G SFP28 to SFP28 20 m Active Optical Cable HPE X140 40G OSFP+ Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X140 40G OSFP+ LC BIDI 100m MM Transceiver HPE X140 40G OSFP+ LC LR4 SM 100m Transceiver HPE X140 40G OSFP+ LC LR4 SM 100m MT Transceiver HPE X140 40G OSFP+ LC LR4 VMM SM Transceiver HPE X140 40G OSFP+ LO LR4 VMM SM Transceiver HPE X240 40G OSFP+ 10 OSFP+ 10m Active Optical Cable HPE X240 40G OSFP+ 10 OSFP+ 10m Active Optical Cable HPE X240 40G OSFP+ 10 OSFP+ 10m Active Optical Cable HPE X240 40G OSFP+ 10 OSFP+ 3m Direct Attach Copper Cable HPE HexNetwork X240 40G OSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE K150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G | | | JG081C |
| HPE X190 25G SFP28 LC SR 100m MM Transceiver HPE 25G SFP28 LC LR 10km SMF Xcvr HPE X240 25G SFP28 to SFP28 am Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 am Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 am Active Optical Cable HPE X240 25G SFP28 to SFP28 am Active Optical Cable HPE X240 25G SFP28 to SFP28 am Active Optical Cable HPE X240 25G SFP28 to SFP28 am Active Optical Cable HPE X240 25G SFP28 to SFP28 am Active Optical Cable HPE X240 25G SFP28 to SFP28 am Active Optical Cable HPE X240 25G SFP28 to SFP28 am Active Optical Cable HPE X240 25G SFP28 to SFP28 am Active Optical Cable HPE X240 25G SFP28 to SFP28 am Active Optical Cable HPE X140 40G OSFP+ HTransceiver Install into this Switch: (Use #OD1 or #B01 if switch is CTO) - if applicable HPE X140 40G OSFP+ LD BiD 100m MM Transceiver HPE X140 40G OSFP+ LC BiD 100m MM Transceiver HPE X140 40G OSFP+ LC BiD 100m MM Transceiver HPE X140 40G OSFP+ LC LR4 2km SM Transceiver HPE X240 40G OSFP+ LC LR4 2km SM Transceiver HPE X240 40G OSFP+ 10 OSFP+ 10m Active Optical Cable HPE X240 40G OSFP+ 10 OSFP+ 10m Active Optical Cable HPE X240 40G OSFP+ 10 OSFP+ 10m Active Optical Cable HPE X240 40G OSFP+ 10 OSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver<th>4</th><th></th><th></th> | 4 | | |
| HPE 25G SFP28 LC LR 10km SMF Xcvr HPE X240 25G SFP28 to SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Active Optical Cable HPE X240 25G SFP28 to SFP28 7m Active Optical Cable HPE X240 25G SFP28 to SFP28 7m Active Optical Cable HPE X240 25G SFP28 to SFP28 7m Active Optical Cable HPE X240 25G SFP28 to SFP28 7m Active Optical Cable HPE X240 25G SFP28 to SFP28 7m Active Optical Cable HPE X240 25G SFP28 to SFP28 20m Active Optical Cable HPE X240 25G SFP28 to SFP28 20m Active Optical Cable HPE X140 40G QSFP+ Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X140 40G QSFP+ MPO SR4 Transceiver HPE X140 40G QSFP+ LC LR4 M 10km 1310nm Transceiver HPE X140 40G QSFP+ LC LR4 M 10km 1310nm Transceiver HPE X140 40G QSFP+ LC LR4 Vall Xm SM Transceiver HPE X240 40G QSFP+ to QSFP+ 10m Active Optical Cable HPE X240 40G QSFP+ to QSFP+ 10m Active Optical Cable HPE X240 40G QSFP+ to QSFP+ 3m Direct Attach Copper Cable HPE X240 40G QSFP+ to QSFP+ 3m Direct Attach Copper Cable HPE HExNetwork X240 40G QSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE X150 100G QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiv | | | |
| HPE X240 25G SFP28 to SFP28 1m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 3m Active Optical Cable HPE X240 25G SFP28 to SFP28 3m Active Optical Cable HPE X240 25G SFP28 to SFP28 3m Active Optical Cable HPE X240 25G SFP28 to SFP28 3m Active Optical Cable HPE X240 25G SFP28 to SFP28 1m Active Optical Cable HPE X240 25G SFP28 to SFP28 10m Active Optical Cable HPE X240 25G SFP28 to SFP28 20m Active Optical Cable HPE X240 25G SFP28 to SFP28 20m Active Optical Cable HPE X140 40G OSFP+ MPO SR4 Transceiver HPE X140 40G OSFP+ MPO MM 850nm CSR4 300m Transceiver HPE X140 40G OSFP+ LC Bibl 100m MM Transceiver HPE X140 40G OSFP+ LC LR44 XM M Transceiver HPE X140 40G OSFP+ LC LR44 XM M Transceiver HPE X140 40G OSFP+ LC LR44 XM M Transceiver HPE X240 40G OSFP+ to OSFP+ 7m Active Optical Cable HPE X240 40G OSFP+ to OSFP+ 10m Active Optical Cable HPE X240 40G OSFP+ to OSFP+ 10m Active Optical Cable HPE K240 40G OSFP+ to OSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ OSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ OSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE K150 1000 OSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 1000 OSFP28 LC SWDM4 100m MM Transceiver HPE X150 1000 OSFP28 LC SWDM4 20m SM Transceiver HPE X150 1000 OSFP28 LC SWDM4 100m MM Transceiver HPE X150 1000 OSFP28 LC SWDM4 20m SM Transceiver HPE X150 1000 OSFP28 ND PSR4 500m SM Transceiver HPE X150 1000 OSFP28 ND PSR4 500m SM Transceiver HPE X150 10 | | | JL293A |
| HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 m Active Optical Cable HPE X240 25G SFP28 to SFP28 m Active Optical Cable HPE X240 25G SFP28 to SFP28 To m Active Optical Cable HPE X240 25G SFP28 to SFP28 To m Active Optical Cable HPE X240 25G SFP28 to SFP28 To m Active Optical Cable HPE X240 25G SFP28 to SFP28 10m Active Optical Cable HPE X240 25G SFP28 to SFP28 20m Active Optical Cable HPE X240 25G SFP28 to SFP28 20m Active Optical Cable HPE X240 40G OSFP+ Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X140 40G OSFP+ MPO SR4 Transceiver HPE X140 40G OSFP+ LC R44 MM S0m CSR4 300m Transceiver HPE X140 40G OSFP+ LC LR4 SM 10km 1310nm Transceiver HPE X140 40G OSFP+ LC LR44 2km SM Transceiver HPE X140 40G OSFP+ LC LR44 2km SM Transceiver HPE X240 40G OSFP+ to OSFP+ 7m Active Optical Cable HPE X240 40G OSFP+ to OSFP+ 20m Active Optical Cable HPE X240 40G OSFP+ to OSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ OSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE X150 100G OSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver HPE X150 100G OSFP28 MPO SR4 100m MM Transceiver <li< th=""><th></th><th></th><th>JL855A</th></li<> | | | JL855A |
| HPE X240 25G SFP28 to SFP28 5m Direct Attach Copper Cable HPE X2A0 25G SFP28 to SFP28 m Active Optical Cable HPE X2A0 25G SFP28 to SFP28 m Active Optical Cable HPE X2A0 25G SFP28 to SFP28 0m Active Optical Cable HPE X2A0 25G SFP28 to SFP28 0m Active Optical Cable HPE X2A0 25G SFP28 to SFP28 0m Active Optical Cable HPE X2A0 25G SFP28 to SFP28 0m Active Optical Cable S The following OSFP+ Transceivers install into this Switch: (Use #OD1 or #B01 if switch is CTO) - if applicable HPE X140 40G OSFP+ MPO SR4 Transceiver HPE X140 40G OSFP+ LC BiD 100m MM Transceiver HPE X140 40G OSFP+ LC BiD 100m MM Transceiver HPE X140 40G OSFP+ LC R44 SM 10km 1310nm Transceiver HPE X140 40G OSFP+ LC ER4 40km SM Transceiver HPE X140 40G OSFP+ LC BR4 40km SM Transceiver HPE X2A0 40G OSFP+ to OSFP+ 10m Active Optical Cable HPE X2A0 40G OSFP+ to OSFP+ 10m Active Optical Cable HPE X2A0 40G OSFP+ to OSFP+ 10m Active Optical Cable HPE FlexNetwork X240 40G OSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ 0SFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ 0SFP+ 5m Direct Attach Copper Cable HPE X150 100G OSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G OSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G OSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G OSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G OSFP28 LC WDM4 2km SM Transceiver HPE X150 100G OSFP28 LC WDM4 2km SM Transceiver HPE X150 100G OSFP28 LC WDM4 2km SM Transceiver HPE X150 100G OSFP28 to OSFP28 20m Active Optical Cable HPE X150 100G OSFP28 to OSFP28 10m Active Optical Cable HPE X2A0 100G OSFP28 | | | JL294A |
| HPE X2A0 25G SFP28 to SFP28 am Active Optical Cable HPE X2A0 25G SFP28 to SFP28 to Active Optical Cable HPE X2A0 25G SFP28 to SFP28 to Active Optical Cable HPE X2A0 25G SFP28 to SFP28 to Active Optical Cable HPE X2A0 25G SFP28 to SFP28 to Active Optical Cable HPE X2A0 25G SFP28 to SFP28 to Active Optical Cable The following OSFP+ Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X140 40G OSFP+ MPO SR4 Transceiver HPE X140 40G OSFP+ LC BiDi 100m MM Transceiver HPE X140 40G OSFP+ LC BiDi 100m MM Transceiver HPE X140 40G OSFP+ LC LR4 SM 10km 1310nm Transceiver HPE X140 40G OSFP+ LC LR4 Use SM Transceiver HPE X140 40G OSFP+ to OSFP+ 7m Active Optical Cable HPE X2A0 40G OSFP+ to OSFP+ 7m Active Optical Cable HPE X2A0 40G OSFP+ to OSFP+ 7m Active Optical Cable HPE X2A0 40G OSFP+ to OSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ OSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ OSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ OSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ OSFP+ 5m Direct Attach Copper Cable HPE X150 100G OSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G OSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G OSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G OSFP28 LC BAB 300m MM Transceiver HPE X150 100G OSFP28 LC SWDM4 500m SM Transceiver HPE X150 100G OSFP28 LC SWDM4 500m SM Transceiver HPE X150 100G OSFP28 to SSFP28 100 SRH 100m Cable HPE X150 100G OSFP28 to OSFP28 100 SRH 100m Cable HPE X150 100G OSFP28 to OSFP28 100 SRH 100m Cable HPE X2A0 100G OSFP28 to OSFP28 100 SRH 100m Cable HPE X2A0 | | | JL295A |
| HPE X2A0 25G SFP28 to SFP28 To Active Optical Cable HPE X2A0 25G SFP28 to SFP28 to Mactive Optical Cable HPE X2A0 25G SFP28 to SFP28 10 mactive Optical Cable HPE X2A0 25G SFP28 to SFP28 20m Active Optical Cable S The following OSFP+ Transceivers install into this Switch: (Use #OD1 or #B01 if switch is CTO) - if applicable HPE X140 40G QSFP+ MPO SR4 Transceiver HPE X140 40G QSFP+ MPO MM 850nm CSR4 300m Transceiver HPE X140 40G QSFP+ LC LR4 SM 10km 1310nm Transceiver HPE X140 40G QSFP+ LC LR4 SM 10km 1310nm Transceiver HPE X140 40G QSFP+ LC LR4 2km SM Transceiver HPE X140 40G QSFP+ to QSFP+ To Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ To Mactive Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 3m Circe Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ SFP+ 5m Direct Attach Copper Cable HPE K150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G | | | JL296A |
| HPE X2A0 25G SFP28 to SFP28 To Active Optical Cable HPE X2A0 25G SFP28 to SFP28 10m Active Optical Cable The following OSFP+ Transceivers install into this Switch: (Use #OD1 or #B01 if switch is CTO) - if applicable HPE X140 40G QSFP+ MPO SR4 Transceiver HPE X140 40G QSFP+ LC BiDi 100m MM Transceiver HPE X140 40G QSFP+ LC BiDi 100m MM Transceiver HPE X140 40G QSFP+ LC LR4 SM 10km 1310m Transceiver HPE X140 40G QSFP+ LC LR4 SM 10km 1310m Transceiver HPE X140 40G QSFP+ LC LR4 SM 10km 1310m Transceiver HPE X140 40G QSFP+ LC LR4 Values MM Transceiver HPE X140 40G QSFP+ LC LR4 Values MM Transceiver HPE X2A0 40G QSFP+ to QSFP+ To Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ SPF 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 50 SFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 50 SFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP 40 SFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable MPE X150 100G QSFP28 LC BiDi 100m MM Transceiver HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 ND PSM 4500m SM Transceiver HPE X150 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X150 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2 | | | JH955A |
| HPE X2A0 25G SFP28 to SFP28 10m Active Optical Cable HPE X2A0 25G SFP28 to SFP28 20m Active Optical Cable The following QSFP+ Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X140 40G QSFP+ MPO SR4 Transceiver HPE X140 40G QSFP+ LC BiD 100m MM Transceiver HPE X140 40G QSFP+ LC LR4 SM 10km 1310nm Transceiver HPE X140 40G QSFP+ LC LR4 SM 10km 1310nm Transceiver HPE X140 40G QSFP+ LC ER4 40km SM Transceiver HPE X2A0 40G QSFP+ to QSFP+ To Matter Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 7m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 3m Direct Attach Copper Cable HPE K2A0 40G QSFP+ to QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ SFP 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ SFP 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ SFP 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ SFP 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ SFP 3m Direct Attach Copper Cable HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BID 100m MM Transceiver HPE X150 100G QSFP28 LC BID 100m MM Transceiver HPE X150 100G QSFP28 LC BID 100m MM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X2A0 100G QSFP28 to QSFP28 To QSFP28 20m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP2 | | | JH956A |
| HPE X2A0 25G SFP28 to SFP28 20m Active Optical Cable The following OSFP+ Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X140 40G OSFP+ MPO SR4 Transceiver HPE X140 40G OSFP+ MPO MM 850nm CSR4 300m Transceiver HPE X140 40G OSFP+ LC BDI 100m MM Transceiver HPE X140 40G OSFP+ LC LR4 SM 10km 1310nm Transceiver HPE X140 40G OSFP+ LC LR4 SM 10km 1310nm Transceiver HPE X140 40G OSFP+ LC LR4 Volm SM Transceiver HPE X140 40G OSFP+ LC LR4 Volm SM Transceiver HPE X2A0 40G OSFP+ to OSFP+ 7m Active Optical Cable HPE X2A0 40G OSFP+ to OSFP+ 10m Active Optical Cable HPE X2A0 40G OSFP+ to OSFP+ 10m Active Optical Cable HPE K2A0 40G OSFP+ to QSFP+ Sm Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ OSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ SFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G OSFP+ STP Sm Direct Attach Copper Cable HPE K150 100G OSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G OSFP28 LC BID 100m MM Transceiver HPE X150 100G OSFP28 LC BID 100m MM Transceiver HPE X150 100G OSFP28 LC BID 100m MM Transceiver HPE X150 100G OSFP28 LC BID 100m MM Transceiver HPE X150 100G OSFP28 LC BID 100m MM Transceiver HPE X150 100G OSFP28 LC LR4 10km SM Transceiver HPE X150 100G OSFP28 LC LR4 10km SM Transceiver HPE X2A0 100G OSFP28 to OSFP28 100 MA Transceiver HPE X2A0 100G OSFP28 to OSFP28 100 Active Optical Cable HPE X2A0 100G OSFP28 to OSFP28 100 Active Optical Cable HPE X2A0 100G OSFP28 to OSFP28 100 Active Optical Cable HPE X2A0 100G OSFP28 to OSFP28 100 Active Optical Cable HPE X2A0 100G OSFP28 to OSFP28 100 Active Optical Cable HPE X2A0 100G OSFP28 to OSFP28 100 Active Optical Cable HPE X2A0 | | | JL297A |
| 5 The following QSFP+ Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X140 40G QSFP+ MPO SR4 Transceiver HPE X140 40G QSFP+ MPO MM 850nm CSR4 300m Transceiver HPE X140 40G QSFP+ LC BiDI 100m MM Transceiver HPE X140 40G QSFP+ LC LR4 SM 10km 1310nm Transceiver HPE X140 40G QSFP+ LC LR44 L2km SM Transceiver HPE X140 40G QSFP+ LC LR44 L2km SM Transceiver HPE X2A0 40G QSFP+ to QSFP+ 7m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 10 m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable HPE K2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable HPE FlexNetwork X240 40G QSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE X150 100G QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BWDM4 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 WPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 WPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 WPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 WPO PSM4 500m SM Transceiver HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X240 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X240 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X240 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X240 100G QSFP28 to QSFP28 10m Direct Attach Cop | | | JL298A |
| applicable HPE X140 40G QSFP+ MPO SR4 Transceiver HPE X140 40G QSFP+ MPO MM 850nm CSR4 300m Transceiver HPE X140 40G QSFP+ LC BiDi 100m MM Transceiver HPE X140 40G QSFP+ LC LR4 SM 10km 1310nm Transceiver HPE X140 40G QSFP+ LC LR4 L2km SM Transceiver HPE X140 40G QSFP+ to QSFP+ To Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable HPE FlexNetwork X240 40G QSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 0SFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 0SFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 0SFP+ 5m Direct Attach Copper Cable HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BIDI 100m MM Transceiver HPE X150 100G QSFP28 LC BIDI 100m MM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 WDP SM4 500m SM Transceiver HPE X150 100G QSFP28 WDP SM4 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 to QSFP28 Tm Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X240 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X240 100G QSFP28 to QSFP28 10m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 10m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 10m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 10m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 10m Direct Attach Coppe | _ | | JL299A |
| HPE X140 40G QSFP+ MPO SR4 Transceiver HPE X140 40G QSFP+ LC BiDI 100m MM Transceiver HPE X140 40G QSFP+ LC LR4 SM 10km 1310nm Transceiver HPE X140 40G QSFP+ LC LR4 XM 10km 1310nm Transceiver HPE X140 40G QSFP+ LC LR4 2km SM Transceiver HPE X140 40G QSFP+ LC ER4 40km SM Transceiver HPE X2A0 40G QSFP+ to QSFP+ 7m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 3m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 3m Active Optical Cable HPE K2A0 40G QSFP+ to QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ Sm Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 5m Direct Attach Copper Cable HPE K150 100G QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G QSFP28 LC BiDI 100m MM Transceiver HPE X150 100G QSFP28 LC BiDI 100m MM Transceiver HPE X150 100G QSFP28 SR4 300m MM Transceiver HPE X150 100G QSFP28 LC BiDI 100m MM Transceiver HPE X150 100G QSFP28 LC R4 10km SM Transceiver HPE X150 100G QSFP28 LC R4 10km SM Transceiver HPE X150 100G QSFP28 LC R4 10km SM Transceiver HPE X150 100G QSFP28 LC R4 10km SM Transceiver HPE X150 100G QSFP28 LC R4 10km SM Transceiver HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X240 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X240 100G QSFP28 to | 5 | | |
| HPE X140 40G QSFP+ MPO MM 850nm CSR4 300m Transceiver HPE X140 40G QSFP+ LC BiD 100m MM Transceiver HPE X140 40G QSFP+ LC LR4 SM 10km 1310nm Transceiver HPE X140 40G QSFP+ LC LR4 L2 km SM Transceiver HPE X140 40G QSFP+ LC ER4 40km SM Transceiver HPE X2A0 40G QSFP+ to QSFP+ 7m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 20m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 20m Active Optical Cable HPE Network X240 40G QSFP+ to QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 0SFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 0SFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 0SFP+ 5m Direct Attach Copper Cable HPE The following QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver HPE X150 100G QSFP28 BRV PSM4 500m SM Transceiver HPE X150 100G QSFP28 MPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 to QSFP28 7m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X2A0 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X2A0 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Dir | | | |
| HPE X140 40G QSFP+ LC BiDi 100m MM Transceiver HPE X140 40G QSFP+ LC LR4 SM 10km 1310nm Transceiver HPE X140 40G QSFP+ LC LR4 2km SM Transceiver HPE X140 40G QSFP+ LC ER4 40km SM Transceiver HPE X140 40G QSFP+ to QSFP+ 7m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 20m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 20m Active Optical Cable HPE FlexNetwork X240 40G QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ 0SFP+ 3m Direct Attach Copper Cable HPE X150 100G QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver HPE X150 100G QSFP28 NPO SR4 500m SM Transceiver HPE X150 100G QSFP28 LC R4 10km SM Transceiver HPE X150 100G QSFP28 LC QVDM4 2km SM Transceiver HPE X150 100G QSFP28 to QSFP28 7m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X2A0 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X2A0 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct A | | | JG325B |
| HPE X140 40G QSFP+ LC LR4 SM 10km 1310nm Transceiver HPE X140 40G QSFP+ LC LR4L 2km SM Transceiver HPE X140 40G QSFP+ LC ER4 40km SM Transceiver HPE X2A0 40G QSFP+ to QSFP+ 7m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 20m Active Optical Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 1m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE The following QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BBD 100m MM Transceiver HPE X150 100G QSFP28 LC BWDM 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 LC QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | | JG709A |
| HPE X140 40G QSFP+ LC LR4L 2km SM Transceiver HPE X140 40G QSFP+ LC ER4 40km SM Transceiver HPE X2A0 40G QSFP+ to QSFP+ 7m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 20m Active Optical Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE X150 100G QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BiDI 100m MM Transceiver HPE X150 100G QSFP28 LC BiDI 100m MM Transceiver HPE X150 100G QSFP28 LC BiDI 100m MM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 to QSFP28 To Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable<td></td><td></td><td>JL251A</td> | | | JL251A |
| HPE X140 40G QSFP+ LC ER4 40km SM Transceiver HPE X2A0 40G QSFP+ to QSFP+ 7m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 20m Active Optical Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 1m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE X150 100G QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BiD 100m MM Transceiver HPE X150 100G QSFP28 NPO SN4 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 to QSFP28 Transceiver HPE X150 100G QSFP28 to QSFP28 Transceiver HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X240 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | | JG661A |
| HPE X2A0 40G QSFP+ to QSFP+ 7m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 20m Active Optical Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 1m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE RexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE The following QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver HPE X150 100G QSFP28 MPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 to QSFP28 To QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | | JL286A |
| HPE X2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable HPE X2A0 40G QSFP+ to QSFP+ 20m Active Optical Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 1m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable 6 The following QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver HPE X150 100G QSFP28 BR4 300m MM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 to QSFP28 Transceiver HPE X2A0 100G QSFP28 to QSFP28 To Mactive Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | | JL306A |
| HPE X2A0 40G QSFP+ to QSFP+ 20m Active Optical Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 1m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable The following QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BiDI 100m MM Transceiver HPE X150 100G QSFP28 BMPO SR4 100m MM Transceiver HPE X150 100G QSFP28 LC BiDI 100m MM Transceiver HPE X150 100G QSFP28 LC BiDI 100m MM Transceiver HPE X150 100G QSFP28 LC BiDI 100m MM Transceiver HPE X150 100G QSFP28 BMPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 LC QSFP28 Transceiver HPE X150 100G QSFP28 LC QSFP28 Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 to QSFP28 Transceiver HPE X2A0 100G QSFP28 to QSFP28 Transceiver HPE X240 100G QSFP28 to QSFP28 Transceiver | | | JL287A |
| HPE FlexNetwork X240 40G QSFP+ QSFP+ 1m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable The following QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver HPE X150 100G QSFP28 MPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 to QSFP28 Transceiver HPE X150 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | | JL288A |
| HPE FlexNetwork X240 40G QSFP+ QSFP+ 3m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable The following QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver HPE X150 100G QSFP28 eSR4 300m MM Transceiver HPE X150 100G QSFP28 MPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 to QSFP28 Transceiver HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | | JL289A |
| HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable The following QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver HPE X150 100G QSFP28 eSR4 300m MM Transceiver HPE X150 100G QSFP28 MPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 CWDM4 2km SM Transceiver HPE X150 100G QSFP28 to QSFP28 Tm Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | | JG326A JG327A |
| 6 The following QSFP28 Transceivers install into this Switch: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver HPE X150 100G QSFP28 eSR4 300m MM Transceiver HPE X150 100G QSFP28 MPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 CWDM4 2km SM Transceiver HPE X150 100G QSFP28 to QSFP28 The Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X240 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | | JG327A JG328A |
| if applicable HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver HPE X150 100G QSFP28 eSR4 300m MM Transceiver HPE X150 100G QSFP28 MPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 CWDM4 2km SM Transceiver HPE X150 100G QSFP28 to QSFP28 7m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | 6 | | JGJZOA |
| HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver HPE X150 100G QSFP28 eSR4 300m MM Transceiver HPE X150 100G QSFP28 MPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 CWDM4 2km SM Transceiver HPE X150 100G QSFP28 to QSFP28 7m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | 0 | | |
| HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver HPE X150 100G QSFP28 eSR4 300m MM Transceiver HPE X150 100G QSFP28 MPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 CWDM4 2km SM Transceiver HPE X2A0 100G QSFP28 to QSFP28 7m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | | JL274A |
| HPE X150 100G QSFP28 eSR4 300m MM Transceiver HPE X150 100G QSFP28 MPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 CWDM4 2km SM Transceiver HPE X2A0 100G QSFP28 to QSFP28 7m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | | JH419A |
| HPE X150 100G QSFP28 MPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 CWDM4 2km SM Transceiver HPE X2A0 100G QSFP28 to QSFP28 7m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable HPE X240 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver | JQ344A |
| HPE X150 100G QSFP28 LC LR4 10km SM Transceiver HPE X150 100G QSFP28 CWDM4 2km SM Transceiver HPE X2A0 100G QSFP28 to QSFP28 7m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable HPE X240 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | HPE X150 100G QSFP28 eSR4 300m MM Transceiver | JH672A |
| HPE X150 100G QSFP28 CWDM4 2km SM Transceiver HPE X2A0 100G QSFP28 to QSFP28 7m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable HPE X240 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | HPE X150 100G QSFP28 MPO PSM4 500m SM Transceiver | JH420A |
| HPE X2A0 100G QSFP28 to QSFP28 7m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable HPE X240 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | HPE X150 100G QSFP28 LC LR4 10km SM Transceiver | JL275A |
| HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable HPE X240 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | HPE X150 100G QSFP28 CWDM4 2km SM Transceiver | JH673A |
| HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable HPE X240 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | HPE X2A0 100G QSFP28 to QSFP28 7m Active Optical Cable | JL276A |
| HPE X240 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable | JL277A |
| HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable | JL278A |
| HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | | HPE X240 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable | JL271A |
| | | | JL272A |
| | | | JL273A |
| | 7 | If HPE CTO Switch Chassis is selected for Rack Level Integration, Then the Switch needs to | |
| integrate (with #0D1) to the Rack. | | | |
| Notes: Clic UNB - If an option is ordered with #0D1/#B01, then the switch must have #0D1 option. | Notes: | Clic UNB - It an option is ordered with #0D1/#B01, then the switch must have #0D1 option. | |



| Switch Op | tions | |
|---------------------------------------|---|------------------|
| Enter the fol | lowing menu selections as integrated to the CTO Model X server above if order is factory built. | |
| Rule # | Description | SKU |
| | Modules | |
| | (JQ076A) System (std 0 // max 4) User Selection (min 1 // max 4) | |
| 1, 2, 7, 8, 11 12, 15 | , HPE 5930 24-port SFP+ and 2-port QSFP+ Module | JH180A |
| | 24 1G/10G SFP/SFP+ ports (min=0 \ max=24) | |
| | 2 40G QSFP+ ports (min=0 \ max=2) | |
| 1, 2, 7, 8, 11 12, 15 | , HPE 5930 24-port SFP+ and 2-port QSFP+ with MACsec Module | JH181A |
| | 24 1G/10G SFP/SFP+ ports (min=0 \ max=24) | |
| | • 2 40G QSFP+ ports (min=0 \ max=2) | |
| 2, 8, 11 | HPE 5930 24-port 10GBASE-T and 2-port QSFP+ with MACsec Module | JH182A |
| | • 24 1/10GBase-T ports | |
| | • 2 40G QSFP+ ports (min=0 \ max=2) | |
| 2, 8, 11 | HPE 5930 8-port QSFP+ Module | JH183A |
| | • 8 40G QSFP+ ports (min=0 \ max=8) | |
| 1,7, 12, 14, 16, 18 | HPE FlexFabric 16-Port 16/32G FC Converged port interface module | JL865A |
| | 16 Converged 10G/25G SFP+/SFP28 16/32Gb FC ports (min=0 \ max=16) | |
| 1, 2, 7, 8, 11 12, 13, 15, 17 | , HPE 5930 24-port Converged Port and 2-port QSFP+ Module | JH184A |
| | 24 Converged 1G/10G SFP/SFP+ 8G FC ports (min=0 \ max=24) | |
| | • 2 40G QSFP+ ports (min=0 \ max=2) | |
| Rule # | Description | SKU |
| 3, 8, 11 | HPE 5950 16-port QSFP+ Module | JH405A |
| | 16 40G QSFP+ ports (min=0 \ max=16) | |
| Notes: | 4x10GbE Splitter Cables are not supported | |
| 2, 8, 9, 11 | HPE 5950 8-port QSFP28 Module | JH406A |
| | 8 40G/100G QSFP+/QSFP28 ports (min=0 \ max=8) | |
| 1, 2, 4, 7, 8, 9, 10, 11, 12 15 | HPE FlexFabric 5950 24-port SFP28 and 2-port QSFP28 Module , | JH450A |
| | • 24 10G/25G SFP+/SFP28 ports (min=0 \ max=24) (Default) | |
| | 2 40G/100G QSFP+/QSFP28 ports (min=0 \ max=2) | |
| | HPE FlexFabric 5950 8-port QSFP28 MACsec Module | JH957A |
| 2, 9, 11 | 8 40G/100G QSFP+/QSFP28 ports (min=0 \ max=8) | |
| | Configuration Rules | |
| Rule # | Description | SKU |
| 1 | The following Transceivers install into this Module's SFP+ Ports: (Use #0D1 or #B01 if switch is CTO) - if applicable | |
| | HPE X130 10G SFP+ LC BiDi 10km-Uplink Transceiver | JL737A |
| | HPE X130 10G SFP+ LC BiDi 10km-Downlink Transceiver | JL738A |
| | HPE X130 10G SFP+ LC BiDi 40km-Uplink Transceiver | JL739A |
| | HPE X130 10G SFP+ LC BiDi 40km-Downlink Transceiver | JL740A |
| | HPE X130 10G SFP+ LC SR Transceiver | JD092B |
| | HPE X130 10G SFP+ LC LR Transceiver | JD094B |
| | HPE FlexNetwork X240 10G SFP+ to SFP+ 0.65m Direct Attach Copper Cable HPE FlexNetwork X240 10G SFP+ to SFP+ 1.2m Direct Attach Copper Cable | JD095C JD096C |
| | HPE FlexNetwork X240 10G SFP+ to SFP+ 3m Direct Attach Copper Cable | JD098C JD097C |
| | HPE FlexNetwork X240 10G SFP+ to SFP+ 5m Direct Attach Copper Cable | JG097C JG081C |
| | | 200010 |

| Rule # | Description | SKU |
|--------|---|------------------|
| 2 | The following 40G Transceivers install into this Module's QSFP+ Ports: (Use #0D1 or #B01 if | |
| | switch is CTO) - if applicable | |
| | HPE X140 40G QSFP+ LC LR4 SM 10km 1310nm Transceiver | JG661A |
| | HPE X140 40G QSFP+ LC BiDi 100m MM Transceiver | JL251A |
| | HPE X140 40G QSFP+ MPO SR4 Transceiver | JG325B |
| | HPE X140 40G QSFP+ MPO MM 850nm CSR4 300m Transceiver | JG709A |
| | HPE X140 40G QSFP+ LC LR4L 2km SM Transceiver | JL286A |
| | HPE X140 40G QSFP+ LC ER4 40km SM Transceiver | JL306A |
| | HPE FlexNetwork X240 40G QSFP+ QSFP+ 1m Direct Attach Copper Cable | JG326A |
| | HPE FlexNetwork X240 40G QSFP+ QSFP+ 3m Direct Attach Copper Cable | JG327A |
| | HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable | JG328A |
| | HPE FlexNetwork X240 40G QSFP+ to 4x10G SFP+ 1m Direct Attach Copper Splitter Cable | JG329A |
| | HPE FlexNetwork X240 40G QSFP+ to 4x10G SFP+ 3m Direct Attach Copper Splitter Cable | JG330A |
| 7 | HPE FlexNetwork X240 40G QSFP+ to 4x10G SFP+ 5m Direct Attach Copper Splitter Cable | JG331A |
| 3 | The following 40G Transceivers install into this Module's QSFP+ Ports: (Use #0D1 or #B01 if | |
| | switch is CTO) - if applicable | |
| | HPE X140 40G QSFP+ LC LR4 SM 10km 1310nm Transceiver | JG661A |
| | HPE X140 40G QSFP+ LC BiDi 100m MM Transceiver HPE X140 40G QSFP+ MPO SR4 Transceiver | JL251A |
| | HPE X140 40G QSFP+ MPO SR4 Transceiver HPE X140 40G QSFP+ MPO MM 850nm CSR4 300m Transceiver | JG325B JG709A |
| | HPE X140 40G QSFP+ MFO MM 850mm CSR4 500m Manscelver HPE X140 40G QSFP+ LC LR4L 2km SM Transceiver | JG709A JL286A |
| | HPE X140 40G QSFP+ LC ER4 40km SM Transceiver | JLZ00A JL306A |
| | HPE FlexNetwork X240 40G QSFP+ QSFP+ 1m Direct Attach Copper Cable | JG326A |
| | HPE FlexNetwork X240 40G QSFP+ QSFP+ 3m Direct Attach Copper Cable | JG327A |
| | HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable | JG328A |
| 7 | The following 10G Transceivers install into this Module's SFP+ Ports: (Use #0D1 or #B01 if switch | 000207 |
| - | is CTO) - if applicable | |
| | HPE X2A0 10G SFP+ to SFP+ 7m Active Optical Cable | JL290A |
| | HPE X2A0 10G SFP+ to SFP+ 10m Active Optical Cable | JL291A |
| | HPE X2A0 10G SFP+ to SFP+ 20m Active Optical Cable | JL292A |
| 8 | The following 40G Transceivers install into this Module's QSFP+ Ports: (Use #0D1 or #B01 if | |
| | switch is CTO) - if applicable | |
| | HPE X2A0 40G QSFP+ to QSFP+ 7m Active Optical Cable | JL287A |
| | HPE X2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable | JL288A |
| | HPE X2A0 40G QSFP+ to QSFP+ 20m Active Optical Cable | JL289A |
| 9 | The following 100G Transceivers install into this Module's QSFP28 Ports: (Use #0D1 or #B01 if | |
| | switch is CTO) - if applicable | |
| | HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver | JL274A |
| | HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver | JH419A |
| | HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver | JQ344A |
| | HPE X150 100G QSFP28 eSR4 300m MM Transceiver | JH672A |
| | HPE X150 100G QSFP28 LC LR4 10km SM Transceiver | JL275A |
| | HPE X150 100G QSFP28 MPO PSM4 500m SM Transceiver HPE X150 100G QSFP28 CWDM4 2km SM Transceiver | JH420A JH673A |
| | HPE X150 100G QSFP28 CWDM4 2km SM Transceiver HPE X2A0 100G QSFP28 to QSFP28 7m Active Optical Cable | JH073A JL276A |
| | HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable | JL270A JL277A |
| | HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable | JL277A JL278A |
| | HPE X240 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable | JL278A JL271A |
| | HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable | JL272A |
| | HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | JL273A |
| | HPE X240 QSFP28 4xSFP28 1m Direct Attach Copper Cable | JL282A |
| | HPE X240 QSFP28 4xSFP28 3m Direct Attach Copper Cable | JL283A |
| | | |

| | HPE X120 1G SFP LC SX Transceiver HPE X120 1G SFP LC LX Transceiver HPE X120 1G SFP LC LH100 Transceiver | JD118B JD119B JD103A |
|-------------------|---|--|
| | HPE X115 100M SFP LC FX Transceiver HPE X110 100M SFP LC LX Transceiver HPE X120 1G SFP RJ45 T Transceiver | JD102B JD120B JD089B |
| Transce Rule # | Description SFP Transceivers | SKU |
| | HPE X190 25G SFP28 LC SR 100m MM Transceiver | JL293A |
| 18 | The following SFP28 Transceivers install into this Module's SFP28 Ports: (Use 0D1 or B01 if switch is CTO) - if applicable | |
| | CTO) - if applicable HPE 16Gb SFP+ Short Wave 1-pack Commercial Transceiver HPE 16Gb FC/10GbE 100m SR SFP+ Transceiver HPE 8Gb Short Wave Fibre Channel SFP+ 1 Pack Transceiver | E7Y10A H6Z42A AJ718A |
| 17 | HPE 32Gb SFP28 Short Wave Commercial Temperature Transceiver HPE 16Gb SFP+ Short Wave 1-pack Commercial Transceiver HPE 16Gb FC/10GbE 100m SR SFP+ Transceiver HPE 8Gb Short Wave Fibre Channel SFP+ 1 Pack Transceiver HPE 32Gb SFP28 Short Wave 1-pack Pull Tab Optical Transceiver The following Transceivers install into this Module's (SFP28) Ports: (Use 0D1 or B01 if switch is | P9H30A E7Y10A H6Z42A AJ718A Q2P62A |
| 16 | HPE X120 1G SFP LC SX Transceiver HPE X120 1G SFP LC LX Transceiver HPE X120 1G SFP RJ45 T Transceiver HPE X120 1G SFP LC LH100 Transceiver The following Transceivers install into this Module's (SFP28) Ports: (Use 0D1 or B01 if switch is CTO) - if applicable | JD1188 JD1198 JD0898 JD103A |
| 15 | The following Transceivers install into this Module's (SFP28) Ports: (Use #0D1 or #B01 if switch is CTO) - if applicable | |
| 14 | Fibre channel support is 8Gb/16Gb/32Gb on any of the 16 converged ports of the JL865A Module. Note that a maximum of 32Gb FC is supported regardless of the FC optics used. | |
| 13 | HPE X130 10G SFP+ LC LH 80km Transceiver HPE X130 10G SFP+ LC ER 40km Transceiver Fibre channel support is 8Gb/4Gb/2Gb on any of the 24 converged ports of the JH184A Module. Note that a maximum of 8Gb FC is supported regardless of the FC optics used. | JG915A JG234A |
| 12 | #B01 if switch is CTO) - if applicable HPE X140 40G QSFP+ LC ER4 40km SM Transceiver The following 10G Transceiver installs into this Module's SFP+ Ports: (Use #0D1 or #B01 if switch is CTO) - if applicable | JL306A |
| 11 | HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable HPE X240 25G SFP28 to SFP28 5m Direct Attach Copper Cable HPE X2A0 25G SFP28 to SFP28 3m Active Optical Cable HPE X2A0 25G SFP28 to SFP28 5m Active Optical Cable HPE X2A0 25G SFP28 to SFP28 7m Active Optical Cable HPE X2A0 25G SFP28 to SFP28 10m Active Optical Cable HPE X2A0 25G SFP28 to SFP28 20m Active Optical Cable HPE X2A0 25G SFP28 to SFP28 20m Active Optical Cable HPE X2A0 25G SFP28 to SFP28 10m Active Optical Cable HPE X2A0 25G SFP28 to SFP28 20m Active Optical Cable | JL295A JL296A JH955A JH956A JL297A JL298A JL299A |
| 10 | The following SFP28 Transceivers install into this Module's SFP28 Ports: (Use #0D1 or #B01 if switch is CTO) - if applicable HPE X190 25G SFP28 LC SR 100m MM Transceiver HPE 25G SFP28 LC LR 10km SMF Xcvr HPE X240 25G SFP28 to SFP28 1m Direct Attach Copper Cable | JL293A JL855A JL294A |



| Notes: | IG transceivers are supported in all Management Ports as well as SFP Ports, SFP+ Ports a SFP28 Ports. | ind |
|--------|--|------------------|
| | 100M Transceivers are supported ONLY in SFP or Management Ports, not in any SFP+ or | |
| | SFP28 ports. | |
| | SFP+ Transceivers | |
| | HPE X130 10G SFP+ LC BiDi 10km-Uplink Transceiver | JL737A |
| | HPE X130 10G SFP+ LC BiDi 10km-Downlink Transceiver HPE X130 10G SFP+ LC BiDi 40km-Uplink Transceiver | JL738A JL739A |
| | HPE X130 10G SFP+ LC BiDi 40km-Downlink Transceiver | JL740A |
| | HPE X130 10G SFP+ LC SR Transceiver | JD092B |
| | HPE X130 10G SFP+ LC LR Transceiver | JD094B |
| | HPE X130 10G SFP+ LC ER 40km Transceiver | JG234A |
| | HPE X130 10G SFP+ LC LH 80km Transceiver | JG915A |
| | HPE X2A0 10G SFP+ to SFP+ 7m Active Optical Cable | JL290A |
| | HPE X2A0 10G SFP+ to SFP+ 10m Active Optical Cable HPE X2A0 10G SFP+ to SFP+ 20m Active Optical Cable | JL291A JL292A |
| | HPE FlexNetwork X240 10G SFP+ to SFP+ 0.65m Direct Attach Copper Cable | JD095C |
| | HPE FlexNetwork X240 10G SFP+ to SFP+ 1.2m Direct Attach Copper Cable | JD096C |
| | HPE FlexNetwork X240 10G SFP+ to SFP+ 3m Direct Attach Copper Cable | JD097C |
| | HPE FlexNetwork X240 10G SFP+ to SFP+ 5m Direct Attach Copper Cable | JG081C |
| Rule # | Description | SKU |
| | SFP28 Transceivers | |
| | HPE X190 25G SFP28 LC SR 100m MM Transceiver | JL293A |
| | HPE 25G SFP28 LC LR 10km SMF Xcvr HPE X240 25G SFP28 to SFP28 1m Direct Attach Copper Cable | JL855A JL294A |
| | HPE X240 25G SFP28 to SFP28 3m Direct Attach Copper Cable | JL294A JL295A |
| | HPE X240 25G SFP28 to SFP28 5m Direct Attach Copper Cable | JL296A |
| | HPE X2A0 25G SFP28 to SFP28 3m Active Optical Cable | JH955A |
| | HPE X2A0 25G SFP28 to SFP28 5m Active Optical Cable | JH956A |
| | HPE X2A0 25G SFP28 to SFP28 7m Active Optical Cable | JL297A |
| | HPE X2A0 25G SFP28 to SFP28 10m Active Optical Cable HPE X2A0 25G SFP28 to SFP28 20m Active Optical Cable | JL298A JL299A |
| | FC SFP+ Transceivers | JLZ99A |
| | HPE 32Gb SFP28 Short Wave Commercial Temperature Transceiver | P9H30A |
| | HPE 16Gb SFP+ Short Wave 1-pack Commercial Transceiver | E7Y10A |
| | HPE 16Gb FC/10GbE 100m SR SFP+ Transceiver | H6Z42A |
| | HPE 8Gb Short Wave Fibre Channel SFP+ 1 Pack Transceiver | AJ718A |
| | HPE 32Gb SFP28 Short Wave 1-pack Pull Tab Optical Transceiver | Q2P62A |
| | QSFP+ Transceivers | |
| | HPE X140 40G QSFP+ MPO SR4 Transceiver | JG325B |
| | HPE X140 40G QSFP+ MPO MM 850nm CSR4 300m Transceiver | JG709A |
| | HPE X140 40G QSFP+ LC BiDi 100m MM Transceiver | JL251A |
| | HPE X140 40G QSFP+ LC LR4 SM 10km 1310nm Transceiver | JG661A |
| | HPE X140 40G QSFP+ LC LR4L 2km SM Transceiver HPE X140 40G QSFP+ LC ER4 40km SM Transceiver | JL286A JL306A |
| | HPE X2A0 40G QSFP+ to QSFP+ 7m Active Optical Cable | JL287A |
| | HPE X2A0 40G QSFP+ to QSFP+ 10m Active Optical Cable | JL288A |
| | HPE X2A0 40G QSFP+ to QSFP+ 20m Active Optical Cable | JL289A |
| | HPE FlexNetwork X240 40G QSFP+ QSFP+ 1m Direct Attach Copper Cable | JG326A |
| | HPE FlexNetwork X240 40G QSFP+ QSFP+ 3m Direct Attach Copper Cable | JG327A |
| | HPE FlexNetwork X240 40G QSFP+ QSFP+ 5m Direct Attach Copper Cable HPE FlexNetwork X240 40G QSFP+ to 4x10G SFP+ 1m Direct Attach Copper Splitter Cable | JG328A JG329A |
| | HPE FlexNetwork X240 40G QSFP+ to 4x10G SFP+ 1m Direct Attach Copper Splitter Cable HPE FlexNetwork X240 40G QSFP+ to 4x10G SFP+ 3m Direct Attach Copper Splitter Cable | JG3Z9A JG330A |
| | HPE FlexNetwork X240 40G QSFP+ to 4x10G SFP+ 5m Direct Attach Copper Splitter Cable | JG331A |
| | | |

| | QSFP28 Transceivers | |
|---------|--|------------|
| | HPE X150 100G QSFP28 MPO SR4 100m MM Transceiver | JL274A |
| | HPE X150 100G QSFP28 LC SWDM4 100m MM Transceiver | JH419A |
| | HPE X150 100G QSFP28 LC BiDi 100m MM Transceiver | JQ344A |
| | HPE X150 100G QSFP28 eSR4 300m MM Transceiver | JH672A |
| | HPE X150 100G QSFP28 MPO PSM4 500m SM Transceiver | JH420A |
| | HPE X150 100G QSFP28 LC LR4 10km SM Transceiver | JL275A |
| | HPE X150 100G QSFP28 CWDM4 2km SM Transceiver | JH673A |
| | HPE X2A0 100G QSFP28 to QSFP28 7m Active Optical Cable | JL276A |
| | HPE X2A0 100G QSFP28 to QSFP28 10m Active Optical Cable | JL277A |
| | HPE X2A0 100G QSFP28 to QSFP28 20m Active Optical Cable | JL278A |
| | HPE X240 100G QSFP28 to QSFP28 1m Direct Attach Copper Cable | JL271A |
| | HPE X240 100G QSFP28 to QSFP28 3m Direct Attach Copper Cable | JL272A |
| | HPE X240 100G QSFP28 to QSFP28 5m Direct Attach Copper Cable | JL273A |
| | HPE X240 QSFP28 4xSFP28 1m Direct Attach Copper Cable | JL282A |
| | HPE X240 QSFP28 4xSFP28 3m Direct Attach Copper Cable | JL283A |
| | HPE X240 QSFP28 4xSFP28 5m Direct Attach Copper Cable | JL284A |
| | Internal Power Supplies | |
| | (JQ074A, JQ075A and JQ077A) System (std 0 // max 2) User Selection (min 1 // max 2) | |
| | (JQ076A) System (std 0 // max 4) User Selection (min 2 // max 4) | |
| 1, 2, 3 | HPE 58x0AF 650W AC Power Supply | JC680A |
| | • includes 1 x c13, 650w | |
| | HPE 58x0AF 650W AC Power Supply PDU Cable NA/JP/TW | JC680A#B2B |
| | C15 PDU Jumper Cord (NA/MX/TW/JP) | |
| | HPE 58x0AF 650W AC Power Supply PDU Cable ROW | JC680A#B2C |
| | C15 PDU Jumper Cord (ROW) | |
| | HPE A58x0AF 650W AC Power Supply | JC680A#AC3 |
| | No Localized Power Cord Selected | |
| 1, 3 | HPE FlexFabric Switch 650W 48V Hot Plug NEBS-compliant DC Power Supply | JH336A |
| | • includes 1 x c13, 650w | |
| | Configuration Rules | |
| Rule # | Description | |
| 1 | PSU's cannot be mixed in the same switch enclosure | |
| 2 | Localization (Wall Power Cord) required on orders without #B2B, #B2C, and #AC3 (PDU Power | |
| - | Cord). (See Localization Menu) | |
| | REMARK: When Switches/Routers are Factory Racked, Then #B2B, or #B2C should be the | |
| | Defaulted Power Cable option on the Switches/Routers. | |
| 3 | Must be ordered in multiples of 2 if configuring with JQ076A | |
| Notes: | Drop down under power supply should offer the following options and results: | |
| | Switch/Router to PDU Power Cord - #B2B in NA, Mexico, Taiwan, and Japan or #B2C ROW. | |
| | (Watson Default B2B or B2C for Rack Level CTO) | |
| | Switch/Router/Power Supply to Wall Power Cord - Localized Option (Watson Default for BTO | |
| | and Box Level CTO) | |
| | No Power Cord - #AC3 Option | |

Fan Trays

| | (JQ074A, JQ075A and JQ077A) System (std 0 // max 5) User Selection (min 5 // max 5) | |
|--------|---|--------|
| | (JQ076A) System (std 0 // max 2) User Selection (min 2 // max 2) | |
| Rule # | Description | SKU |
| 1, 2 | HPE X712 Back (Power Side) to Front (Port Side) Airflow High Volume 2 Fan Tray | JH389A |
| 1, 2 | HPE X711 Front (Port Side) to Back (Power Side) Airflow High Volume 2 Fan Tray | JH388A |
| 1, 3 | HPE 5930 4-slot Back (Power Side) to Front (Port Side) Airflow Fan Tray | JH185A |
| 1, 3 | HPE 5930 4-slot Front (Port Side) to Back (Power Side) Airflow Fan Tray | JH186A |
| | Configuration Rules | |



| 1 | Fan Trays cannot be mixed in the same switch enclosure | |
|--------|--|----------|
| 2 | This fan tray is supported on: | |
| | HPE FlexFabric 5945 48SFP28 8QSFP28 Switch | JQ074A |
| | HPE FlexFabric 5945 2-slot Switch | JQ075A |
| | HPE FlexFabric 5945 32QSFP28 Switch | JQ077A |
| 3 | This fan tray is supported on: | |
| | HPE FlexFabric 5945 4-slot Switch | JQ076A |
| Notes: | If there is any empty space below the switch (JQ075A) in a rack when using Back to Front Fan Tray, JH389A, the rack will receive an Air Plenum kit that takes up 1U of additional space in the rack. The Air Plenum kit is not required on fully configured racks. The Air Plenum Kit is a non-saleable SKU, and is brought in automatically for CTO Factory Rack Level Integration. If there is any empty space below the switch (JQ076A) in a rack when using Back to Front Fan Tray, JH185A, the rack will receive an Air Plenum kit that takes up 1U of additional space in the rack. The Air Plenum kit is not required on fully configured racks. The Air Plenum Kit is a non-saleable SKU, and is brought in automatically for CTO Factory Rack Level Integration. | |
| Softwa | re | |
| | Orchestrator | |
| Rule# | Description | SKU |
| 1, 2 | HPE IMC Orchestrator Base E-LTU | JL849AAE |
| 1, 3 | HPE IMC Orchestrator Analyzer Add-on E-LTU | JL850AAE |
| 1, 4 | HPE IMC Orchestrator Network Node Add-on E-LTU | JL851AAE |
| 1, 3 | HPE IMC Orchestrator Analyzer IP Host Add-on E-LTU | JL852AAE |
| | Configuration Rules | |
| Rule # | Description | |
| 1 | | |
| T | When configuring 12900 Switch Chassis(JH262A or JL255A), this Orchestrator Service is available when one of the following Type X MPUs is added: | |
| T | When configuring 12900 Switch Chassis(JH262A or JL255A), this Orchestrator Service is available when one of the following Type X MPUs is added: HPE FlexFabric 12904E Type X Main Processing Unit | JL844A |

| | The Prexi done 1270 te type Xthaint toecoong offi |
|---|--|
| | HPE FlexFabric 12900E Type X Main Processing Unit |
| 2 | IMC Orchestrator Base E-LTU sku must be Qty 1 per solution |
| 3 | If this analyzer E-LTU is selected, then Qty 1 must be added per solution. |
| | Additionally, if this Analyzer E-LTU is selected, then IP Host E-LTU must match qty of desired |
| | |

Hosts.

4 This Network Node Add-on E-LTU must match the switch qty in the solution

| I/O ports and slots | 48 x 25G SFP28 ports | | |
|---|--|--|--|
| | 8 x 100G QSFP28 ports | | |
| | 2 x 1G SFP ports | | |
| | | x 100GbE fixed ports, or up to 80 x 10GbE ports when using splitter | |
| | cables | in the state of th | |
| Additional ports and slots | 1 x console port | | |
| · | 1 x mini USB port | | |
| | 1 x USB port | | |
| | 2 x out-of-band management po | rts (one fiber port and one copper port) | |
| Power supplies | 2 power supply slots | | |
| | 1 minimum power supply require | ed (ordered separately) | |
| Fan tray | 5 fan tray slots | | |
| | | ys, as they are not included with the switch. This system requires | |
| | | o function properly. The system should not be operated with less | |
| | 1 | 24 hours. The system should not be operated without a fan tray for | |
| | | em should not be operated outside of the temperature range of 32° | |
| | | comply with these operating requirements may void the product | |
| Dh | warranty. | | |
| Physical characteristics | Dimensions | 43.6 x 440 x 460 mm (1.72 x 17.32 x 18.11 in) | |
| | Weight | 10.10 kg (22.27 lb) shipping weight | |
| | Full configuration weight | 15 kg (33.07 lb) | |
| Memory and processor 1 GB flash; packet buffer size: 32 MB, 8 | | | |
| Performance | Latency | < 1 µs (64-byte packets) | |
| | Throughput | 2024 Mpps | |
| | Routing/Switching capacity | 4 Tbps | |
| | Routing table size | 324K entries (IPv4), 162K entries (IPv6) | |
| | MAC address table size | 288K entries | |
| Environment | Operating temperature | 32°F to 113°F (0°C to 45°C) | |
| | Operating relative humidity | 5% to 95%, noncondensing | |
| | Acoustic | Low-speed fan: 62.1 dB, high-speed fan: 77.9 dB | |
| Electrical characteristics | Frequency | 50/60 Hz | |
| | Maximum heat dissipation | 1381 BTU/hr (1458 kJ/hr) | |
| | Voltage | 100 VAC to 240 VAC V rated | |
| | | 90 VAC to 264 VAC max | |
| | | | |
| | | -40 VDC to -60 VDC rated | |
| | NA | -40 VDC to -72 VDC max | |
| | Maximum power rating | 650 W | |
| | Idle power | 179 W | |
| | Notes: Idle power is the actual power consumption of the device with no ports connected. | | |
| | Maximum power rating and maximum heat dissipation are the worst-case theoretical maximum | | |
| | numbers provided for planning the infrastructure with fully loaded PoE (if equipped), 100% traffic, | | |
| Cafat. | all ports plugged in, and all modules populated | | |
| Safety | UL 60950-1, CAN/CSA C22.2 No 60950-1, IEC 60950-1, EN 60950-1, AS/NZS 60950-1, FDA 21 CFR Subchapter J | | |
| Emissions | FCC Part 15 (CFR 47) CLASS A, ICES-003 CLASS A, VCCI CLASS A, CISPR 32 CLASS A , EN 55032 | | |
| Emissions | CLASS A, AS/NZS CISPR32 CLASS A, ICES-003 CLASS A, VCCI CLASS A, CISPR 32 CLASS A , EN 55032 CLASS A, AS/NZS CISPR32 CLASS A, EN 61000-3-2, EN 61000-3-3, ETSI EN 300 386 | | |
| Immunity | CISPR 24, EN 55024, ETSI EN 300 386 | | |
| Management | | | |
| anayemeni | IMC; CLI; out-of-band management; SNMP Manager; Telnet; FTP Notes: The customer must install a minimum of one power supply, as the device does not come with | | |
| | one. The customer must install 5 fan kits, as the device does not come with one. | | |



| Services | Refer to the Hewlett Packard Enterprise website at: http://www.hpe.com/networking/services for |
|----------|---|
| | details on the service-level descriptions and product numbers. For details about services and |
| | response times in your area, please contact your local Hewlett Packard Enterprise sales office. |

| HPE FlexFabric 5945 | 4-slot Switch (JQ076A) | | |
|----------------------------|---|--|--|
| I/O ports and slots | 4 module slots | | |
| | 2 x 1G SFP ports | | |
| | Type 1000BASE-LX | | |
| | Supports up to a maximum of 96 | 5 x 10/25GbE and 8 x 100GbE ports, or up to 32 x 100GbE ports | |
| Additional ports and slots | | | |
| - | 1 x mini USB port | | |
| | 1 x USB port | | |
| | 2 x out-of-band management po | orts (one fiber port and one copper port) | |
| Power supplies | 4 power supply slots | | |
| | 2 minimum power supplies requ | ired (ordered separately) | |
| Fan tray | 2 fan tray slots | | |
| | | ys, as they are not included with the switch. This system requires two | |
| | | to function properly. The system should not be operated with only | |
| | | ours. The system should not be operated without a fan tray for more | |
| | | nould not be operated outside of the temperature range of 32°F | |
| | | comply with these operating requirements may void the product | |
| | warranty. | | |
| Physical characteristics | Dimensions | 88.1 x 440 x 660 mm (3.47 x 17.32 x 25.98 in) (2U height) | |
| | Weight | 18.10 kg (39.90 lb) shipping weight | |
| | Full configuration weight | 27 kg (59.52 lb) | |
| Memory and processor | 1 GB flash; packet buffer size: 32 | | |
| Performance | Latency | < 1 µs (64-byte packets) | |
| | Throughput | 2024 Mbpps | |
| | Routing/Switching capacity | 6.4 Tbps | |
| | Routing table size | 324K entries (IPv4), 162K entries (IPv6) | |
| | MAC address table size | 288K entries | |
| Environment | Operating temperature | 32°F to 113°F (0°C to 45°C) | |
| | Operating relative humidity | 5% to 95%, noncondensing | |
| | Acoustic | Low-speed fan: 70.8 dB, high-speed fan: 83.2dB | |
| Electrical characteristics | Frequency | 50/60 Hz | |
| | Maximum heat dissipation | 2348 BTU/hr (2478 kJ/hr) | |
| | Voltage | 100 VAC to 240 VAC V rated, 90 VAC to 264 VAC max, -40 | |
| | | VDC to -60 VDC rated | |
| | | –40 VDC to –72 VDC max. | |
| | Maximum power rating | 650 W | |
| | Idle power | 185 W | |
| | Notes: Idle power is the actual power consumption of the device with no ports connected. | | |
| | Maximum power rating and maximum heat dissipation are the worst-case theoretical maximum | | |
| | numbers provided for planning the infrastructure with fully loaded PoE (if equipped), 100% traffic, | | |
| | all ports plugged in, and all modules populated | | |
| Safety | UL 60950-1, CAN/CSA C22.2 No 60950-1, IEC 60950-1, EN 60950-1, AS/NZS 60950-1, FDA 21 | | |
| | CFR Subchapter J | | |
| Emissions | FCC Part 15 (CFR 47) CLASS A, ICES-003 CLASS A, VCCI CLASS A, CISPR 32 CLASS A , EN 55032 | | |
| | CLASS A, AS/NZS CISPR32 CLASS A, EN 61000-3-2, EN 61000-3-3, ETSI EN 300 386 | | |
| Immunity | CISPR 24, EN 55024, ETSI EN 300 386 | | |
| Management | IMC; CLI; out-of-band management; SNMP Manager; Telnet; FTP | | |
| | Notes: The customer must install a minimum of two power supplies, as the device does not come | | |
| | with one. The customer must install 2 fan kits, as the device does not come with one. | | |

| Services | Refer to the Hewlett Packard Enterprise website at: http://www.hpe.com/networking/services for |
|----------|---|
| | details on the service-level descriptions and product numbers. For details about services and |
| | response times in your area, please contact your local Hewlett Packard Enterprise sales office. |

| HPE FlexFabric 5945 | 32QSFP28 Switch (JQ077A) | | |
|----------------------------|---|---|--|
| I/O ports and slots | 32 x 100G QSFP28 ports | | |
| • | 2 x 1G SFP ports | | |
| Additional ports and slots | 1 x console port | | |
| | 1 x mini USB port | | |
| | 1 x USB port | | |
| | 2 x out-of-band management po | rts (one fiber port and one copper port) | |
| Power supplies | 2 power supply slots | | |
| | 1 minimum power supply require | ed (ordered separately) | |
| Fan tray | 5 fan tray slots | | |
| | | ys, as they are not included with the switch. This system requires | |
| | | o function properly. The system should not be operated with less 24 hours. The system should not be operated without a fan tray for | |
| | | em should not be operated outside of the temperature range of 32°F | |
| | | comply with these operating requirements may void the product | |
| | warranty. | comply with mese operating requirements may vola me product | |
| Physical characteristics | Dimensions | 43.6 x 440 x 460 mm (1.72 x 17.32 x 18.11 in) | |
| | Weight | 10.4 kg (22.93 lb) shipping weight | |
| Memory and processor | 1 GB flash; packet buffer size: 32 | | |
| Performance | Latency | < 1 µs (64-byte packets) | |
| | Throughput | 2024 Mpps | |
| | Routing/Switching capacity | 6.4 Tbps | |
| | Routing table size | 324K entries (IPv4), 162K entries (IPv6) | |
| | MAC address table size | 288K entries | |
| Environment | Operating temperature | 32°F to 113°F (0°C to 45°C) | |
| | Operating relative humidity | 5% to 95%, noncondensing | |
| | Acoustic | Low-speed fan: 62.4 dB, high-speed fan: 78.1 dB | |
| Electrical characteristics | Frequency | 50/60 Hz | |
| | Maximum heat dissipation | 1283 BTU/hr (1458 kJ/hr) | |
| | Voltage | 100 VAC to 240 VAC V rated | |
| | | 90 VAC to 264 VAC max | |
| | | | |
| | | -40 VDC to -60 VDC rated | |
| | Maximum newer rating | -40 VDC to -72 VDC max 650 W | |
| | Maximum power rating Idle power | | |
| | | 154 W | |
| | Notes: Idle power is the actual power consumption of the device with no ports connected. Maximum power rating and maximum heat dissipation are the worst-case theoretical maximum | | |
| | numbers provided for planning the infrastructure with fully loaded PoE (if equipped), 100% traffic, | | |
| | all ports plugged in, and all modules populated | | |
| Safety | UL 60950-1, CAN/CSA C22.2 No 60950-1, IEC 60950-1, EN 60950-1, AS/NZS 60950-1, FDA 21 | | |
| outery | CFR Subchapter J | | |
| Emissions | FCC Part 15 (CFR 47) CLASS A, ICES-003 CLASS A, VCCI CLASS A, CISPR 32 CLASS A , EN 55032 | | |
| | CLASS A, AS/NZS CISPR32 CLASS A, EN 61000-3-2, EN 61000-3-3, ETSI EN 300 386 | | |
| Immunity | CISPR 24, EN 55024, ETSI EN 300 386 | | |
| Management | IMC; CLI; out-of-band management; SNMP Manager; Telnet; FTP | | |
| | Notes: The customer must install a minimum of one power supply, as the device does not come | | |
| | with one. The customer must install 5 fan kits, as the device does not come with one. | | |



| Services | Refer to the Hewlett Packard Enterprise website at: http://www.hpe.com/networking/services for |
|----------|---|
| | details on the service-level descriptions and product numbers. For details about services and |
| | response times in your area, please contact your local Hewlett Packard Enterprise sales office. |

| HPE FlexFabric 5945 | 2-slot Switch (JQ075A) | | |
|----------------------------|--|--|--|
| I/O ports and slots | 2 module slots | | |
| • | 2 x 100G QSFP28 ports | | |
| | Supports up to a maximum of 48 | x 10/25GbE and 4 x 100GbE ports, or up to 16 x 100GbE ports | |
| Additional ports and slots | | | |
| | 1 x mini USB port | | |
| | 1 x USB port | | |
| | a . | rts (one fiber port and one copper port) | |
| Power supplies | 2 power supply slots | | |
| | 1 minimum power supply require | d (ordered separately) | |
| Fan tray | 5 fan tray slots | and the second second state of the data of the data of the terms of the second state of the second state of the | |
| | | rs, as they are not included with the switch. This system requires | |
| | | o function properly. The system should not be operated with with nan 24 hours. The system should not be operated without a fan tray | |
| | | ystem should not be operated outside of the temperature range of | |
| | | ire to comply with these operating requirements may void the | |
| | product warranty. | | |
| Physical characteristics | Dimensions | 44.2 x 440 x 660 mm (1.74 x 17.32 x 25.98 in.) | |
| , | Weight | 13.10 kg (28.88 lb) shipping weight | |
| Memory and processor | 1 GB flash; packet buffer size: 32 MB, 8 GB SDRAM | | |
| Performance | Latency | < 1 μ s (64-byte packets) | |
| | Throughput | 2024 Mbpps | |
| | Routing/Switching capacity | 3.6 Tbps | |
| | Routing table size | 324K entries (IPv4), 162K entries (IPv6) | |
| | MAC address table size | 288K entries | |
| Environment | Operating temperature | 32°F to 113°F (0°C to 45°C) | |
| | Operating relative humidity | 5% to 95%, noncondensing | |
| | Acoustic | Low-speed fan: 70.8 dB, high-speed fan: 83.2dB | |
| Electrical characteristics | Frequency | 50/60 Hz | |
| | Maximum heat dissipation | 1392 BTU/hr (1458 kJ/hr) | |
| | Voltage | 100 VAC to 240 VAC V rated, 90 VAC to 264 VAC max, -40 | |
| | | VDC to –60 VDC rated | |
| | | -40 VDC to -72 VDC max. | |
| | Maximum power rating | 650 W | |
| | Idle power | 136 W | |
| | Notes: Idle power is the actual power consumption of the device with no ports connected. | | |
| | Maximum power rating and maximum heat dissipation are the worst-case theoretical maximum | | |
| | numbers provided for planning the infrastructure with fully loaded PoE (if equipped), 100% traffic, all ports plugged in and all modules populated | | |
| Safety | all ports plugged in, and all modules populated UL 60950-1, CAN/CSA C22.2 No 60950-1, IEC 60950-1, EN 60950-1, AS/NZS 60950-1, FDA 21 | | |
| Salely | OE 80930-1, CAN/CSA C22.2 NO 80930-1, IEC 80930-1, EN 80930-1, AS/NZS 80930-1, FDA 21 CFR Subchapter J | | |
| Emissions | FCC Part 15 (CFR 47) CLASS A, ICES-003 CLASS A, VCCI CLASS A, CISPR 32 CLASS A , EN 55032 | | |
| | CLASS A, AS/NZS CISPR32 CLASS A, EN 61000-3-2, EN 61000-3-3, ETSI EN 300 386 | | |
| Immunity | CISPR 24, EN 55024, ETSI EN 300 386 | | |
| Management | IMC; CLI; out-of-band management; SNMP Manager; Telnet; FTP | | |
| 5 | Notes: The customer must install a minimum of two power supplies, as the device does not come | | |
| | with one. The customer must install five fan kits, as the device does not come with any. | | |



| Services | Refer to the Hewlett Packard Enterprise website at: http://www.hpe.com/networking/services for details on the service-level descriptions and product numbers. For details about services and response times in your area, please contact your local Hewlett Packard Enterprise sales office. |
|--|---|
| Standards and pr | otocols |
| pplies to all product | |
| • IEEE 802.1a | |
| | X-2008 Link Aggregation |
| | MAC Bridges |
| • IEEE 802.1p | |
| • IEEE 802.1G | |
| | Multiple Spanning Trees |
| | Rapid Reconfiguration of Spanning Tree |
| | d Link Aggregation Control Protocol (LACP) |
| | e 10-Gigabit Ethernet |
| | g Ethernet OAM |
| | n Ethernet in First Mile over Point to Point Fiber—EFMF |
| | Flow Control RFC 768 UDP |
| | TP Protocol (revision 2) |
| • RFC 791 IP | |
| RFC 792 ICM | |
| • RFC 793 TC | |
| • RFC 826 AR | |
| • RFC 854 Tel | |
| • RFC 856 Tel | |
| • RFC 868 Tin | |
| | ngestion Control in IP/TCP Internetworks |
| | ernet Standard Subnetting Procedure |
| • RFC 1027 Pi | |
| • RFC 1058 R | |
| | elnet Terminal-Type Option |
| | cremental updating of the internet checksum |
| | SI IS-IS Intra-domain Routing Protocol |
| | ath MTU discovery |
| | anagement Information Base for Network Management of TCP/IP-based internet RFC 1253 (OSPF v2) |
| • RFC 1531 D | |
| | HCP Options and BOOTP Vendor Extensions |
| | HCP/BOOTP Interoperation |
| • RFC 1541 D | |
| | arifications and Extensions for the Bootstrap Protocol |
| | NS (client only) |
| | cremental internet Checksum |
| RFC 1723 R DEC 1912 IP | |
| RFC 1812 IP RFC 2030 Si | |
| | mple Network Time Protocol (SNTP) v4 |
| RFC 2131 D DFC 2274 IC | |
| RFC 2236 IG DEC 2770 V | MP Snooping |

- RFC 2338 VRRP
- RFC 2453 RIPv2
- RFC 2581 TCP Congestion Control
- RFC 2644 Directed Broadcast Control

- RFC 2767 Dual Stacks IPv4 & IPv6
- RFC 2865 RADIUS
- RFC 2868 RADIUS Attributes for Tunnel Protocol Support
- RFC 2890 Key and Sequence Number Extensions to GRE
- RFC 3046 DHCP Relay Agent Information Option
- RFC 3411 An Architecture for Describing Simple Network Management Protocol (SNMP) Management Frameworks
- RFC 3412 Message Processing and Dispatching for the Simple Network Management Protocol (SNMP)
- RFC 3413 SNMP Applications
- RFC 3416 Protocol Operations for SNMP
- RFC 3417 Transport Mappings for the SNMP
- RFC 3418 Management Information Base (MIB) for the SNMP
- RFC 3768 VRRP
- RFC 4250 The SSH) Protocol Assigned Numbers
- RFC 4251 The SSH Protocol Architecture
- RFC 4252 The SSH Authentication Protocol
- RFC 4253 The SSH Transport Layer Protocol
- RFC 4254 The SSH Connection Protocol
- RFC 4292 IP Forwarding Table MIB
- RFC 4293 Management Information Base for the Internet Protocol (IP)
- RFC 4364 BGP/MPLS IP Virtual Private Networks (VPNs)
- RFC 4419 Diffie-Hellman Group Exchange for the SSH Transport Layer Protocol
- RFC 4594 Configuration Guidelines for DiffServ Service Classes
- RFC 4601 Protocol Independent Multicast— Sparse Mode (PIM-SM): Protocol Specification (Revised)
- RFC 4604 Using Internet Group Management Protocol Version 3 (IGMPv3) and Multicast Listener Discovery Protocol Version 2 (MLDv2) for Source-Specific Multicast
- RFC 4607 Source-Specific Multicast for IP
- RFC 4941 Privacy Extensions for Stateless Address Auto configuration in IPv6
- RFC 5340 OSPF for IPv6
- RFC 5905 NTP Version 4: Protocol and Algorithms Specification
- RFC 2929 RADIUS Support DS for RADIUS

Device Management

- RFC 1157 SNMPv1/v2c
- RFC 1305 NTPv3
- RFC 1591 DNS (client)
- RFC 1902 (SNMPv2)
- RFC 1908 (SNMP v1/2 Coexistence)
- RFC 2573 (SNMPv3 Applications)
- RFC 2576 (coexistence between SNMP V1, V2, V3)
- RFC 2819 RMON
- Multiple configuration files
- Multiple software images
- SSHv1/SSHv2 Secure Shell
- TACACS/TACACS+

IPv6

- RFC 2080 RIPng for IPv6
- RFC 2460 IPv6 Specification
- RFC 2461 IPv6 Neighbor Discovery
- RFC 2462 IPv6 Stateless Address Auto-configuration
- RFC 2463 ICMPv6

- RFC 2464 Transmission of IPv6 over Ethernet Networks
- RFC 2473 Generic Packet Tunneling in IPv6
- RFC 2545 Use of MP-BGP-4 for IPv6
- RFC 2563 ICMPv6
- RFC 2711 IPv6 Router Alert Option
- RFC 2740 OSPFv3 for IPv6
- RFC 2767 Dual stacks IPv46 & IPv6
- RFC 3315 DHCPv6 (client and relay)
- RFC 3484 Default Address Selection for IPv6
- RFC 3810 Multicast Listener Discovery Version 2 (MLDv2) for IPv6
- RFC 4213 Basic Transition Mechanisms for IPv6 Hosts and Routers
- RFC 4291 IP Version 6 Addressing Architecture
- RFC 4443 ICMPv6
- RFC 4552 Authentication/Confidentiality for OSPFv3
- RFC 4862 IPv6 Stateless Address Auto-configuration
- RFC 5095 Deprecation of Type 0 Routing Headers in IPv6

BGP

- RFC 1163 BGP
- RFC 1771 BGPv4
- RFC 1997 BGP Communities Attribute
- RFC 2918 Route Refresh Capability
- RFC 3392 Capabilities Advertisement with BGP-4
- RFC 4271 A BGP 4 (BGP-4)
- RFC 4360 BGP Extended Communities Attribute
- RFC 4456 BGP Route Reflection: An Alternative to Full Mesh Internal BGP (IBGP)
- RFC 4760 Multiprotocol Extensions for BGP-4
- RFC 7432 BGP MPLS-Based Ethernet VPN

MIBs

- RFC 1213 MIB II
- RFC 1907 SNMPv2 MIB
- RFC 2571 SNMP Framework MIB
- RFC 2572 SNMP-MPD MIB
- RFC 2573 SNMP-Notification MIB
- RFC 2573 SNMP-Target MIB
- RFC 2574 SNMP USM MIB
- RFC 2737 Entity MIB (version 2)
- RFC 3414 SNMP-User based-SM MIB
- RFC 3415 SNMP-View based-ACM MIB
- LLDP-EXT-DOT1-MIB
- LLDP-EXT-DOT3-MIB
- LLDP-MIB

Network Management

- RFC 2580 Conformance Statements for SMIv2
- RFC 3164 BSD syslog Protocol

QoS/CoS

- IEEE 802.1p (CoS)
- RFC 2475 DiffServ Architecture
- RFC 2597 DiffServ Assured Forwarding (AF)
- RFC 3247 Supplemental Information for the New Definition of the EF PHB (Expedited Forwarding Per-Hop Behavior)
- RFC 3260 New Terminology and Clarifications for DiffServ

OSPF

- RFC 1587 OSPF NSSA
- RFC 2328 OSPFv2
- RFC 3101 OSPF NSSA
- RFC 3137 OSPF Stub Router Advertisement
- RFC 3623 Graceful OSPF Restart
- RFC 4577 OSPF as the Provider/Customer Edge Protocol for BGP/MPLS IP Virtual Private Networks (VPNs)
- RFC 4811 OSPF Out-of-Band LSDB
- Resynchronization
- RFC 4812 OSPF Restart Signaling
- RFC 4813 OSPF Link-Local Signaling

Security

- RFC 1321 The MD5 Message-Digest Algorithm
- RFC 2818 HTTP Over TLS
- RFC 6192 Partial Support-Protecting the router control plane
- ACLs SSHv2

Summary of Changes

| Date | Version History | Action | Description of Change |
|-------------|-----------------|---------|--|
| 06-Mar-2023 | Version 22 | Changed | Overview and Standard Features sections were updated. |
| 21-Nov-2022 | Version 21 | Changed | Configuration Information section was updated |
| 15-Aug-2022 | Version 20 | Changed | Overview section was updated. |
| 07-Feb-2022 | Version 19 | Changed | Standard Features and Configuration Information sections were updated. New SKUs added in Configuration Information section. |
| 06-Jul-2021 | Version 18 | Changed | SKUs added in Related Options section. |
| 12-Oct-2020 | Version 17 | Changed | Related Options section was updated. MD |
| 05-Oct-2020 | Version 16 | Changed | Configuration Information section was updated. |
| 10-Aug-2020 | Version 15 | Changed | Configuration Information section was updated. |
| 06-Jul-2020 | Version 14 | Changed | Configuration Information section was updated. |
| 04-May-2020 | Version 13 | Changed | Configuration Information and Related Options sections were updated. |
| 06-Apr-2020 | Version 12 | Changed | Configuration Information section was updated. |
| 18-Nov-2019 | Version 10 | Changed | Configuration Information section was updated. New SKUS were added. |
| 03-Sep-2019 | Version 9 | Changed | Configuration Information and Additional Options sections were updated. Obsolete SKUs were removed. New SKUs were added. |
| 13-May-2019 | Version 8 | Changed | Added JQ075A,and,JQ077A, Multiple SKUs were added in Related Options Overview, Standard Features and Technical specifications sections were updated |
| 02-Apr-2019 | Version 7 | Changed | Configuration was updated. Compatibility rules were updated. |
| 18-Feb-2019 | Version 6 | Changed | Accessories updated |
| 03-Dec-2018 | Version 5 | Changed | Configuration and Technical Specifications updated. |
| 01-Oct-2018 | Version 4 | Changed | HPE Recommended Options section removed |
| 04-Sep-2018 | Version 3 | Changed | Technical Specifications and Configuration sections were updated. |
| 09-Aug-2018 | Version 2 | Changed | Technical Specifications section was updated. |
| 06-Aug-2018 | Version 1 | New | New QuickSpecs |

Copyright

Make the right purchase decision. Contact our presales specialists.

| Chat now (s | ales) |
|-------------|--------|
| Call now | |
| Get | update |

© Copyright 2023 Hewlett Packard Enterprise Development L.P. The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

sFlow is a registered trademark of InMon Corp. All other third-party trademark(s) is/are property of their respective owner(s).

Hewlett Packard Enterprise

To learn more, visit: http://www.hpe/networking

a00047323enw - 16266 - Worldwide - V22 - 06-March-2023