



## QDA-A2AR

Supported Drives	2 x 2.5" SATA 6Gbps HDD/SSD (up to 9.5 mm in height)
------------------	--

Host Interface	SATA 6Gbps
----------------	------------

Supported Operating Systems	1. QTS 4.4.1 (or later) 2. Windows: Windows 7, 8.1, 10, Windows Server 2012 R2 3. Ubuntu
-----------------------------	--


Dimension	138.2 × 101.6 × 25.9 mm
-----------	-------------------------

Weight	0.15 kg
--------	---------

RAID Support	RAID 0, 1
--------------	-----------

Note	<p>The connected drive may not reach its optimal performance due to protocol translation and some overhead.</p> <p>All the drive data will be cleared upon drive initialization or RAID mode switching with the QDA-A2AR. Ensure that all data is backed up beforehand.</p> <p>Window and Linux PC supports all four modes mentioned above. QTS does not support Individual mode.</p> <p>It is recommended that only drives with identical model numbers and capacities are used to create a RAID 0/1 group because the total storage space will be equal to the size of the smallest drive.</p> <p>The SATA controller of the PC must support port multipliers to recognize two drives in the Individual mode configuration. Consult your system provider and install the latest drivers for your SATA controller.</p> <p>Installing a QNAP disk adapter in another QNAP disk adapter is not supported. (e.g. QDA-A2MAR cannot be installed in the QDA-A2AR.)</p> <p>TR-002/TR-004 RAID expansion enclosures do not support QDA-A2AR/QDA-A2MAR.</p> <p>QTS identifies the drives in a QDA-A2AR as a single volume. Installing two drives with a RAID 1 configuration for QDA-A2AR is required to use Qtier. If a QDA-A2AR drive fails and needs replaced: you must disable Qtier to make the QDA-A2AR drive data move to the NAS-based storage pool, and then replace the failed QDA-A2AR drive.</p>
------	---

## Architecture Diagram

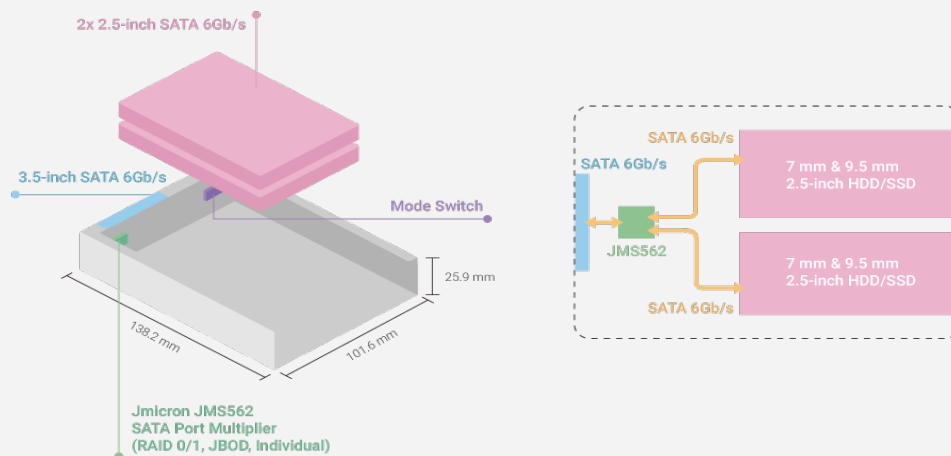

Note: Use only QNAP memory modules to maintain system performance and stability. For NAS devices with more than one memory slot, use QNAP modules with identical specifications.

Warning: Using unsupported modules may degrade performance, cause errors, or prevent the operating system from starting.

\* Sound Level Test

Environment: Refer to ISO 7779; Maximum HDD loaded; Bystander Position; Average data from 1 meter in front of operating NAS.

Product images are for illustrative purposes only and may differ from the actual product. Due to differences in monitors, colors of products may also appear different to those shown on the site.

Designs and specifications are subject to change without notice.